

ACTION: (Continued) If you are requesting the 6700SJ1 software upgrade via e-mail you will be required to have two USB Drives available. One for the WORK JAM software upgrade and one for the INSTRUMENT JAM software upgrade. The software will be sent in two separate e-mails. A third e-mail will then be sent containing the Jupiter 1 Software Installation instructions. If the software upgrade for the 6700SJ1 is sent to you on USB Flash Drives, the Software Instruction document will be printed out and added to the package. Follow the instructions in this Service Bulletin to replace the Obsolete Module.

CONTACT: Harsco Rail Service Department
Columbia, SC Facility
(803) 822-7546

Harsco Rail Service Department
Ludington, MI Facility
(231) 843-7413

Safety Information



- **FOLLOW APPLICABLE RAILROAD LOCKOUT - TAGOUT PROCEDURES AND MACHINE ENERGY CONTROL PROCEDURE TO DISABLE ENERGY SOURCES WHEN PERFORMING MAINTENANCE, MAKING ADJUSTMENTS OR REPAIRS TO THE MACHINE. FAILURE TO HEED THIS WARNING COULD RESULT IN SEVERE BODILY INJURY.**

Module Replacement

1. The replacement module will be shipped with specific software installation instructions that may differ depending on the machine serial number that was provided when the replacement module was ordered. Be certain to follow the software installation instructions exactly.
2. See Figure 1. The 6700SJ1 will require two software upgrade files, one for the WORK JAM and one for the INSTRUMENT JAM. These will be sent to you in two separate e-mails. Figure 1 shows the location of the JAM Boxes on the Left Hand Panel.
3. Verify and log all machine parameters before beginning the software download. Note: For 6700SJ1, refer to the 6700SJ1 Software Installation Instructions.
4. Install the new software before removing the old modules that need to be replaced. Download the module software to the old modules. Turn the Jupiter computer OFF. Note: For 6700SJ1, refer to the 6700SJ1 Software Installation Instructions.
5. Make sure that the machine's engine is shut down, parking brakes are applied and battery master switch is OFF.
6. On the module that is going to be replaced, make sure that all of the cables connected to the module are marked or that you mark them to ensure they are reconnected to the correct connector on the replacement module.


Module Replacement

7. Remove the cables. Inspect the cables and connector ends for any damage. Replace cables if necessary.
8. Remove the old module and install the replacement module in its place using the existing hardware. Reconnect the cables to the correct connectors on the replacement module.
9. Turn the battery master switch on. Turn the Jupiter computer ON. Download the module software to the new modules. Turn the Jupiter computer OFF and then back ON again.
10. Verify that none of the machine parameters have changed. If any parameters have changed, correct them using the parameter information that was logged.

Note: Restart the Jupiter computer if any module downloads occur on the Jupiter network.

11. Start the machine's engine. Turn Jupiter ON. Check the function of the entire Jupiter Control System. Make sure the replacement module is communicating with the Jupiter Network and all functions controlled through the module are functioning properly.
12. If any problems are encountered, contact the Harsco Rail Service Department.

FIGURE 1
6700SJI TAMPER LEFT HAND PANEL - JAM LOCATIONS

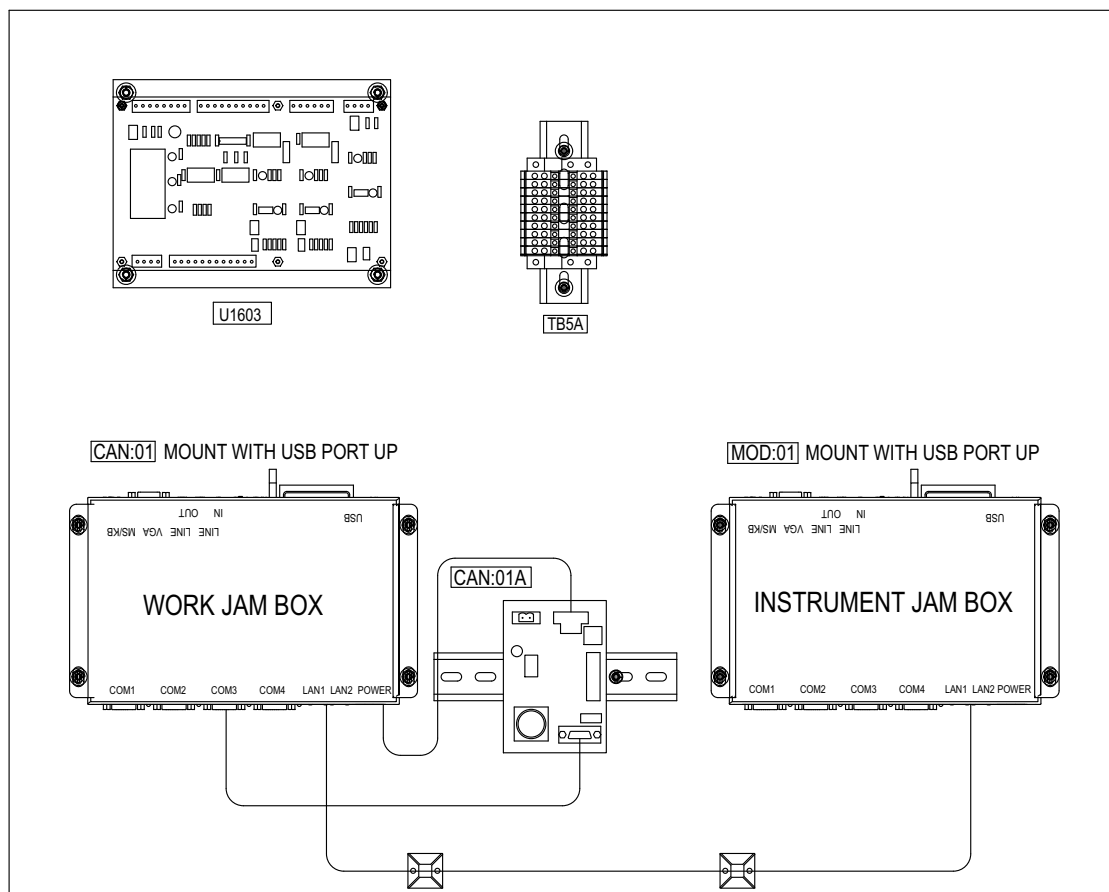

© 2021 HARSCO CORPORATION, ALL RIGHTS RESERVED

306 West 4th Street
Fairmont, MN
56031-1837
Tel: (507) 235-7376
Parts: (800) 800-6410
Fax: (507) 235-7372

2401 Edmund Road, Box 20
Cayce-West Columbia, SC
29171-0020
Tel: (803) 822-7420
Parts: (800) 800-6410
Fax: (803) 822-7403

1200 Conrad Industrial Dr.
Ludington, MI
49431
Tel: (231) 843-3431
Parts: (800) 800-6410
Fax: (231) 843-4830

Printed In USA