

Harsco

www.harscotrack.com

SERVICE BULLETIN MAINTENANCE OF WAY EQUIPMENT

MAINTENANCE OF WAY EQUIPMENT					
DATE:	7-27-2004			BULLETIN NO:	04-00
TITLE:	NUISANCE TRIPPING OF 50 AMP MAIN FUSE OR CIRCUIT BREAKER				
RATING:		DIRECTIVE (Action Is Required)		ALERT (Potential Problem)	
	X	INFORMATION (Action Is Optional)		PRODUCT IMPROVEMI (Enhance Product)	ENT
PRODUCT SI	ERIES / M	ODEL: 6700S Tampe	rs		
SERIAL NO:	All Models 1997 thru 2004 w/ 50 amp Main Fuse or Circuit Breaker				
SUMMARY:	The 50 amp main fuse or circuit breaker may trip periodically, especially in hot weather with the A/C unit operating. This occurs because the trip point of the main fuse or circuit breaker is lowered due to the higher ambient temperatures. While the A/C unit is protected by its own 25 amp fuse, its electrical load is drawn directly through the 50 amp main fuse or circuit breaker.				
OPERATION		•		ped will disconnect the A/C eliminate the nuisance trip	
ACTION:	Follow the instructions in this Service Bulletin applicable to your model of A/C unit to disconnect it from the 50 amp main fuse or circuit breaker and to reconnect it to a different power location.				
CONTACT:	If you have any questions or if we can be of any service, please contact				

SAFETY INFORMATION



n FOLLOW APPLICABLE RAILROAD LOCKOUT - TAGOUT PROCEDURE TO REMOVE ALL ENERGY SOURCES FROM MACHINE. FAILURE TO COMPLY COULD RESULT IN SEVERE BODILY INJURY.

ROOF MOUNTED A/C UNITS:

- Disconnect the A/C wire #324A from the 50 amp main fuse block or circuit breaker located on the right side of the frame, inside of the engine shroud.
- 2. Re-label the wire as #301A.
- Connect wire #301A to the load side of 24 volt battery disconnect switch #TGS301. 3.

WALL MOUNTED A/C UNITS:

- 1. Disconnect the A/C wire #324A between the 25 amp fuse block #FU626 and terminal block #TB1:2 in the right hand panel.
- Run a 10 gauge wire from the load side of the 24 volt battery disconnect switch #TGS301 2. into the right hand panel.
- 3. Label the wire as #301A.
- Connect wire #301A to the 25 amp fuse block #FU626.

ALL UNITS

After the A/C unit wiring modifications have been made, start the engine and check the A/C unit for proper operation.

© 2004 HARSCO TRACK TECHNOLOGIES, HARSCO CORPORATION

2401 Edmund Road, Box 20

415 North Main Street Fairmont, MN 56031-1837 Tel: (507) 235-3361

Fax: (507) 235-7370

Cayce-West Columbia, SC 29171-0020 Tel: (803) 822-9160

Fax: (803) 822-7471

200 South Jackson Road Ludington, MI 49431 Tel: (231) 843-3431

Fax: (231) 843-1644

Printed In U.S.A.