


OPERATOR'S SERVICE AND PARTS MANUAL

HR1500 SERIES C1 UNIVERSAL HY-RAIL® GUIDE WHEEL EQUIPMENT HYDRAULICALLY OPERATED

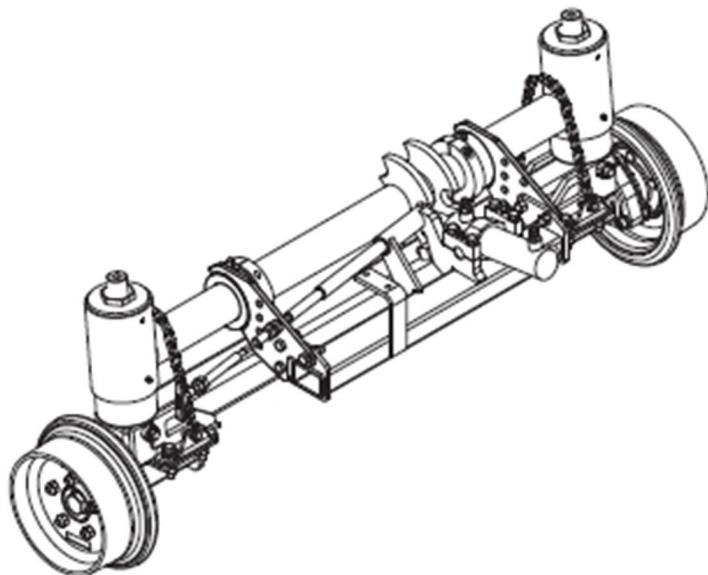

ISSUED 07 - 2012
REVISED 11 - 2025

EC621874

BULLETIN
REVISION

1587
E



- This manual contains vital information for the safe use and efficient operation of the vehicle equipped with Hy-Rail® Guide Wheel Equipment. Carefully read this operator's manual before using the vehicle. Failure to adhere to the instructions could result in bodily injury and/or property damage.

HY-RAIL® is a registered trademark of Harsco Rail, LLC.

When this manual is received, record the guide wheel unit serial numbers in the spaces provided in the General Information and Parts Sections for future reference, in case the serial number tags become unreadable. A Manual must remain with the vehicle. Additional or replacement manuals may be obtained by calling or writing Harsco Rail, LLC.

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. Harsco Rail, LLC, reserves the right to make changes at any time without notice.

www.harscorail.com

FACILITY LOCATIONS

HARSCO RAIL, LLC

306 West Fourth Street
Fairmont, MN
56031-1837
Tel: +1 (507) 235-7376
Parts: +1 (800) 800-6410
Fax: +1 (507) 235-7372

HARSCO RAIL, LLC

2401 Edmund Road, Box 20
Cayce-West Columbia, SC
29171-0020
Tel: +1 (803) 822-7420
Parts: +1 (800) 800-6410
Fax: +1 (803) 822-7403

HARSCO RAIL, LLC

200 South Jackson Road
Ludington, MI
49431
Tel: +1 (231) 843-3431
Parts: +1 (800) 800-6410
Fax: +1 (231) 843-1644

HARSCO RAIL

GLOBAL HEADQUARTERS
3440 Toringdon Way
Suite 107, Building 3
Charlotte, NC 28277
56031-1837
Tel: +1 (980) 960-2624

HARSCO RAIL, LTDA

Av. Marechal Câmara
160 / 1615, Centro
Rio de Janeiro RJ 20020-080
Brazil
Tel: +55 21 2510-5164 / -5151

HARSCO RAIL EUROPE, GmbH

Luetticher Str. 130
40547 Duesseldorf, Germany
Tel: +49 (0) 211 60116 0

HARSCO RAIL CHINA

Room C1201 Tower 2,
No.36 BeiSanHuan Dong Lu,
DongCheng District,
Beijing 100013, P.R. China
Phone: +87 10-6590-6399

HARSCO TRACK MACHINES AND SERVICES PRIVATE

Limited India
2nd Floor, Building Alpha,
Bengal Intelligent Park Block EP & GP,
Sector V, Salt Lake, Kolkata
700091 West Bengal, India
Phone: +91 33 2357 5651

HARSCO RAIL MALAYSIA

3-5, Block A, Jaya One
72A Jalan Profesor Diraja Ungku Aziz,
46200 Petaling Jaya,
Selangor, Malaysia

HARSCO RAIL LTD

Unit 1 Chewton Street
Eastwood, Nottingham, NG16 3HB
United Kingdom
Tel: +44 (0) 1773 539480

HARSCO RAIL PTY LTD

157 Granite St
Geebung, Queensland 4034
Australia
Tel: 61 7 3205 6500
Fax: 61 7 3205 7369

TABLE OF CONTENTS

| | | |
|------------------------------|----------|----|
| SAFETY / GENERAL INFORMATION | SECTION | 1 |
| OPERATION | SECTION | 2 |
| ADJUSTMENTS | SECTION | 3 |
| MAINTENANCE | SECTION | 4 |
| TROUBLESHOOTING | SECTION | 5 |
| PARTS | SECTION | 6 |
| TORQUE / CONVERSION TABLES | APPENDIX | A |
| REVISION RECORD | APPENDIX | RR |

Notes:

SECTION 1 - GENERAL INFORMATION
TABLE OF CONTENTS

| | | |
|-------|---------------------------|-------|
| 1.1 | Safety Information | 1 - 2 |
| 1.1.1 | Hazard Seriousness | 1 - 2 |
| 1.2 | Description | 1 - 5 |
| 1.3 | Vehicle Orientation | 1 - 5 |
| 1.4 | Serial Numbers..... | 1 - 6 |
| 1.5 | Specifications | 1 - 7 |
| 1.5.1 | Vehicle | 1 - 7 |
| 1.5.2 | Guide Wheel Units..... | 1 - 7 |

1.1 Safety Information

1



SAFETY IS A CRITICAL FACTOR IN THE DESIGN OF HARSCO RAIL EQUIPMENT. THE BEST SAFETY PROGRAM STARTS WITH A SAFETY CONSCIOUS OPERATOR. THE SAFETY INFORMATION HIGHLIGHTED IN THIS BULLETIN DESCRIBES SAFE OPERATING PRACTICES FOR THE BENEFIT OF THE WORKERS WHO WILL USE OUR EQUIPMENT IN THEIR DAILY JOBS.

1.1.1 Hazard Seriousness

Signal Words: DANGER, WARNING and CAUTION are used to identify levels of hazard seriousness.



DANGER - Immediate hazards which WILL result in severe bodily injury or death.



WARNING - Hazards or unsafe practices which COULD result in severe bodily injury or death.



CAUTION - Hazards or unsafe practices which COULD result in minor bodily injury and / or product or property damage.

1.1 Safety Information



- Apply the vehicle parking brake and stop the engine when performing maintenance, making adjustments, working under the vehicle or guide wheel equipment or whenever unintended movement of the vehicle could occur, unless otherwise instructed in this manual.
- Make sure all persons are clear of the vehicle before performing any operating functions.
- Keep all parts of the body and loose clothing clear of all moving parts of the vehicle or guide wheel equipment.
- Understand equipment operation and be aware of all pinch points before operating or making adjustments to the guide wheel equipment.
- If a derailment should occur while the vehicle is operating in electrified 3rd-rail territory, the vehicle or guide wheel equipment might be in electrical contact with the electrified rail. Do not attempt to exit from the vehicle until the electrical power to the 3rd-rail has been turned off.
- If the Hy-Rail® equipped vehicle is involved in a derailment or highway accident, it must be inspected and necessary repairs or adjustments made to the vehicle and / or Hy-Rail® equipment prior to its next operation on the railroad track.
- Do not exceed 45 mph when operating vehicle on track. Railroad rules governing speeds should be observed at all times. Reduce speed when propelling the vehicle through switches, crossings, branch lines and any special track works. Operating the vehicle at unsafe speeds could result in derailment of vehicle.
- Check and correct guide wheel equipment alignment promptly if misalignment is indicated.
- All hoses and fittings for this rail pilot unit must comply with SAE Standard J1273 - Recommended Practices For Hydraulic Hose Assemblies.

1.1 Safety Information

1



- At maximum loaded gross vehicle weight on track (including driver, passengers, equipment, tools, payload, etc.) do not exceed any of the following:
 - Vehicle's G.V.W.R. (Gross Vehicle Weight Rating)
 - Vehicle's front G.A.W.R. (Gross Axle Weight Rating) or the sum of the front unit guide wheel rated load capacity plus (+) vehicle's front tire/wheel rated load capacity, whichever is lower.
 - Vehicle's rear G.A.W.R. (Gross Axle Weight Rating) or the sum of the rear guide wheel rated load capacity plus (+) vehicle's rear tire/wheel rated load capacity, whichever is lower.
 - Components rated load capacity:
 - A. Tire manufacturer's rated load capacity.
 - B. Vehicle's wheel rated load capacity.
 - C. Guide wheel unit rated load capacity:
Steel Tread Guide Wheels:
1,500 lbs (680 kg) Maximum Per Guide Wheel
Rubber Tread Guide Wheels:
700 lbs (318 kg) Maximum Per Guide Wheel

Failure to heed these warnings could result in severe bodily injury.



- Observe and follow all railroad safety rules and regulations.
- Know the positions and functions of all controls before attempting to operate the vehicle.
- This guide wheel equipment is designed with your safety in mind. Never disconnect and/or attempt to override safety features.

Failure to heed these precautions could result in bodily injury and/or property damage.

Note: To help ensure safe operation of this equipment, keep all safety decals clean and legible. Replace safety decals when necessary with new decals, listed in the Parts Section of this manual.

1.2 Description

The HR1500 Series C1 HY-RAIL® guide wheel equipment can be applied to various standard utility vehicles, cab chassis and pickup trucks. The vehicle's G.V.W.R. (gross vehicle weight rating) and/or G.A.W.R. (gross axle weight rating) must comply with specifications recommended by Harsco Rail. For information regarding special applications, contact Harsco Rail, LLC.

The HY-RAIL® guide wheel units are lowered and raised hydraulically. Hydraulic power may be supplied from the vehicle system or from an optional power pack. The guide wheels are locked in both the highway and rail positions with manual locks. The guide wheel units are mounted onto the vehicle frame. Load bearing guide wheel assemblies guide the vehicle during on track operation. The HY-RAIL® equipped vehicle uses the vehicle propulsion and braking systems for propelling and braking on the track.

A steering lock assembly is manually actuated during on track operation. The steering lock holds the vehicle's steering wheel in place to ensure alignment of the vehicle's front wheels with the rail.

1.3 Vehicle Orientation

Front - rear and left - right are determined from the vehicle driver's seat.

1.4 Serial Numbers

1

When this bulletin is received, complete the following record from the serial number tags on both the front and rear guide wheel units. Always provide these factory serial numbers when calling or writing about the units. The serial number tags are located on the mounting plates on both units.

FIGURE 1-1
FRONT GUIDE WHEEL UNIT SERIAL NUMBER


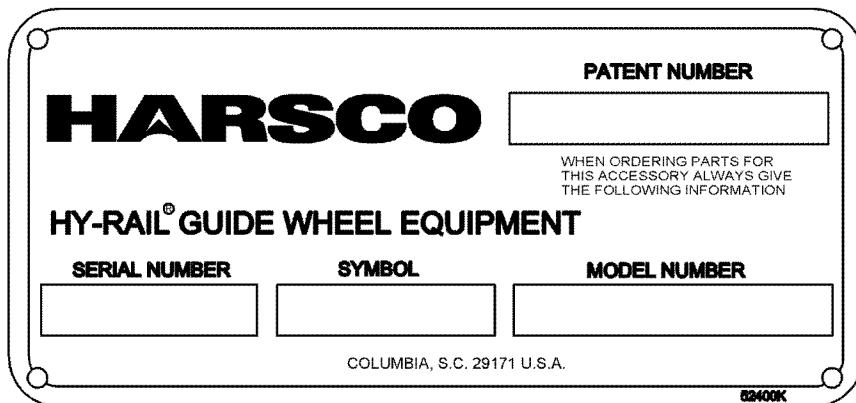


FIGURE 1-2
REAR GUIDE WHEEL UNIT SERIAL NUMBER

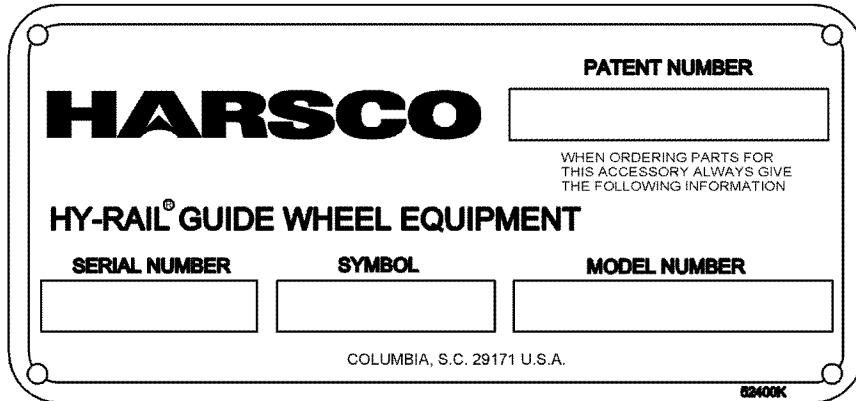

1.5 Specifications

1.5.1 Vehicle

The vehicle's G.V.W.R. (gross vehicle weight rating) and/or G.A.W.R. (gross axle weight rating) must comply with specifications recommended by Harsco Rail. For information regarding special applications, contact Harsco Rail, LLC.

This Hy-Rail® Gear is applicable to Ford F250/F350, Ford Ranger, Chevrolet Silverado 2500HD/3500HD, and other vehicles under 14,000 lb G.V.W.R. Please contact Harsco Rail, LLC for additional information.

1.5.2 Guide Wheel Unit

Track Gauge 56-1/2 in (1435 mm)

Guide Wheels - All Tread Types - Flange Diameter 12-1/4 in (311 mm)
- Tread Diameter 10 in (254 mm)

Weight - Front Unit 305 lbs (138 kg)
- Rear Unit 305 lbs (138 kg)

Recommended Load Per Guide Wheel - All Tread Types 500 ± 25 lbs (227 ± 11 kg)

Maximum Load Per Guide Wheel:

Steel Tread Guide Wheels 1,500 lbs (680 kg)
Rubber Tread Guide Wheels 700 lbs (318 kg)

Notes:

1

**SECTION 2 - OPERATION
TABLE OF CONTENTS**

| | | |
|-------|---|--------|
| 2.1 | Speedometer | 2 - 3 |
| 2.2 | Preparing Vehicle For Operation | 2 - 3 |
| 2.3 | Preparing Guide Wheel Equipment For Operation. | 2 - 4 |
| 2.4 | Misalignment Indicators | 2 - 4 |
| 2.5 | Placing Vehicle On Track | 2 - 6 |
| 2.5.1 | Lowering Rear Guide Wheels | 2 - 6 |
| 2.5.2 | Lowering Front Guide Wheels | 2 - 8 |
| 2.5.3 | Steering Lock. | 2 - 9 |
| 2.5.4 | Rail Sweeps. | 2 - 9 |
| 2.6 | Guide Wheel Load On Track | 2 - 10 |
| 2.6.1 | Checking Guide Wheel Load. | 2 - 10 |
| 2.7 | Propelling On Track | 2 - 12 |
| 2.8 | Braking On Track | 2 - 13 |
| 2.9 | Removing Vehicle From Track | 2 - 13 |
| 2.9.1 | Raising Front Guide Wheels | 2 - 14 |
| 2.9.2 | Raising Rear Guide Wheels | 2 - 15 |
| 2.9.3 | Steering Lock. | 2 - 16 |
| 2.9.4 | Hand Pump Operation. | 2 - 17 |
| 2.10 | Highway Operation. | 2 - 17 |
| 2.11 | Towing Trailer / Equipment With Vehicle On Track. | 2 - 18 |
| 2.12 | Towing Trailer / Equipment With Vehicle On Road. | 2 - 21 |
| 2.13 | Towing Disabled Vehicle On Track. | 2 - 24 |
| 2.14 | Towing Disabled Vehicle On Road | 2 - 27 |

Notes:

2

2.1 Speedometer



- When wheel/tire modifications are applied, check and change speedometer drive ratio if necessary. The speedometer drive ratio will influence the operation of the vehicle's anti-lock brake systems, electronically controlled transmission shift timing and speedometer display of the true vehicle speed. Failure to maintain correct speedometer drive ratio could result in severe bodily injury.

2

Some vehicles require special larger diameter wheels and/or wheel spacers to properly space the vehicle tires for on track operation. Use of these wheel modifications may effect the speedometer drive ratio calibration. The speedometer drive ratio will influence the operation of the vehicle's anti-lock brake systems, electronically controlled transmission shift timing and speedometer display of the true vehicle speed. The vehicle speedometer must be re-calibrated when wheel modifications are applied to the vehicle. See the vehicle manufacturer or dealer for speedometer calibration information.

2.2 Preparing Vehicle For Operation

Be sure vehicle is in operating condition by checking the following:

- Engine oil level.
- Radiator fluid level.
- Fuel tank level.
- Hydraulic reservoir level.
- Brakes work properly.
- Parking brake works properly.
- Head, brake and signal lights work properly.
- Tires properly inflated: Per the Wheel Modification Application Specifications (ranges from 80-95 PSI depending on application).
If no wheel modification, inflate to Vehicle Tire maximum recommended PSI.
- Vehicle wheels: Lug nuts / bolts tightened to the proper torque, inspect vehicle wheels, lug bolts and lug nuts for wear or damage. For vehicle wheel, lug bolt and lug nut inspection information refer to the AMERICAN TRUCKING ASSOCIATION - TECHNOLOGY & MAINTENANCE COUNCIL - USER'S GUIDE TO WHEELS AND RIMS. To obtain this guide, contact:

AMERICAN TRUCKING ASSOCIATION
TECHNOLOGY & MAINTENANCE COUNCIL
950 N Glebe Rd., Suite 210
Arlington, VA 22203-4181
Phone: (703) 838-1763
Fax: (703) 838-1701
tmc@trucking.org

- Any other normal maintenance requirements.

2.3 Preparing Guide Wheel Equipment For Operation

Be sure the guide wheel equipment is in operating condition by checking the following:

- a. Overall for damaged or worn parts.
- b. Proper alignment and guide wheel loads.
- c. Proper lubrication at recommended operating hourly intervals.
- d. Hydraulic hoses and fittings damage, wear or leaks

2

2.4 Misalignment Indicators



- Before operating a vehicle with newly installed guide wheel equipment on track, verify that guide wheel equipment alignment procedure has been completed. Check and correct alignment promptly if misalignment is indicated. Misalignment of guide wheel equipment could result in derailment of vehicle and severe bodily injury.

The following conditions may indicate that minor adjustments to the guide wheel equipment alignment are necessary. If any of these conditions occur during operation, perform the Track Test, see Adjustment Section - Vehicle Track Test and/or complete the Alignment Procedure, see Adjustment Section - Guide Wheel Alignment Procedure.

1. Excessive flange or tread wear on any of the rail guide wheels.
2. Vehicle pulls noticeably to the left or right during track operation.
3. Vibration felt throughout the vehicle at various speeds during track operation.

2.5 Placing Vehicle on Track



- Place vehicle automatic transmission in "park" or manual transmission in "neutral". Apply the parking brake.
- Understand equipment operation and be aware of all pinch points before operating or making adjustments to guide wheel equipment.
- Before propelling the vehicle on the track, make sure:
 - Front and rear guide wheels are lowered and locked in the rail position and secured with the lock pins.
 - All guide wheel flanges are engaged on the inside of the rail.
 - The front wheels are pointed straight ahead and the steering wheel lock is engaged.

2

Failure to heed these warnings could result in derailment of the vehicle and severe bodily injury.



- Observe and follow all railroad safety rules and regulations.
- If the vehicle is equipped with a strobe light (beacon) and railroad rules and regulations require its use, the strobe light (beacon) must be illuminated when placing the vehicle on track and when operating the vehicle on track.

Failure to heed these precautions could result in bodily injury and/or property damage.

2.5 Placing Vehicle on Track

1. Ensure that highway vehicles are not approaching the grade crossing while placing the vehicle on track. Flag the crossing per railroad rules and regulations to ensure safety.
2. At a road crossing, drive the vehicle about 25 feet (7.6 m) past the track. Back the vehicle onto the track so that the rear guide wheels are centered on rails. It may be necessary to move the vehicle back and forth several times to get the wheels centered on the rail properly.
3. Place automatic transmission in "PARK" or manual transmission in "NEUTRAL". Apply the parking brake.
4. Lower and lock the rear guide wheels first. The rear guide wheels should be lowered first so the vehicle front tires can be maneuvered to align the front guide wheels with the rails.

2.5.1 Lowering Rear Guide Wheels - See Figure 2-1


The location of the push / pull cable T-handle (1) and the control box (2) will vary depending on the application.

1. With the rear guide wheels centered over the rails, press the UP button on the control box (2) momentarily to relieve pressure from the lock pin. To disengage the lock, rotate T-handle (1), pull out and then rotate the handle to lock it in the disengaged position.
2. Press the DOWN button on control box (2) to activate the hydraulic pump and lower the guide wheels to the rail. As the guide wheels lower, ensure that the flanges of the guide wheels are on the gauge side (inside) of the rails.
3. Continue to hold the DOWN button on control box (2) until the guide wheels are fully lowered to the "rail" position. Release the DOWN button. Rotate the T-handle to release the cable lock and then push T-handle (1) in to engage the lock. When the T-handle is fully in and the lock pin is engaged, rotate the T-handle to engage the cable lock.
4. After the rear guide wheels are locked in the "rail" position, move the vehicle so that the front guide wheels are centered on the rail.

2.5 Placing Vehicle on Track

2.5.1 Lowering Rear Guide Wheels

FIGURE 2-1
LOWER REAR GUIDE WHEELS

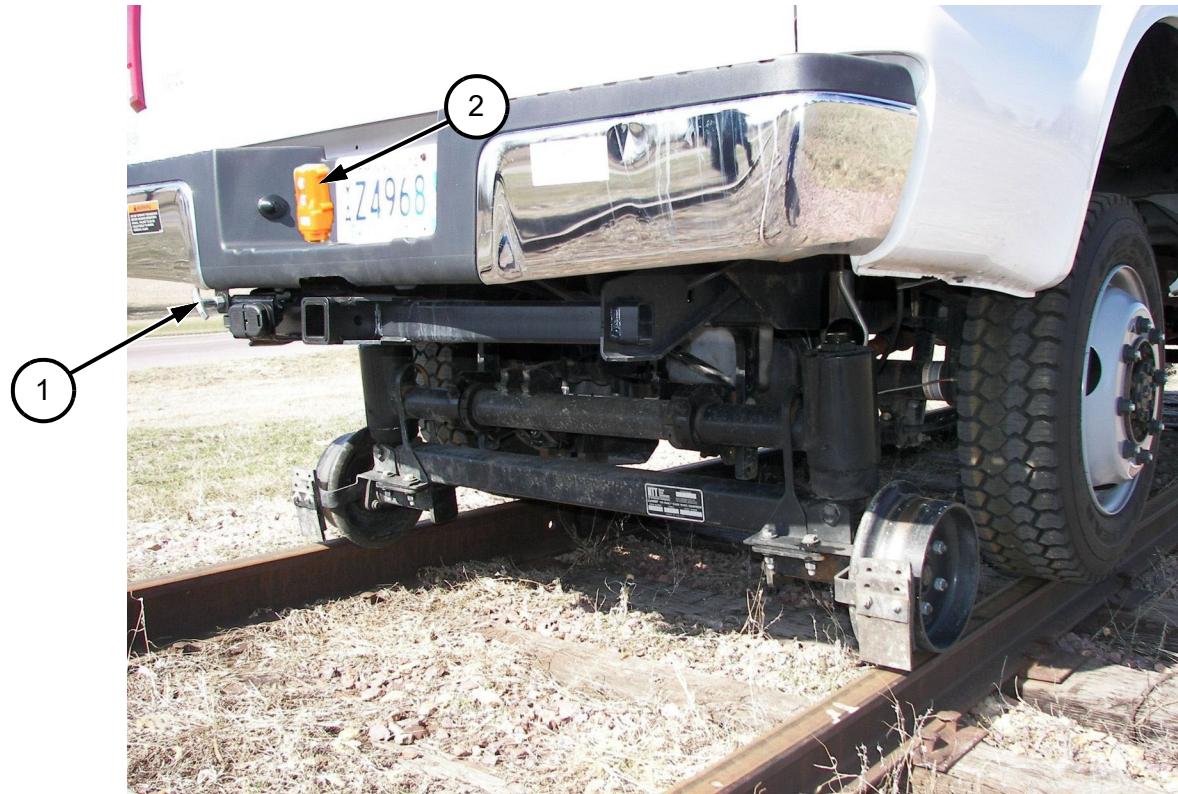

2.5 Placing Vehicle on Track

2.5.2 Lowering Front Guide Wheels - See Figure 2-2

The location of the push / pull cable T-handle (1) and the control box (2) will vary depending on the application.

2

1. With the front guide wheels centered over the rails, press the UP button on the control box (2) momentarily to relieve pressure from the lock pin. To disengage the lock, rotate T-handle (1), pull out and then rotate the T-handle to lock it in the disengaged position.
2. Press the DOWN button on control box (2) to activate the hydraulic pump and lower the guide wheels to the rail. As the guide wheels lower, ensure that the flanges of the guide wheels are on the gauge side (inside) of the rails.
3. Continue to hold the DOWN button on control box (2) until the guide wheels are fully lowered to the "rail" position. Release the DOWN button. Rotate the T-handle to release the cable lock and then push T-handle (1) in to engage the lock. When the T-handle is fully in and the lock pin is engaged, rotate the T-handle to engage the cable lock.

FIGURE 2-2
LOWERING FRONT GUIDE WHEELS



2.5 Placing Vehicle on Track

2.5.3 Steering Lock

1. See Figures 2-3, 2-4, 2-5 and 2-6. Set the vehicle front wheels straight ahead and secure the steering wheel in that position by engaging the steering lock on the steering column. Steering locks may vary from vehicle to vehicle but will operate similarly.

Note: Do not place your hands or any pressure on the steering wheel after the steering lock is engaged.

2

FIGURE 2-3
VELCRO STEERING LOCK OFF

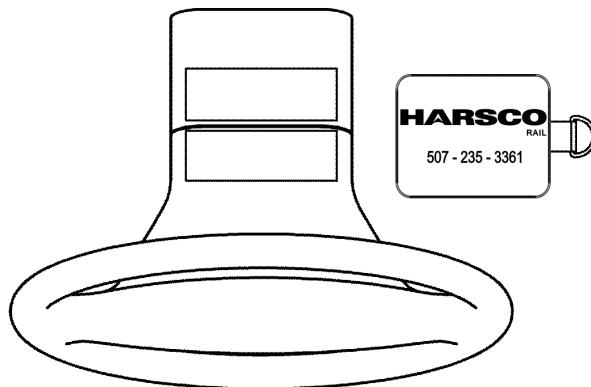


FIGURE 2-4
VELCRO STEERING LOCK ON



FIGURE 2-5
DEAD BOLT TYPE
STEERING LOCK DISENGAGED


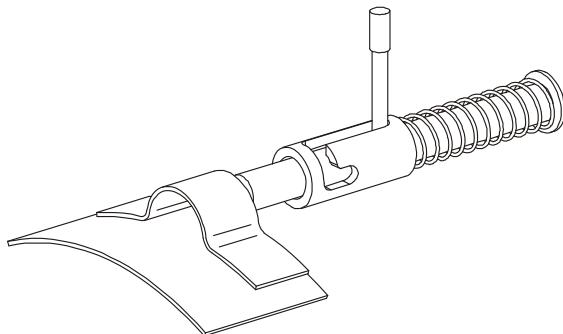


FIGURE 2-6
DEAD BOLT TYPE
STEERING LOCK ENGAGED

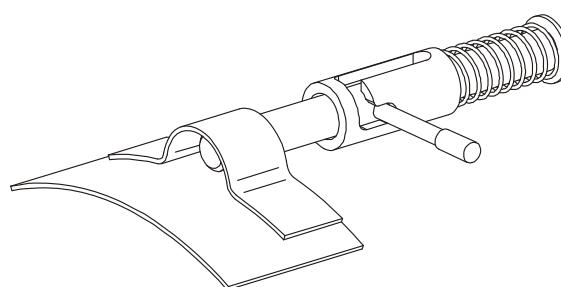

2.5.4 Rail Sweeps

1. The guide wheel units may be equipped with rail sweeps. The rail sweeps are positioned ahead of the front guide wheels and behind the rear guide wheels. The rail sweeps clear the rail of debris, lengthening the service life of the guide wheels.
2. The front and rear rail sweeps are attached to the axle and will lower when the guide wheels are lowered to the rail and will raise when the guide wheels are raised.

2.6 Guide Wheel Load on Track



2

- Improper loading of guide wheel equipped vehicle can cause derailment of vehicle.
- Apply vehicle parking brake and stop vehicle engine before checking guide wheel load.
- Always check the guide wheel load before operating the vehicle on track. Never operate the vehicle on track if load exceeds the maximum rated load on the front and/or rear guide wheel units. The maximum load on the front or rear guide wheel unit is:
 - Steel Tread Guide Wheels:
1,500 lbs (680 kg) Maximum Per Guide Wheel
 - Rubber Tread Guide Wheels:
700 lbs (318 kg) Maximum Per Guide Wheel
- Do not use any other jack than the Harsco Rail # 3422565 Wheel Weighing Jack to check the guide wheel load. Use of any other jack will result in incorrect guide wheel load information.
- Misuse of the wheel weighing jack may cause gauge to explode. Read ANSI B40.1 and the apparatus installation / operating instructions before use.
- Do not use the wheel weighing jack to lift the vehicle. Excessive weight may cause the jack to fail.

Failure to heed these warnings could result in derailment of vehicle and/or severe bodily injury.

2.6.1 Checking Guide Wheel Load - See Figure 2-7

1. Apply the parking brake. Lower and lock the guide wheels in the rail position. Stop the vehicle's engine.
2. The guide wheel load can be checked using the Harsco Rail # 3422565 Wheel Weighing Jack. Do not use any other jack to check the guide wheel load. The use of an other jack will result in incorrect guide wheel load information.
3. Place the jack under the square tube as close to the guide wheel as possible. Jack the guide wheel up until the guide wheel just clears the top of the rail. Note the gauge reading. The gauge reading indicates the pounds of load on the guide wheel.

2.6 Guide Wheel Load on Track

2.6.1 Checking Guide Wheel Load - See Figure 2-7

Note: An easy way to tell when the guide wheel just clears the top of rail is to jack the wheel up approximately 1/4" (6.4 mm) above the top of the rail. Place a piece of paper between the rail and the guide wheel. Lower the guide wheel onto the paper. Slowly jack the guide wheel up while applying a steady pulling force on the paper until the paper can be pulled out. Note the gauge reading when the paper can be removed.


2

4. With the vehicle at curb weight, the recommended guide wheel load is 500 lbs \pm 25 lbs (227 kg \pm 11 kg) per guide wheel. The recommended guide wheel load must also be equal on the left and right sides of the front or rear guide wheel unit.
5. The maximum rated load on the front and / or rear guide wheel unit is:
Steel Tread Guide Wheels: 1,500 lbs (680 kg) maximum per guide wheel.
Rubber Tread Guide Wheels: 700 lbs (318 kg) maximum per guide wheel.

The front and / or rear guide wheel unit spring cells are adjustable. See the Adjustments Section - Guide Wheel Load for the adjustment procedure.

6. If the load exceeds the maximum rated load capacity of the front and / or rear guide wheel unit or the maximum rated load capacity of any guide wheel, the load must be redistributed or some of the load removed. Never operate the vehicle on track if the load on the front and / or rear guide wheel unit exceeds the maximum rated load capacity.

FIGURE 2-7
GUIDE WHEEL LOAD

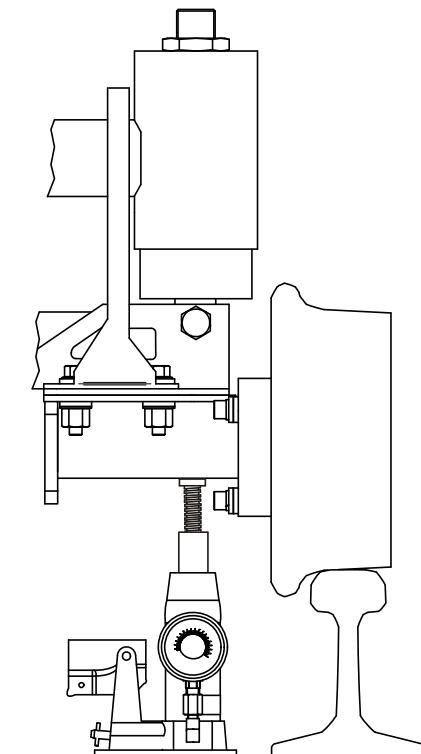

2.7 Propelling on Track



2

- Improper loading of the guide wheel equipped vehicle can cause derailment of vehicle.

- Always check the guide wheel load before operating the vehicle on track. Never operate the vehicle on track if load exceeds the maximum rated load on the front and/or rear guide wheel units. The maximum load on the front or rear guide wheel unit is:

Steel Tread Guide Wheels:

1,500 lbs (680 kg) Maximum Per Guide Wheel

Rubber Tread Guide Wheels:

700 lbs (318 kg) Maximum Per Guide Wheel

Failure to heed these warnings could result in derailment of the vehicle and/or severe bodily injury.



- BEFORE OR WHEN PROPELLING ON TRACK:

- Observe and follow all railroad safety rules and regulations.
- Operator must look all directions for persons or objects on or adjacent to the track.
- Do not accelerate suddenly. Traction is reduced on track, spinning vehicle tires could damage them.
- Do not exceed 45 mph (72 km/h) when operating vehicle on track. Railroad rules governing speeds should be observed at all times. Reduce speed when propelling the vehicle through switches, crossings, branch lines and any special track works. Operating vehicle at unsafe speeds could result in derailment of the vehicle.
- Steering lock must be engaged at all times when operating vehicle on the track.

- If the vehicle is equipped with a strobe light (beacon) and railroad rules and regulations require its use, the strobe light (beacon) must be illuminated when operating the vehicle on track.

Failure to heed these precautions could result in bodily injury and/or property damage.

Vehicles equipped with HR1500 Series C1 HY-RAIL® Guide Wheel Equipment use the vehicle propulsion system for propelling on track. Do not accelerate suddenly. Traction is reduced on the track, and spinning the vehicle tires could damage them.

2.8 Braking on Track



- Persons who operate the vehicle must be familiar with track and weather conditions that may affect stopping distance. Be alert to these conditions and allow adequate stopping distance.
- Be prepared to brake at all highway crossings. This vehicle will not operate track signal circuits, and oncoming vehicles or pedestrians may not yield the right of way.

Failure to heed these precautions could result in bodily injury and/or property damage.

2

Vehicles equipped with HR1500 Series C1 HY-RAIL® Guide Wheel Equipment use the vehicle brake system for braking on track. Stopping distance may be greater on track than on typical road surfaces. Apply the brakes gradually to avoid sliding the tires.

2.9 Removing Vehicle from Track



- Place vehicle automatic transmission in "park" or manual transmission in "neutral". Apply parking brake.
- Understand equipment operation and be aware of all pinch points before operating or making adjustments to the guide wheel equipment.
- Before propelling vehicle off track, make sure:
 - Front and rear guide wheels are raised, locked in the highway position, and secured with the locking pins.
 - Steering wheel lock is disengaged.

Failure to heed these warnings could result in severe bodily injury.



- Observe and follow all railroad safety rules and regulations
- If the vehicle is equipped with a strobe light (beacon) and railroad rules and regulations require its use, the strobe light (beacon) must be illuminated when operating the vehicle on track and when removing vehicle from track.

Failure to heed these precautions could result in bodily injury and/or property damage.

2.9 Removing Vehicle from Track

1. Ensure that highway vehicles are not approaching grade crossing while removing vehicle from track. To ensure safety, flag the crossing to per railroad rules and regulations.
2. Approach a road crossing and stop with the vehicle front wheels on the crossing.
3. Place automatic transmission in "PARK" or manual transmission in "NEUTRAL". Apply the parking brake.
4. Raise the front guide wheels first, then the rear guide wheels.

2

2.9.1 Raising Front Guide Wheels - See Figure 2-8

The location of the push / pull cable T-handle (1) and the control box (2) will vary depending on the application.

1. Press the DOWN button on control box (2) momentarily to relieve pressure from the lock pin. To disengage the lock, rotate T-handle (1), pull out and then rotate the T-handle to lock it in the disengaged position.
2. Press the UP button on the control box (2) to activate the hydraulic pump and raise the guide wheels from the rail.
3. Continue to hold the UP button until the guide wheels are fully raised to the "highway" position. Release the UP button. To engage the lock, rotate T-handle (1), push in and then rotate the T-handle to lock it in the engaged position.

FIGURE 2-8
RAISING FRONT GUIDE WHEELS



2.9 Removing Vehicle from Track

2.9.2 Raising Rear Guide Wheels - See Figure 2-9

The location of the push / pull cable T-handle (1) and the control box (2) will vary depending on the application.

1. Press the DOWN button on control box (2) momentarily to relieve pressure from the lock pin. To disengage the lock, rotate T-handle (1), pull out and then rotate the T-handle to lock it in the disengaged position.
2. Press the UP button on the control box (2) to activate the hydraulic pump and raise the guide wheels from the rail.
3. Continue to hold the UP button until the guide wheels are fully raised to the "highway" position. Release the UP button. To engage the lock, rotate T-handle (1), push in and then rotate the T-handle to lock it in the engaged position.

2

FIGURE 2-9
RAISING REAR GUIDE WHEELS



2.9 Removing Vehicle from Track

2.9.3 Steering Lock

See Figures 2-10, 2-11, 2-12 and 2-13. Disengage the vehicle steering lock located on the steering column. Steering locks may vary from vehicle to vehicle but will operate similarly.

2

FIGURE 2-10
VELCRO STEERING LOCK OFF

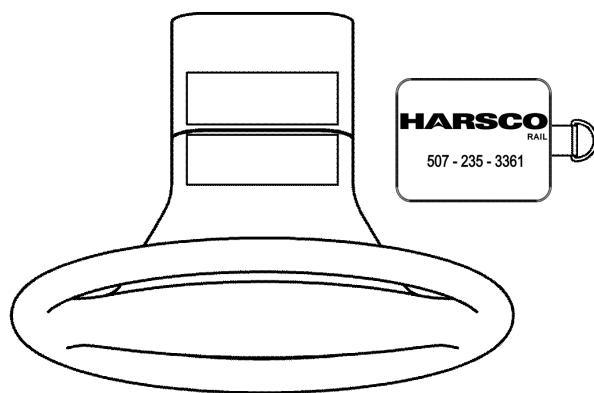


FIGURE 2-11
VELCRO STEERING LOCK ON



FIGURE 2-12
DEAD BOLT TYPE
STEERING LOCK DISENGAGED


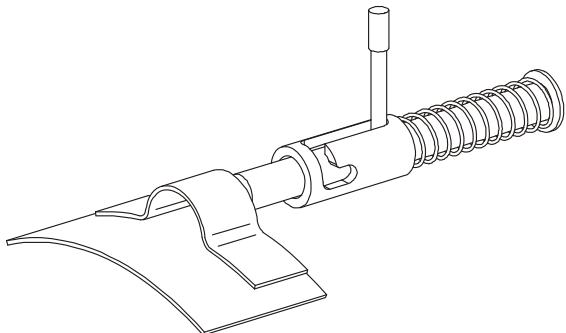


FIGURE 2-13
DEAD BOLT TYPE
STEERING LOCK ENGAGED

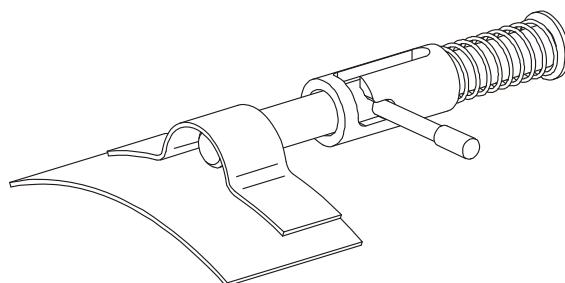

2.9 Removing Vehicle from Track

2.9.4 Hand Pump Operation (If Equipped) - See Figure 2-14

Note: The hand pump is only used to raise the guide wheels. It cannot be used to lower the guide wheels.

1. The location of the ball valve (1) and hand pump (2) will vary depending on the application.
2. Disengage the push / pull cable lock.
3. Rotate the ball valve handle (1) to the open position (valve handle parallel with the line).
4. Insert the provide pump handle in the hand pump. Operate the hand pump (2) to raise the guide wheels. When the guide wheels are fully raised, engage the push / pull cable lock. Rotate the ball valve handle (1) to the closed position (valve handle perpendicular to the line). Remove and store the provided pump handle.

2

FIGURE 2-14
RAISING GUIDE WHEELS WITH HAND PUMP



2.10 Highway Operation



- This multipurpose vehicle has special design and equipment features for off-road use. It handles differently from an ordinary passenger car in driving conditions which may occur on streets, highways and off-road. Weight and location of available payload may also affect the handling of this vehicle. Drive with care and wear safety belts at all times. Read vehicle owner's manual for additional precautions. Failure to heed this precaution could result in bodily injury and/or property damage.

2.11 Towing Trailer / Equipment With Vehicle On Track



2

- **Vehicle used for towing must be rated by vehicle manufacturer for weight of trailer / equipment to be towed. Do not exceed vehicle manufacturer's maximum rated towing capacity.**
- **Towing vehicle must weigh as much or more than trailer / equipment being towed.**
- **Vehicle used for towing must have an adequate brake system to safely decelerate and stop towing vehicle and trailer / equipment being towed.**
- **Towing trailer / equipment lengthens stopping distances. Allow adequate distance for stopping. Anticipate stops so you can brake gradually.**
- **Stopping distance is greater on track than on typical road surfaces. Apply brakes gradually to avoid sliding vehicle tires and guide wheels.**
- **Tow trailer / equipment at a reasonable speed, 20 mph (32 km/h) maximum, taking into account track conditions, track grade, weather, visibility and stopping distance to assure safe operation. Railroad rules governing speeds and right of way should be observed at all times.**
- **Trailer / equipment being towed must be in a safe, usable condition to be towed.**
- **Make sure that vehicle has:**
 - **Front and rear guide wheels lowered and locked in rail position.**
 - **All front and rear guide wheel flanges engaged on inside of rails.**
 - **Steering wheel lock engaged with front wheels straight ahead.**

Failure to heed these warnings could result in severe bodily injury.

2.11 Towing Trailer / Equipment With Vehicle On Track



- Carefully and thoroughly prepare vehicle for towing, making sure to use the right towing equipment and to attach it properly.
- Towing equipment (hitches, tow bars, etc.) must be attached to vehicle frame. Do not mount or attach towing equipment to vehicle guide wheel units.
- Towing equipment (hitches, tow bars, etc.) must have a rated towing capacity equal to or greater than weight of trailer / equipment being towed.
- Use a rigid type tow bar with safety locking couplers. Do not use chain, wire rope etc.
- Observe and follow all railroad safety rules and regulations.
- Do not accelerate suddenly. Traction is reduced on rail, spinning vehicle tires could damage them.

Failure to heed these precautions could result in bodily injury and/or property damage.

2.11 Towing Trailer / Equipment With Vehicle On Track

1. See your vehicle operator's manual for towing information.
2. Use the vehicle manufacturer's recommendations to determine the maximum weight the towing vehicle can tow. Do not exceed the vehicle manufacturer's maximum rated towing capacity.
3. The towing vehicle must have an adequate brake system to safely decelerate and stop the towing vehicle and the trailer / equipment being towed. The towing vehicle must weigh as much or more than the trailer / equipment being towed.
4. Make sure that the vehicle has:
 - a. Front and rear guide wheels lowered and locked in the rail position.
 - b. All front and rear guide wheel flanges engaged on the inside of the rails.
 - c. Front wheels are set straight ahead and the steering wheel lock is engaged on the steering column.
5. Make sure the towing vehicle and the trailer / equipment are in good working condition (tires, brakes, lights, etc.) and that current maintenance has been performed on the vehicle and trailer / equipment.
6. The towing equipment (hitches, tow bars, etc.) on the towing vehicle must have a rating equal to or greater than the weight of the trailer / equipment being towed.
7. The towing equipment (hitches, tow bars, etc.) must be attached to the towing vehicle frame. Do not mount or attach the towing equipment to the guide wheel units.
8. Observe and follow all railroad safety rules and regulations.
9. Do not accelerate suddenly. Traction is reduced on track. Spinning the vehicle tires could damage them.
10. Stopping distance is greater on track than on typical road surfaces. Apply the vehicle brakes gradually to avoid sliding the vehicle tires and the guide wheels. Towing trailer / equipment lengthens stopping distances. Allow adequate distance for stopping. Anticipate stops so that you can brake gradually.
11. Tow the trailer / equipment on the track at a reasonable speed, 20 MPH (32 km/h) maximum, taking into account track conditions, track grade, weather, visibility and stopping distance to assure safe operation. Railroad rules and regulations governing speed limits and right of way should be observed at all times.
12. Always chock the trailer wheels before unhooking the trailer from the towing vehicle.

2.12 Towing Trailer / Equipment With Vehicle On Road



- **Vehicle used for towing must be rated by vehicle manufacturer for weight of trailer / equipment to be towed. Do not exceed vehicle manufacturer's maximum rated towing capacity.**
- **Vehicle used for towing must have an adequate brake system to safely decelerate and stop towing vehicle and trailer / equipment being towed.**
- **Towing trailer / equipment lengthens stopping distances. Allow adequate distance for stopping. Anticipate stops so you can brake gradually.**
- **Tow trailer / equipment at a reasonable speed taking into account road conditions, road grade, weather, visibility and stopping distance to assure safe operation. Posted speed limits should be observed at all times.**
- **Trailer / equipment being towed must be in a safe, usable condition to be towed.**
- **Make sure that vehicle has:**
 - Front and rear guide wheel units raised and locked in highway position.
 - Steering wheel lock disengaged.

2

Failure to heed these warnings could result in severe bodily injury.

2.12 Towing Trailer / Equipment With Vehicle On Road



2

- This multipurpose vehicle has special design and equipment features for off-road use. It handles differently from an ordinary passenger car in driving conditions which may occur on streets, highways and off-road. Weight and location of available payload may also affect the handling of this vehicle. Drive with care and wear safety belts at all times. Read vehicle owner's manual for additional precautions.
- Observe and follow all federal, state and local driving rules and regulations.
- State laws may require towing vehicle and trailer / equipment being towed to be equipped with special safety equipment (mirrors on both sides of towing vehicle, trailer brakes, trailer lights, etc.).
- Carefully and thoroughly prepare your vehicle for towing, making sure to use the right towing equipment and to attach it properly.
- Towing equipment (hitches, tow bars, etc.) must be attached to vehicle frame. Do not mount or attach towing equipment to wheel units.
- Towing equipment (hitch, tow bar, etc.) must have a rated towing capacity equal to or greater than weight of trailer / equipment being towed.

Failure to heed these precautions could result in bodily injury and/or property damage.

2.12 Towing Trailer / Equipment With Vehicle On Road

1. See your vehicle operator's manual for towing information.
2. Use the vehicle manufacturer's recommendations to determine the maximum weight the towing vehicle can tow. Do not exceed the vehicle manufacturer's maximum rated towing capacity.
3. The towing vehicle must have an adequate brake system to safely decelerate and stop the towing vehicle and the trailer / equipment being towed. Towing trailer / equipment lengthens stopping distances. Allow adequate distance for stopping. Anticipate stops so that you can brake gradually.
4. Make sure that the vehicle has:
 - a. Front and rear guide wheel units raised and locked in the highway position.
 - b. Steering wheel lock is disengaged on the steering column.
5. Make sure the towing vehicle and the trailer / equipment are in good working condition (tires, brakes, lights, etc.) and that current maintenance has been performed on the vehicle and trailer / equipment.
6. The towing equipment (hitches, tow bars, etc.) on the towing vehicle must have a rating equal to or greater than the weight of the trailer / equipment being towed.
7. The towing equipment (hitches, tow bars, etc.) must be attached to the towing vehicle frame. Do not mount or attach the towing equipment to the guide wheel units.
8. Observe and follow all federal, state and local driving rules, regulations and laws.
9. State laws may require the towing vehicle and/or the trailer / equipment being towed to be equipped with special safety equipment (mirrors on both sides of the towing vehicle, trailer brakes, trailer lights, etc.).
10. Tow the trailer / equipment on the road at a reasonable speed taking into account road conditions, road grade, weather, visibility and stopping distance to assure safe operation. Always observe posted speed limits.
11. Always chock the trailer wheels before unhooking the trailer from the towing vehicle.

2.13 Towing Disabled Vehicle On Track



2

- Towing vehicle / machine must weigh as much or more than disabled vehicle being towed.
- Vehicle / machine used for towing must have an adequate brake system to safely decelerate and stop towing vehicle / machine and disabled vehicle being towed.
- Towing disabled vehicle lengthens stopping distances. Allow adequate distance for stopping. Anticipate stops so you can brake gradually.
- Tow disabled vehicle at a reasonable speed, 10 mph (16 km/h) maximum, taking into account track conditions, track grade, weather, visibility and stopping distance to assure safe operation. Railroad rules governing speed limits and right of way should be observed at all times.
- Stopping distance is greater on track than on typical road surfaces. Apply brakes gradually to avoid sliding towing vehicle / machine wheels.
- Make sure that disabled vehicle has:
 - Front and rear guide wheel units lowered and locked in rail position.
 - All front and rear guide wheel flanges engaged on inside of rails.
 - Steering wheel lock engaged with front wheels straight ahead.

Failure to heed these warnings could result in severe bodily injury.

2.13 Towing Disabled Vehicle On Track



- Tow bar must be attached to disabled vehicle frame. Do not mount or attach tow bar to disabled vehicle guide wheel units.
- Tow bar must have a rated towing capacity equal to or greater than weight of disabled vehicle being towed.
- Use a rigid type tow bar with safety locking couplers. Do not use chain, wire rope etc.
- Observe and follow all railroad safety rules and regulations.
- Do not accelerate suddenly. Traction is reduced on track, spinning towing vehicle / machine wheels could damage them.
- Tow disabled vehicle to nearest road crossing and remove from track.

Failure to heed these precautions could result in bodily injury and/or property damage.

2.13 Towing Disabled Vehicle On Track

1. See your vehicle operator's manual for towing information.
2. The towing vehicle / machine must have an adequate brake system to safely decelerate and stop the towing vehicle / machine and the disabled vehicle being towed. The towing vehicle / machine must weigh as much or more than the disabled vehicle towed.
2. Make sure that the disabled vehicle has:
 - a. Front and rear guide wheel units lowered and locked in the rail position.
 - b. All front and rear guide wheel flanges engaged on the inside of the rails.
 - c. Front wheels are set straight ahead and the steering wheel lock is engaged on the steering column.
4. Make sure the towing vehicle / machine is in good working condition (tires, brakes, lights, etc.) and that current maintenance has been performed on the vehicle / machine.
5. The towing equipment (hitches, tow bars, etc.) on the towing vehicle / machine must have a rating equal to or greater than the weight of the disabled vehicle being towed.
6. The tow bar must be mounted or attached to the disabled vehicle's frame. Do not mount or attach the tow bar to the disabled vehicle guide wheel units. Use a rigid type tow bar with safety locking couplers.
7. Observe and follow all railroad safety rules and regulations.
8. Do not accelerate suddenly. Traction is reduced on track. Spinning the towing vehicle tires / machine wheels could damage them.
9. Stopping distance is greater on track than on typical road surfaces. Apply the towing vehicle / machine brakes gradually to avoid sliding the vehicle tires / machine wheels. Towing disabled vehicle lengthens stopping distances. Allow adequate distance for stopping. Anticipate stops so that you can brake gradually.
10. Tow the disabled vehicle on the track at a reasonable speed, 10 MPH (16 km/h) maximum, taking into account track conditions, track grade, weather, visibility and stopping distance to assure safe operation. Railroad rules and regulations governing speed limits and right of way should be observed at all times.
11. Tow the disabled vehicle to the nearest road crossing and remove the vehicle from the track.

2.14 Towing Disabled Vehicle On Road



- Tow disabled vehicle per vehicle manufacturer's towing specifications listed in your vehicle's operators manual.
- Vehicle used for towing must have an adequate brake system to safely decelerate and stop towing vehicle and disabled vehicle being towed.
- Tow disabled vehicle at a reasonable speed taking into account road conditions, road grade, weather, visibility and stopping distance to assure safe operation. Posted speed limits should be observed at all times.
- Make sure disabled vehicle has:
 - Front and rear guide wheel units raised and locked in highway position.
 - Steering wheel lock disengaged.

2

Failure to heed these warnings could result in severe bodily injury.



- Towing equipment (tow truck, tow bars, etc.) must be attached to disabled vehicle frame. Do not mount or attach towing equipment to disabled vehicle guide wheel units.
- Towing equipment (tow truck, tow bars, etc.) must have a rated towing capacity equal to or greater than weight of disabled vehicle being towed.
- Observe and follow all federal, state and local driving rules and regulations.
- State laws may require towing vehicle and disabled vehicle to be equipped with special safety equipment (lights, etc.).

Failure to heed these precautions could result in bodily injury and/or property damage.

2.14 Towing Disabled Vehicle On Road

1. See your vehicle operator's manual for towing information.
2. The towing vehicle must have an adequate brake system to safely decelerate and stop the towing vehicle and the disabled vehicle being towed.
2. Make sure that the disabled vehicle's:
 - a. Front and rear guide wheel units are raised and locked in the highway position.
 - b. Vehicle steering wheel lock is disengaged on the steering column.
4. Make sure the towing vehicle is in good working condition (tires, brakes, lights, etc.) and that current maintenance has been performed on the vehicle.
5. The towing equipment (tow truck, tow bars, etc.) on the towing vehicle must have a rating equal to or greater than the weight of the disabled vehicle being towed.
6. The towing equipment (tow truck, tow bars, etc.) must be mounted or attached to the disabled vehicle frame. Do not mount or attach the towing equipment to the disabled vehicle guide wheel units.
7. Observe and follow all federal, state and local driving rules, regulations and laws.
8. State laws may require the towing vehicle and disabled vehicle being towed to be equipped with special safety equipment (lights, etc.).
9. Tow the disabled vehicle on the road at a reasonable speed taking into account road conditions, road grade, weather, visibility and stopping distance to assure safe operation. Always observe posted speed limits.

SECTION 3 - ADJUSTMENTS
TABLE OF CONTENTS

| | | |
|---------|---|---------|
| 3.1 | Guide Wheel Equipment Alignment Procedure | .3 - 2 |
| 3.1.1 | Vehicle Check | .3 - 2 |
| 3.1.2 | Placing Vehicle On Track | .3 - 3 |
| 3.1.3 | Guide Wheel Back Flange Gauge | .3 - 4 |
| 3.1.4 | Guide Wheel Load | .3 - 6 |
| 3.1.4.1 | Checking Guide Wheel Load | .3 - 6 |
| 3.1.4.2 | Adjusting Guide Wheel Load | .3 - 8 |
| 3.1.5 | String Lining Set-Up | .3 - 11 |
| 3.1.6 | Guide Wheel Unit Alignment | .3 - 12 |
| 3.1.6.1 | Checking Guide Wheel Unit Alignment | .3 - 12 |
| 3.1.6.2 | Adjusting Guide Wheels | .3 - 12 |
| 3.1.7 | Vehicle Track Test | .3 - 16 |
| 3.2 | Adjustments | .3 - 17 |
| 3.2.1 | Spring Cell Angle | .3 - 17 |
| 3.2.2 | Rail Sweeps | .3 - 18 |
| 3.2.2.1 | Checking Rail Sweeps | .3 - 18 |
| 3.2.2.2 | Adjusting Rail Sweeps | .3 - 18 |

3.1 Guide Wheel Equipment Alignment Procedure



- Before performing any adjustments to the guide wheel units or vehicle, always place the automatic transmission in "park" or the manual transmission in "neutral". Apply the parking brake.
- Understand equipment operation and be aware of all pinch points before operating or making adjustments to the guide wheel equipment.

Failure to heed these warnings could result in severe bodily injury.

3

The Guide Wheel Alignment Procedure must be completed when the guide wheel equipment is applied to the vehicle, or when any of the misalignment indicators occur. See Operation Section -Misalignment Indicators.

3.1.1 Vehicle Check

1. The vehicle must be at curb weight with permanent attachments: spare tire, tool box less tools, utility box, crane, aerial lift boom, etc. and without: passengers, baggage, load, etc.
2. Weigh the entire vehicle and record this weight. Weigh both the front and rear axles of the vehicle separately and record these weights. The weight of the vehicle should not exceed the GVWR (Gross Vehicle Weight Rating) and the weight on the front and rear axles should not exceed their respective GAWR (Gross Axle Weight Rating).
3. Permanent attachments to the vehicle such as a tool box, utility box, crane aerial lift boom, etc. which could cause uneven loading on the guide wheels should be compensated for by adjusting the vehicle suspension by adding leaf springs, coil springs, torsion bars, etc.
4. Tires properly inflated: Per the Wheel Modification Application Specifications (ranges from 80-95 PSI depending on application).
If no wheel modification, inflate to Vehicle Tire maximum recommended PSI.
5. Visually inspect the entire vehicle, especially the guide wheel equipment for loose or missing bolts and bent or damaged components. Tighten, repair or replace as necessary.
6. Verify that the vehicle that the guide wheel equipment is being mounted on is equipped correctly (springs, tires, wheels, etc.).

3.1 Guide Wheel Equipment Alignment Procedure

3.1.1 Vehicle Check

7. Check the following measurements on the vehicle that the guide wheel equipment is to be mounted on before applying the guide wheel equipment to the vehicle.
 - a. Frame must be square. Diagonal measurements of frame should be equal within 1/8 inch (3.2 mm).
 - b. Wheelbase (as measured on each side) must be equal within 1/16 inch (1.8 mm).
 - c. Vehicle axles must be square with the frame within 1/64 inch per foot (.4 mm per 305 mm). Harsco Rail recommends that this be checked by a reputable alignment shop.
8. Follow the mounting instructions on the application drawing which is supplied with each Guide Wheel Equipment Group.

3

Note: The applicator of the guide wheel equipment must make sure the application drawings remain with the vehicle for further reference. If the application drawings are not with the vehicle, contact Harsco Rail, Fairmont Minnesota Facility to obtain these drawings.

9. After mounting the guide wheel equipment, have a four point alignment completed on the vehicle including checking the caster, camber, toe-in and torsion bar specifications on the front wheels. Also, check the thrust angle of the rear axle. The thrust angle of the rear axle should be set as close to zero as possible. If necessary, adjust to vehicle manufacturer's recommendations.
10. If necessary, have the headlight aim checked and adjusted.

3.1.2 Placing Vehicle On Track

1. Place the vehicle on straight, level, tangent track or on an alignment rack constructed for guide wheel equipment alignment. If track or an alignment rack is not available, use 4 x 6 inch lumber, on a level floor, to simulate track. Space the lumber so it measures 57-1/2 inches between the inside edges. Using 4 x 6 inch lumber will allow the wheel weighing jack to fit underneath the wheel arm to weigh the guide wheel load when the guide wheels are in the "rail" position.
2. Place the automatic transmission in "Park" or manual transmission in "Neutral". Apply the parking brake. Stop the engine. Lower and lock the guide wheels in the "rail" position. See Operation Section - Placing Vehicle On Track.
3. Set the vehicle wheels straight ahead. Secure the steering wheel using the steering lock. Stop the engine.

3.1 Guide Wheel Equipment Alignment Procedure


3.1.3 Guide Wheel Back Flange Gauge - See Figure 3-1

1. Measure the back flange gauge of the front and rear guide wheel units. Measure from the back of the left wheel flange, directly below the center line of the wheel spindle, to the same point on the right wheel flange. This dimension must be 53-3/16 - 53-5/8 inches (1351 - 1362 mm).
2. Although the front and rear guide wheel unit back flange gauge is preset at the factory, it is possible for the back flange gauge to change when guide wheel alignment procedures are performed on the guide wheel unit.
- 3** 3. Always check the guide wheel back flange gauge after performing any guide wheel alignment procedures to ensure the back flange gauge is within the allowable limits.

3.1 Guide Wheel Equipment Alignment Procedure

3.1.3 Guide Wheel Back Flange Gauge

FIGURE 3-1
GUIDE WHEEL BACK FLANGE GAUGE

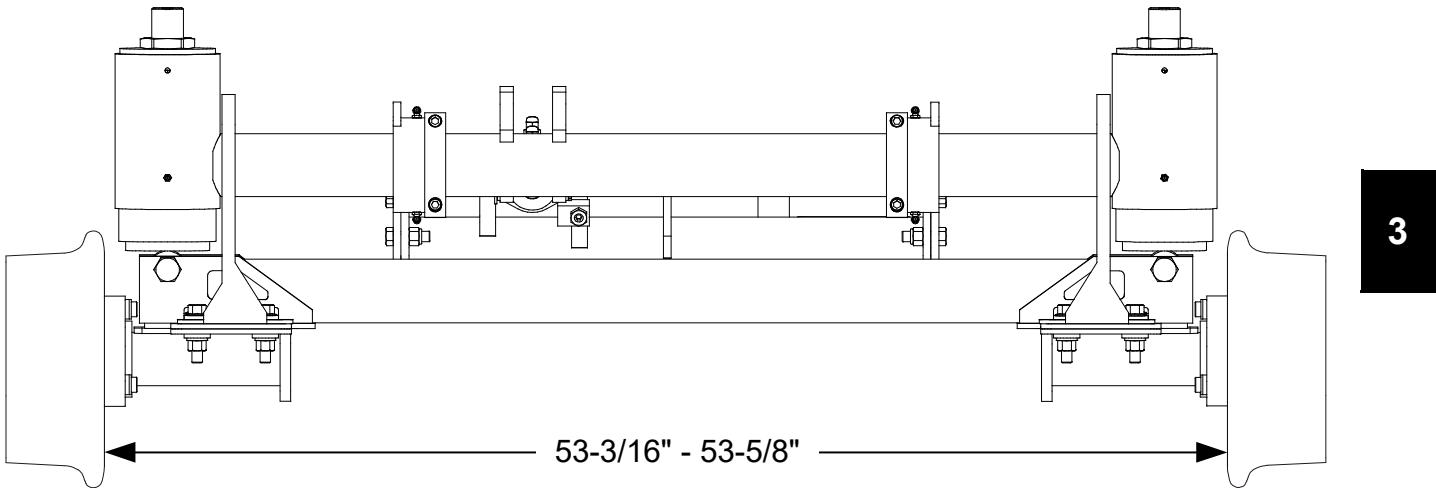

3.1 Guide Wheel Equipment Alignment Procedure



- Improper loading of guide wheel equipped vehicle can cause derailment of vehicle.
- Apply vehicle parking brake and stop vehicle engine before checking guide wheel load.
- Always check the guide wheel load before operating the vehicle on track. Never operate the vehicle on track if load exceeds the maximum rated load on the front and/or rear guide wheel units. The maximum load on the front or rear guide wheel unit is:
 - Steel Tread Guide Wheels:
1,500 lbs (680 kg) Maximum Per Guide Wheel
 - Rubber Tread Guide Wheels:
700 lbs (318 kg) Maximum Per Guide Wheel

3

- Do not use any other jack than the Harsco Rail # 3422565 Wheel Weighing Jack to check the guide wheel load. Use of any other jack will result in incorrect guide wheel load information.
- Misuse of the wheel weighing jack may cause gauge to explode. Read ansi b40.1 and apparatus installation / operating instructions before use.
- Do not use the wheel weighing jack to lift the vehicle. Excessive weight may cause the jack to fail.

Failure to heed these warnings could result in derailment of vehicle and/or severe bodily injury.

3.1.4 Guide Wheel Load

3.1.4.1 Checking Guide Wheel Load - See Figure 3-2

1. Apply the parking brake. Lower and lock the guide wheels in the rail position. Stop the vehicle's engine.
2. The guide wheel load can be checked using the Harsco Rail # 3422565 Wheel Weighing Jack. Do not use any other jack to check the guide wheel load. The use of an other jack will result in incorrect guide wheel load information.
3. Place the jack under the square tube as close to the guide wheel as possible. Jack the guide wheel up until the guide wheel just clears the top of the rail. Note the gauge reading. The gauge reading indicates the pounds of load on the guide wheel.

3.1 Guide Wheel Equipment Alignment Procedure

3.1.4 Guide Wheel Load

3.1.4.1 Checking Guide Wheel Load - See Figure 3-2


Note: An easy way to tell when the guide wheel just clears the top of rail is to jack the wheel up approximately 1/4" (6.4 mm) above the top of the rail. Place a piece of paper between the rail and the guide wheel. Lower the guide wheel onto the paper. Slowly jack the guide wheel up while applying a steady pulling force on the paper until the paper can be pulled out. Note the gauge reading when the paper can be removed.

4. With the vehicle at curb weight, the recommended guide wheel load is 500 lbs \pm 25 lbs (227 kg \pm 11 kg) per guide wheel. The recommended guide wheel load must also be equal on the left and right sides of the front or rear guide wheel unit. 3
5. The maximum rated load on the front and / or rear guide wheel unit is:
Steel Tread Guide Wheels: 1,500 lbs (680 kg) maximum per guide wheel.
Rubber Tread Guide Wheels: 700 lbs (318 kg) maximum per guide wheel.

The front and / or rear guide wheel unit spring cells are adjustable. See the Adjustments Section - Guide Wheel Load for the adjustment procedure.

6. If the load exceeds the maximum rated load capacity of the front and / or rear guide wheel unit or the maximum rated load capacity of any guide wheel, the load must be redistributed or some of the load removed. Never operate the vehicle on track if the load on the front and / or rear guide wheel unit exceeds the maximum rated load capacity.

FIGURE 3-2
CHECKING GUIDE WHEEL LOAD

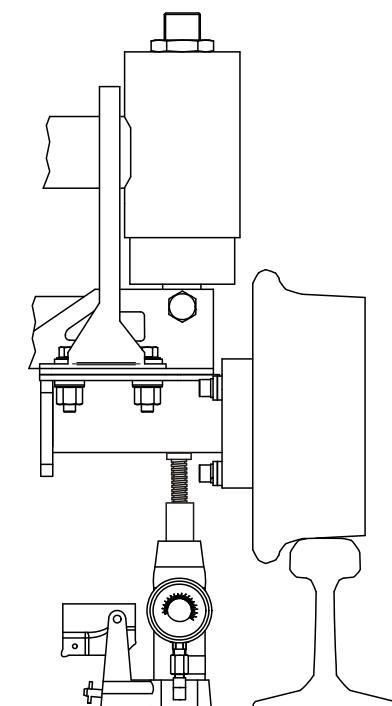

3.1 Guide Wheel Equipment Alignment Procedure

3.1.4 Guide Wheel Load

3.1.4.2 Adjusting Guide Wheel Load - See Figure 3-2 and Figure 3-3


1. With the vehicle at curb weight the spring cell must be set to the recommended guide wheel load of 500 lbs \pm 25 lbs (227 kg \pm 11 kg) per guide wheel. The recommended guide wheel load must also be equal on the left and right sides of the front or rear guide wheel unit.
2. See Figure 3-3. To adjust the spring cell load, raise the guide wheels and let them rest on the rails. Do not adjust the spring cell with any load on the guide wheels.
3. Loosen lock nut (1). Insert a 1/2 inch drive ratchet into the 1/2 inch socket in the adjusting stud (2). Turn the adjusting stud clockwise to increase the load on the guide wheel or counter-clockwise to decrease the load on the guide wheel. Tighten lock nut (1).
3. See Figure 3-2. Lower and lock the guide wheels in the rail position. See Checking Guide Wheel Load. Use the Wheel Weighing Jack to determine the load on the guide wheel.
4. Repeat Steps 1 through 3 until the guide wheel unit is set at the recommend guide wheel load. The recommended guide wheel load must be equal on the left and right sides of the front or rear guide wheel unit.
5. If the spring cells cannot be adjusted to the recommended guide wheel load, the guide wheel unit must be repositioned in a different set of mounting holes.

3.1 Guide Wheel Equipment Alignment Procedure

3.1.4 Guide Wheel Load


3.1.4.2 Adjusting Guide Wheel Load

FIGURE 3-3
ADJUSTING GUIDE WHEEL LOAD

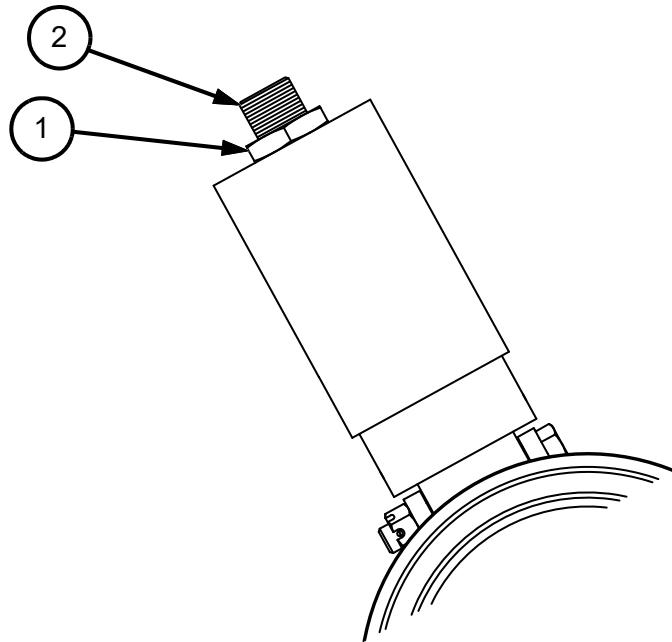

3.1 Guide Wheel Equipment Alignment Procedure

FIGURE 3-4
GUIDE WHEEL EQUIPMENT ALIGNMENT

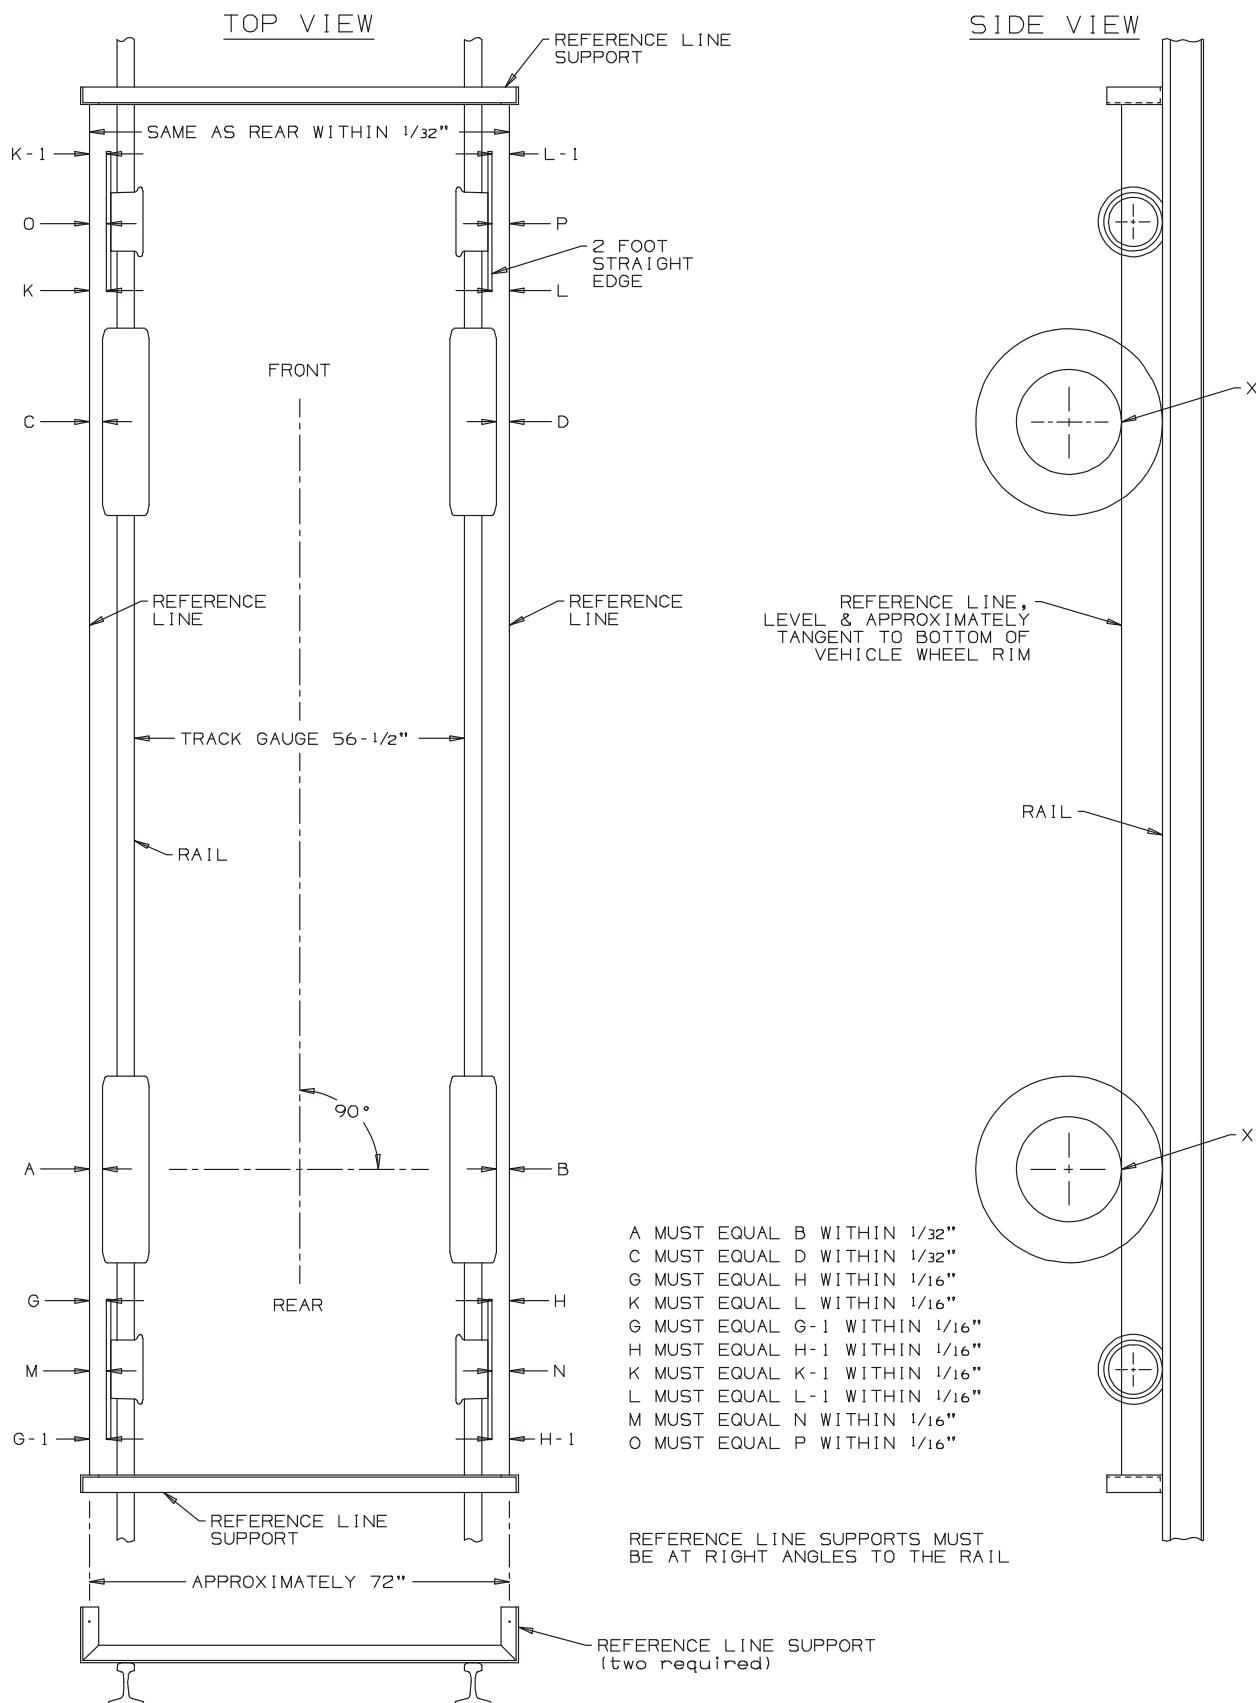

3.1 Guide Wheel Equipment Alignment Procedure

3.1.5 String Lining Set-Up - See Figure 3-4

1. The string lining procedure is only a guide to check and make alignment adjustments to the guide wheel equipment. String lining the vehicle and guide wheel equipment will not guarantee that the guide wheel equipped vehicle will track properly. Harsco Rail recommends that all HY-RAIL® equipped vehicles be track tested. The vehicle should be at its normal operating load for track testing. The vehicle should be track tested when:
 - a. The guide wheel equipment is installed on the vehicle.
 - b. Any adjustments are made to the guide wheel equipment.
 - c. The load on the vehicle is changed.
 - d. Periodically to ensure that the vehicle is tracking properly.
2. Establish parallel reference lines on each side of vehicle as shown in Figure 3-4.
3. Parallel reference lines can be established by building two supports or brackets. These can be built out of scrap angle iron or other material. The supports should be approximately 6 inches high, and a few inches longer than the width of the vehicle. Wires or cords stretched between the front and rear supports will be the reference lines. The wires or cords should be spaced approximately 72 inches apart. The distance between the wires or cords must be equal or within 1/32 inch at each support.
4. Clamp the supports to the rail in front of and behind the vehicle. The supports should be at right angles to the rail. Stretch the wires or cords between the supports, level with the bottom edge of the vehicle wheel rim (point X). The reference lines must be level.
5. Shift the supports on the rail until dimensions A = B and C = D are equal or within 1/32 inch. These measurements should be taken from the bead seat of the vehicle rim directly below the axle (point X) to the reference line. When shifting the supports, keep them at right angles to the rail so the reference lines stay level and parallel to each other.
6. After the reference lines have been established, measurements can be taken from these lines to the guide wheels to ensure correct alignment.

3.1 Guide Wheel Equipment Alignment Procedure

3.1.6 Guide Wheel Unit Alignment

3.1.6.1 Checking Guide Wheel Unit Alignment - See Figures 3-4 and 3-5

1. Lower and lock the guide wheels in the "rail" position. Take measurements M, N, O & P. Measure from the outer edge of the guide wheels, directly below the center line of the wheel spindle, to the reference line. Measurements M, N, O & P must all be equal or within 1/16 inch. If not, see Adjustment.
2. Lower and lock the guide wheels in the "rail" position. The guide wheels must track straight, not toed in or out. Hold a two foot long straight edge against the outer edge of the guide wheel with the straight edge centered on the guide wheel. Check that dimensions G = G-1, H = H-1, K = K-1 & L = L-1. These dimensions must be equal or within 1/16 inch. If not, see Adjustment.

3

Note: When verifying whether the guide wheel is toed-in or toed-out, it may be helpful to visualize the traveling direction of the vehicle when in rail position.

The guide wheel is toed-in if the front dimension of the straight edge to the reference line is larger than the rear dimension. (Example - Left Rear Guide Wheel: Dimension G is larger than dimension G-1).

The guide wheel is toed-out if the front dimension of the straight edge to the reference line is smaller than the rear dimension. (Example - Left Rear Guide Wheel: Dimension G is smaller than dimension G-1).

3.1.6.2 Adjusting Guide Wheels - See Figures 3-4 and 3-5

1. Unlock and raise the front and/or rear guide wheels until they rest on the rail.
2. Loosen the four socket head cap screws (1) on collars (2).
3. Shift the entire cross tube and axle assembly (3) until measurements M & N or O & P are all equal. Make sure collars (2) are snug against the frame mounting assembly (4).
4. Re-tighten socket head cap screws (1). Torque to 35 lb-ft (47 N-m).
5. Lower and lock the guide wheels in the "rail" position. Recheck measurements M, N, O & P.
6. Repeat steps 1 through 5 above until measurements M, N, O & P are all equal, or within 1/16 inch.
7. If it is not possible to get enough horizontal movement of the guide wheels by moving the cross tube and axle assembly, it will be necessary to move the entire guide wheel unit in the mounting brackets.


3.1.6 Guide Wheel Unit Alignment

3.1.6.2 Adjusting Guide Wheels - See Figures 3-4 and 3-5

8. Unlock and raise the front and/or rear guide wheels until they rest on the rail.
9. Loosen the six cap screws and nuts (5).
10. Remove the 1/16" or 1/4" shims (6) from one side and place on the other side between the unit and the mounting bracket.
11. Re-tighten cap screws and nuts (5). Torque to 76 lb-ft (103 N-m).
12. Lower and lock the guide wheels in the "rail" position. Recheck measurements M, N, O & P.
13. Repeat steps 8 through 12 above until measurements M, N, O & P are all equal, or within 1/16 inch.

3

FIGURE 3-5
FRONT OR REAR GUIDE WHEEL UNIT - VIEWED FROM TOP

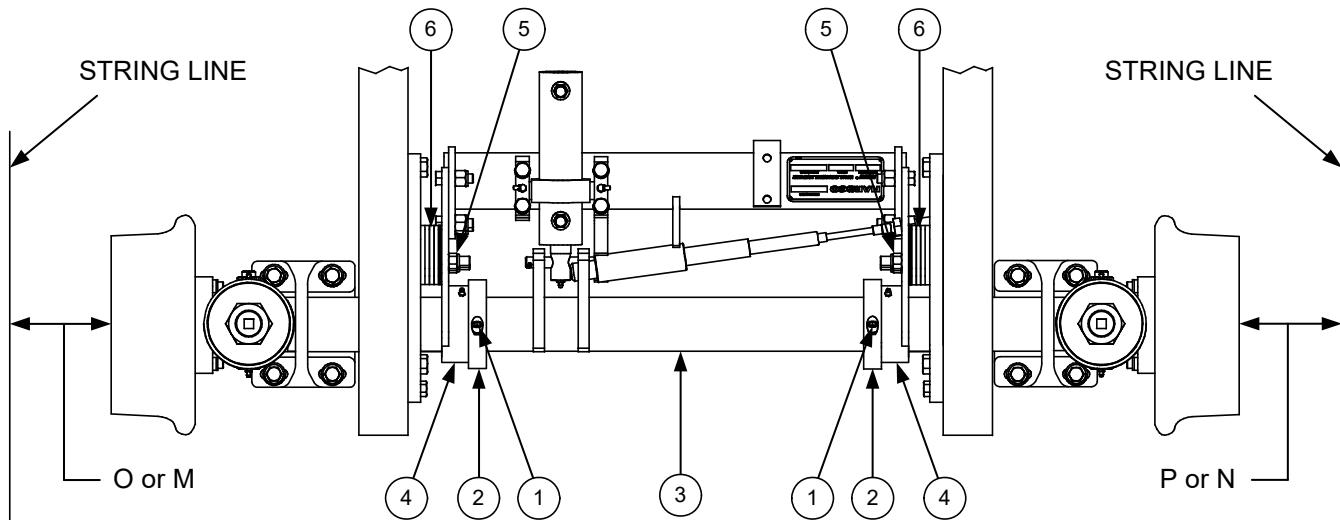

3.1 Guide Wheel Equipment Alignment Procedure

3.1.6 Guide Wheel Unit Alignment

3.1.6.2 Adjusting Guide Wheels - See Figure 3-6


14. Unlock and raise the front and/or rear guide wheels until they rest on the rail.
15. Loosen the four fasteners (1) that secure the stub axle (2) to the axle assembly (3) on the guide wheel that needs to be adjusted.
16. Holding the straight edge against the outer edge of the guide wheel, pivot the hub assembly (2) until the dimensions from both ends of the straight edge to the string line are equal or within 1/16" (dimensions G = G-1, H = H-1, K = K-1 & L = L-1).
17. Re-tighten fasteners (1). Torque to 110 lb-ft (150 N-m)
18. Lower and lock the guide wheels in the "rail" position. Recheck dimensions G = G-1, H = H-1, K = K-1 & L = L-1.
19. Repeat steps 14 through 18 above until dimensions G = G-1, H = H-1, K = K-1 & L = L-1 are all equal or within 1/16 inch.

3.1 Guide Wheel Equipment Alignment Procedure

3.1.6 Guide Wheel Unit Alignment

3.1.6.2 Adjusting Guide Wheels - See Figure 3-6

FIGURE 3-6
FRONT OR REAR GUIDE WHEEL UNIT - VIEWED FROM TOP AND END

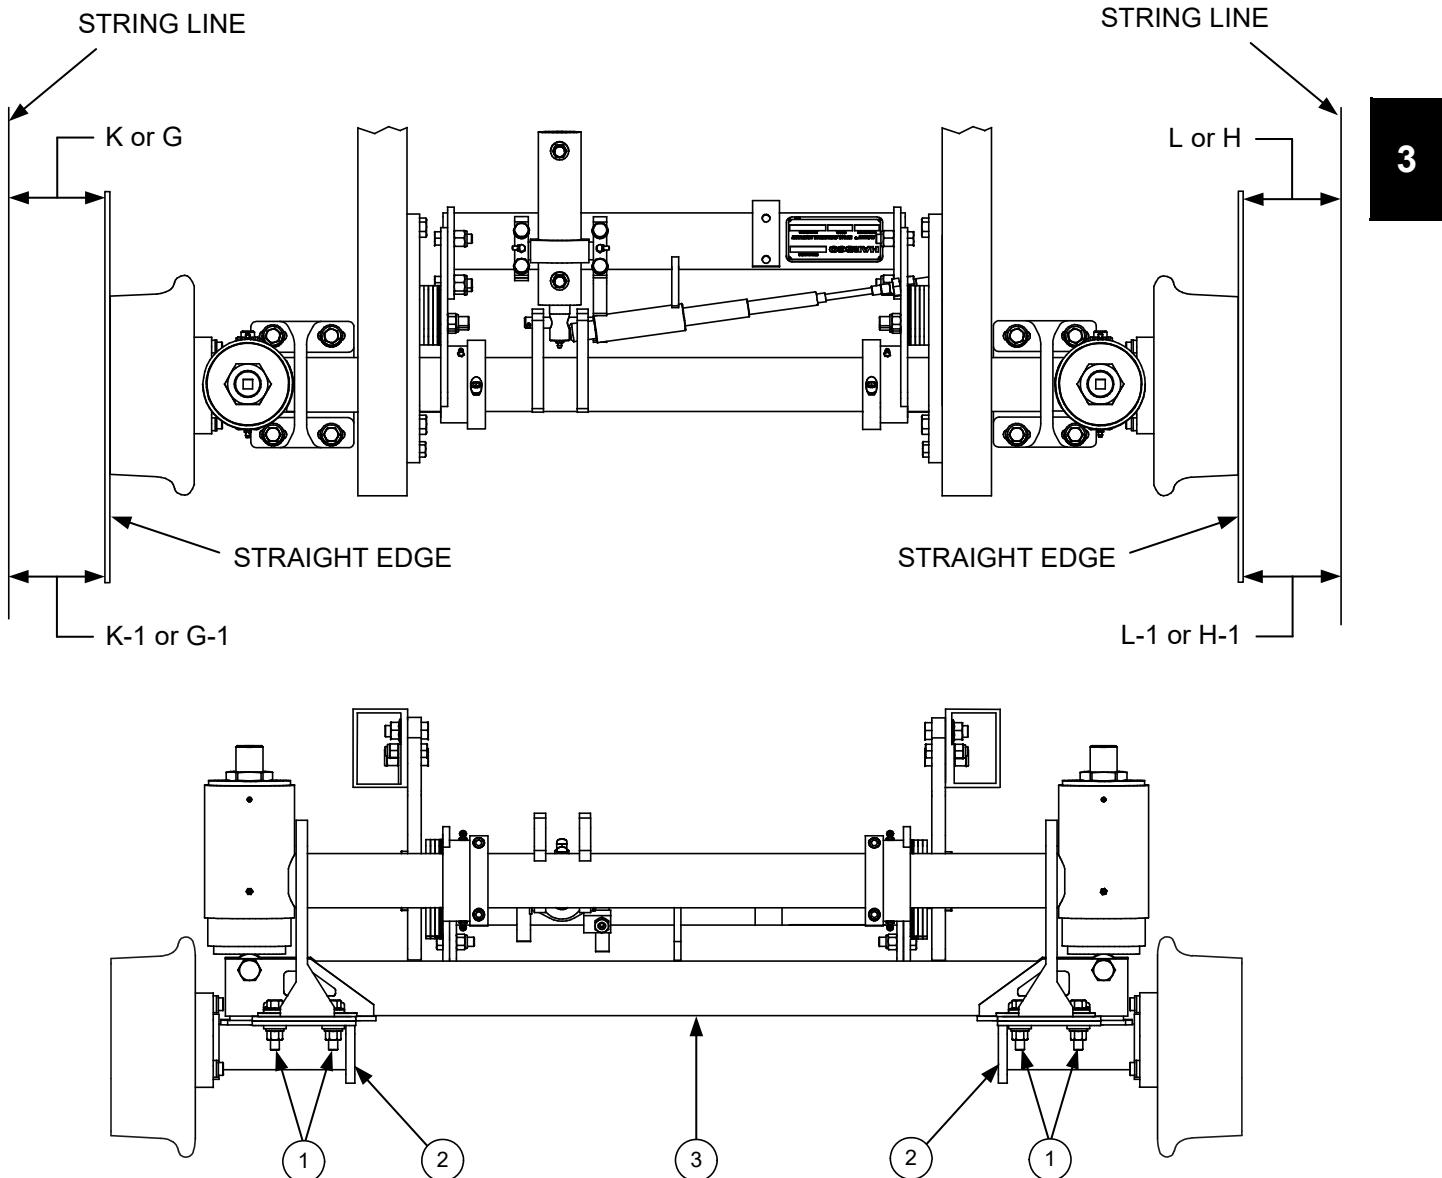

3.1 Guide Wheel Equipment Alignment Procedure

3.1.7 Vehicle Track Test



- Check and correct alignment promptly if misalignment is indicated. Misalignment of guide wheel equipment could result in derailment of the vehicle and severe bodily injury.

1. Harsco Rail recommends that all HY-RAIL® equipped vehicles be track tested. The vehicle should be at its normal operating load for track testing. The vehicle should be track tested when:
 - a. The guide wheel equipment is installed on the vehicle.
 - b. Any adjustments are made to the guide wheel equipment.
 - c. The load on the vehicle is changed.
 - d. Periodically to ensure that the vehicle is tracking properly.
2. The vehicle must be placed on straight, level, tangent track. See Operation Section - Placing Vehicle On Track.
3. Apply spray paint to the flanges and treads of all guide wheels.
4. Lower and lock all guide wheels in the "rail" position.
5. Operate the vehicle for a short distance at a normal operating speed.
6. The paint should wear evenly around the flanges and treads of all guide wheels. If the paint is worn evenly on all guide wheels, the vehicle and guide wheel equipment is properly aligned.
7. If the paint did not wear evenly, note which guide wheels, flange and / or tread the paint is worn on.
 - a. Repaint the flanges and treads on all guide wheels.
 - b. Operate the vehicle in reverse for a short distance at a normal operating speed.
 - c. Note which guide wheels, flange and / or tread the paint is worn on.
If the paint wore off on the right front flange when traveling forward and then on the left rear flange when traveling in reverse, the vehicle is probably not aligned properly.
Have the vehicle frame checked for proper alignment. See Vehicle Check.
8. If the vehicle pulls noticeable to the right when traveling forward, adjust the right front guide wheel to a slightly towed-in position. See Checking Guide Wheel Alignment.
9. If the vehicle pulls noticeable to the left when traveling forward, adjust the left front guide wheel to a slightly towed-in position. See Checking Guide Wheel Alignment.
10. If the vehicle continues to track improperly, repeat the String Lining and Guide Wheel Alignment Procedure.

3


3.2 Adjustments

3.2.1 Spring Cell Angle - See Figure 3-7

1. The guide wheel unit spring cell angle should be checked periodically and adjust if necessary.
2. The spring cells should be adjusted so they are angled towards the center of the vehicle by approximately 5 degrees. Set screw (1) is used to set the angle of the spring cells when the unit is in the rail position.
3. Locate the vehicle on straight, level, tangent track. Lower the rear and front guide wheels to the rail position. Make sure the set screw (1) is against plate (2) on the guide wheel unit frame.
4. Hold an inclinometer on the front or rear of the spring cell tube. If the inclinometer indicates approximately 5 degrees, the spring cell angle is adjusted correctly. If not, the spring cell angle will need to be adjusted.
5. Raise the guide wheels. Loosen locknut (3). Rotate set screw (1) clockwise to decrease the angle or counter-clockwise to increase the angle. Tighten locknut (3). Lower the guide wheels to the rail position. Recheck the spring cell angle. Repeat adjustment procedure until the spring cell is angled approximately 5 degrees towards the center on the vehicle.

3

FIGURE 3-7
ADJUSTING SPRING CELL ANGLE

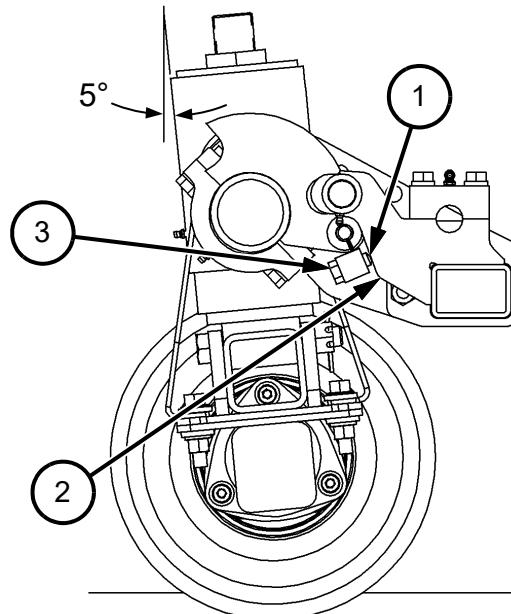

3.2 Adjustments

3.2.2 Rail Sweeps

3.2.2.1 Checking Rail Sweeps


1. Place the vehicle on straight, level track. Place the automatic transmission in "Park" or manual transmission in "Neutral". Apply the parking brake. Stop the engine.
2. Lower and lock the guide wheels in the "rail" position. The rear rail sweeps are mounted to the axle assembly and will lower to the rail when the guide wheels are lowered.
3. The rubber sweep (1) should clear the top of the rail by 1/4 inch (6.4 mm). If not, adjustment is necessary.

3

3.2.2.2 Adjusting Rail Sweeps - See Figure 3-8

1. Loosen two fasteners (2). Adjust the rubber sweep (1) until the sweep clears the top of the rail by 1/4 inch (6.4 mm). Re-tighten the fasteners.
2. If the rubber sweep cannot be lowered because the fasteners are at the bottom of the slots in the mounting plate, remove the two fasteners. Relocate the fasteners in the next upper set of holes in the rubber sweep. Adjust the rubber sweep.
3. If the rubber sweep (1) is in the last, upper set of holes, move the rear sweep (3) to the front and the front sweep (1) to the rear as a stiffener. Adjust the rubber sweep.
4. When both rubber sweeps are worn and can not be adjusted lowered, replace both rubber sweeps.


FIGURE 3-8
CHECKING / ADJUSTING RAIL SWEEPS

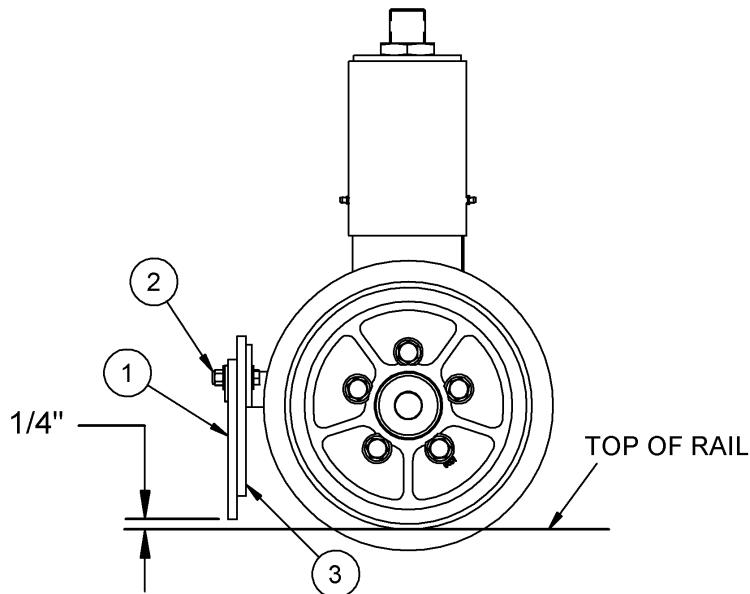

**SECTION 4 - MAINTENANCE
TABLE OF CONTENTS**

| | | |
|---------|---|--------|
| 4.1 | Waste Disposal | 4 - 2 |
| 4.2 | Maintenance Schedule | 4 - 2 |
| 4.2.1 | Daily | 4 - 2 |
| 4.2.2 | Weekly | 4 - 3 |
| 4.2.3 | At 50 Vehicle Miles (80 Vehicle km) | 4 - 3 |
| 4.2.4 | At 50 Track Miles (80 Vehicle km) | 4 - 3 |
| 4.2.5 | Every 2,000 Track Miles (3200 km) | 4 - 3 |
| 4.2.6 | Annually) | 4 - 3 |
| 4.3 | Guide Wheel Equipment Lubrication | 4 - 4 |
| 4.3.1 | Guide Wheel Unit Lubrication | 4 - 4 |
| 4.4 | Guide Wheels | 4 - 5 |
| 4.4.1 | Allowable Wear | 4 - 5 |
| 4.4.1.1 | 198690 Steel Tread Guide Wheel | 4 - 5 |
| 4.4.1.2 | 198510 Rubber Tread Guide Wheel | 4 - 6 |
| 4.4.2 | Guide Wheel Check | 4 - 7 |
| 4.5 | Vehicle Wheels | 4 - 8 |
| 4.5.1 | Wheel Replacement | 4 - 8 |
| 4.5.2 | Tire Replacement | 4 - 8 |
| 4.6 | Bolt Torque Requirements | 4 - 8 |
| 4.7 | Hoses And Fittings | 4 - 9 |
| 4.7.1 | Inspection, Maintenance, Replacement And Installation | 4 - 9 |
| 4.7.2 | Hose Band | 4 - 10 |

4.1 Waste Disposal

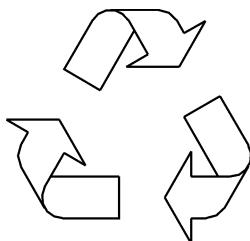

Dispose of waste properly. Improper disposal of waste can threaten the environment. The operation and maintenance of Harsco Rail equipment may involve the use of such items as hydraulic oil, engine oil, fuel, coolant, brake fluid, filters, batteries, etc.

Use leak proof containers when draining fluids. Do not pour waste onto the ground, down a drain, or into any water source. Inquire on the proper way to recycle or dispose of waste according to applicable Federal, State and/or local regulations.

4.2 Maintenance Schedule



■ **Re-torque vehicle wheel lug nuts, wheel spacer lug nuts and guide wheel lug nuts after first 50 miles of operation. Thereafter torque wheel nuts according to recommended maintenance schedule. Failure to heed this warning could result in severe bodily injury.**

4

4.2.1 Daily:

1. Inspect both front and rear guide wheel units for damaged or missing parts.
2. Check the mechanical locks for proper operation. If the locks do not operate properly, repair or replace the lock mechanism.
3. Check the hydraulic fluid reservoir to ensure that the oil level is full. If low, fill to the proper level with the correct fluid.
4. Visually inspect hydraulic hoses for leaks, wear, fraying, etc.
5. When the vehicle is operated on the track, listen for unusual noises. Unusual noises may indicate incorrectly lowered guide wheels, or damaged or missing parts. Pay attention to the quality of the ride. Check alignment if the vehicle crowds one side of the track instead of floating from side to side. See Adjustment - Guide Wheel Equipment Alignment Procedure.

4.2 Maintenance Schedule

4.2.2 Weekly

1. Check guide wheel equipment alignment. See Adjustments Section, Guide Wheel Equipment Alignment Procedure - Vehicle Track Test.
2. Inspect guide wheel tread and flanges for wear or damage. See Maintenance - Guide Wheel Allowable Wear.
3. Spin each guide wheel by hand, checking for ease of rotation or excessive play. If the guide wheel does not rotate properly, the bearings and spindle may be damaged. Replace the bearing/spindle assembly if necessary.
4. Inspect vehicle wheels, studs, lug nuts and tires for wear, damage, cuts, etc.
5. Tires properly inflated: Per the Wheel Modification Application Specifications (ranges from 80-95 PSI depending on application).
If no wheel modification, inflate to Vehicle Tire maximum recommended PSI.
6. Check all bolts for tightness. See Appendices, Appendix A - Torque Conversion Tables.

4

4.2.3 At 50 Vehicle Miles (80 Vehicle km):

1. At 50 vehicle miles (80 Km) after initial installation of vehicle wheels or when tires are rotated or new tires installed, torque wheel spacer lug nuts and vehicle wheel lug nuts to the recommended specifications. See the decal attached to the vehicle wheel for the recommended wheel bolt torque specifications. Thereafter refer to the wheel manufacturer's wheel torque specifications.

4.2.4 At 50 Track Miles (80 Vehicle km):

1. At 50 track miles (80 Km) after initial installation of the guide wheel unit, torque guide wheel lug nuts to the recommended specifications.

4.2.5 Every 2000 Track Miles (3200 Track km):

1. Lubricate the guide wheel equipment every 2000 track miles (maximum) or each time the vehicle is serviced. See Lubrication.
2. Lubricate the locking mechanism and other pivot points with light oil or a lubricating spray.
3. Torque guide wheel lug nuts to 90 lb-ft (122 N-m).

4.2.6 Annually:

1. Perform annual inspections as required by railroad rules and regulations.

4.3 Guide Wheel Unit Lubrication

Lubricate the guide wheel equipment every 2000 track miles (3200 track km) maximum or each time the vehicle is serviced.


4.3.1 Guide Wheel Unit Lubrication - See Figure 4-1

1. Apply the vehicle parking brake. Stop the engine. Turn the vehicle's ignition switch off.
2. Lubricate all grease fittings (1) using Mobil Special Moly or equivalent.
3. Lubricate the locking mechanism and other pivot points with a light weight oil or a lubricating spray.

Note: HR1500 Series C1 Guide Wheel Equipment utilizes sealed bearings in the guide wheels. Do not re-pack the guide wheel bearings. If the bearings are worn, replace the integral spindle assembly.

4

FIGURE 4-1
GUIDE WHEEL UNIT LUBRICATION

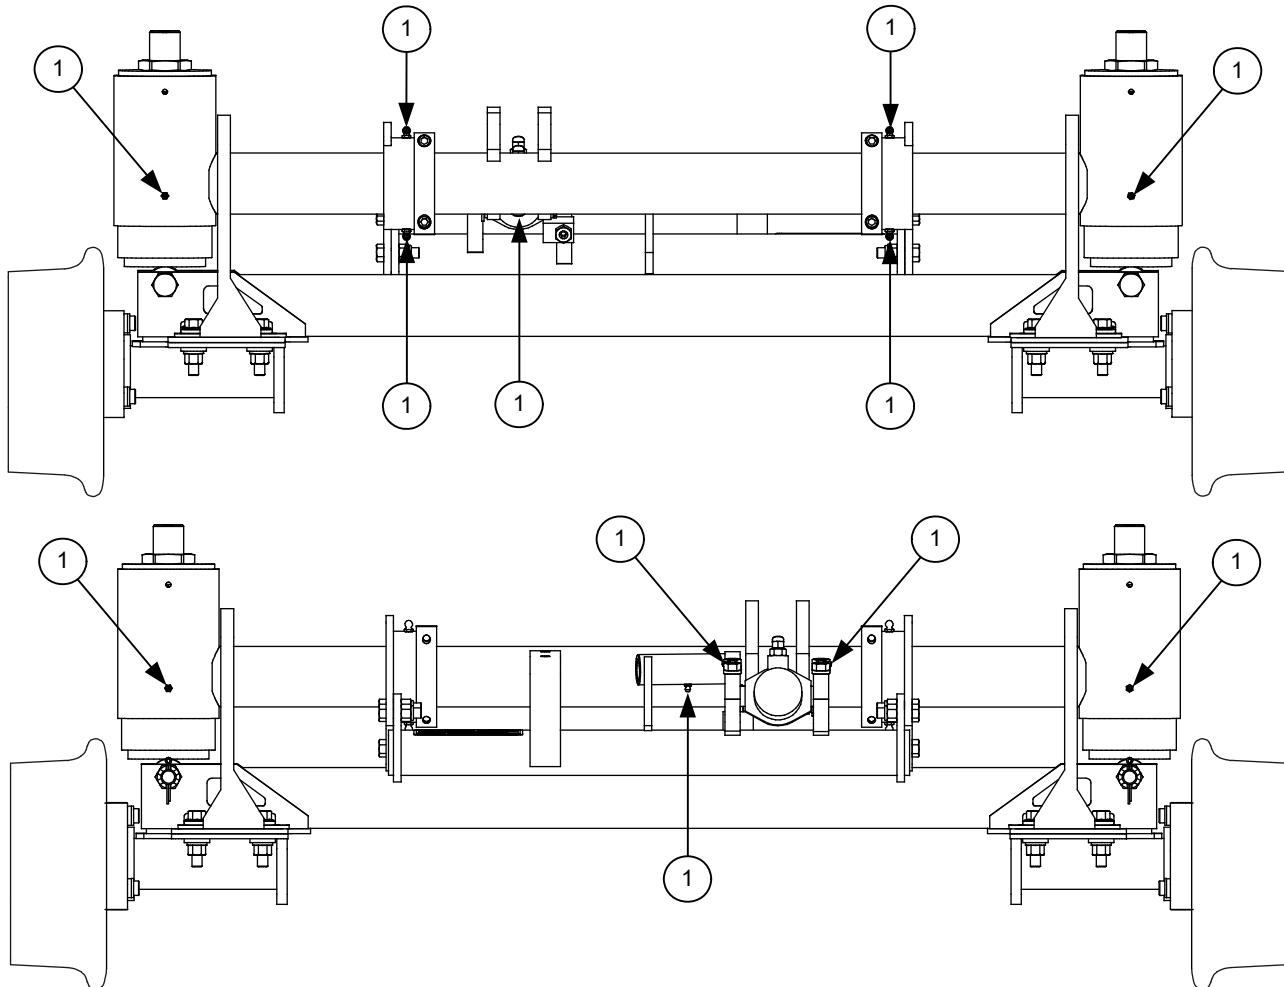

4.4 Guide Wheels

4.4.1 Allowable Wear

4.4.1.1 198690 Steel Tread Guide Wheel - See Figure 4-2




■ Replace any guide wheel immediately which shows damage and/or has worn more than the allowable limits. Failure to comply could result in derailment of the vehicle, and severe bodily injury.

1. Tools needed: Harsco Rail wheel caliper # M019889, or equivalent.
2. Measure the guide wheel flange at position "A" with the wheel caliper. The minimum allowable flange dimension at Position "A" is 1/4 inch (6.4 mm). If the wheel flange dimension is less than the allowable limit, replace the wheel immediately.
3. Measure the wheel tread at positions "B" and "C" with the wheel caliper. The minimum allowable tread dimension at Positions "B" and "C" is 1/4 inch (6.4 mm). If any of the guide wheel tread dimensions are less than the allowable limits, replace the wheel immediately.
4. The entire wheel must not have any gouges or cracks. If any of these are evident, replace the wheel immediately.

4

FIGURE 4-2
ALLOWABLE WEAR - 198690 STEEL TREAD GUIDE WHEEL

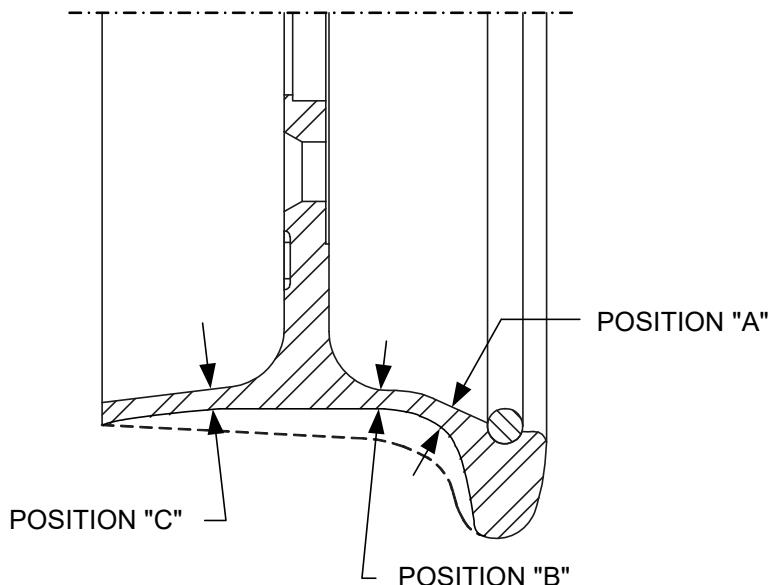

4.4 Guide Wheels

4.4.1 Allowable Wear

4.4.1.2 198510 Rubber Tread Guide Wheel - See Figure 4-3




- Replace any guide wheel immediately which shows damage and/or has worn more than the allowable limits. Failure to comply could result in derailment of the vehicle, and severe bodily injury.

1. Tools needed: Harsco Rail wheel caliper # M019889, or equivalent.
2. Measure the guide wheel flange at position "A" with the wheel caliper. The minimum allowable flange dimension at Position "A" is 1/4 inch (6.4 mm). If the guide wheel flange dimension is less than the allowable limit, replace the wheel immediately.
3. Measure the wheel tread at positions "B" and "C" with the wheel caliper. The minimum allowable tread dimension at Positions "B" and "C" is 11/16 inch (17.5 mm). If the guide wheel tread dimensions are less than the allowable limits, replace the wheel immediately.
4. The rubber tread must not have gouges. The aluminum wheel and/or flange must not have hairline cracks. If any of these are evident, replace the wheel immediately.

4

FIGURE 4-3
ALLOWABLE WEAR - 198510 RUBBER TREAD GUIDE WHEEL

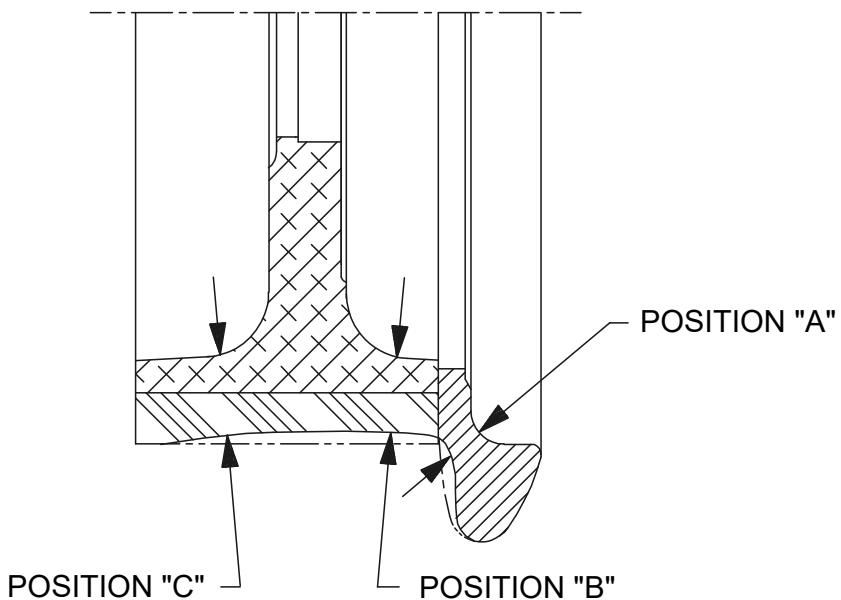

4.4 Guide Wheels

4.4.2 Guide Wheel Check

Guide wheels which do not run true on the tread and flange will vibrate and give a rough ride. If the vehicle vibrates and gives a rough ride on track, there may be foreign matter (dirt, rust, paint, etc.) between the wheel and hub, the spindle bearings may be worn, or the tread and flange of the wheel may be worn or damaged, causing a wobbling sensation. On wheels with rubber tread, there may also be foreign matter lodged between the mating surfaces of the steel flange and the aluminum wheel, giving the same sensation.

1. Verify that the five lug nuts are torqued properly to 90 lb-ft (122 N-m). Tighten if necessary.
2. Rubber Guide Wheels Only: Verify that the six 3/8 inch hex flange head cap screws securing flange to the rubber tread wheel are torqued properly to 40 lb-ft (55 N-m).
3. Track test the vehicle to verify whether the vibrations were caused by loose guide wheels or flanges.

If track testing shows that the vibrations persist, go on to the following steps.

4. Check the spindle bearing by grasping the guide wheel and working it from side to side. If there is excessive play in the spindle, remove the guide wheel and verify that the three M12 cap screws that secure the integral spindle to the stub axle are properly torqued to 60 lb-ft (81 N-m). Re-tighten if necessary.
5. Recheck the spindle bearing by grasping the spindle and working it from side to side. If there is excessive play in the spindle bearing, the bearings are worn. Replace the integral spindle.
6. Check for foreign material on the mating surfaces of the guide wheel and the hub. Remove any foreign material on these surfaces.
7. Rubber Guide Wheels Only: Remove the flange from the guide wheel and check for foreign material on the mating surfaces of the flange and the guide wheel. Remove any foreign material on these surfaces. Reinstall the flange on the guide wheel and torque the fasteners to 40 lb-ft (55 N-m).
8. Reinstall the guide wheel onto the spindle and hub. Torque wheel nuts to 90 lb-ft (122 N-m).
9. Track test the vehicle to verify whether the vibrations were caused by worn spindle bearings or foreign material between guide wheel/flange mounting surfaces. If track testing shows that the vibrations persist, the wheel may be sprung or bent. Replace the wheel.

4.5 Vehicle Wheels

4.5.1 Wheel Replacement



- Use replacement wheel(s) as recommended by Harsco Rail. Failure to comply could result in bodily injury and/or property damage.

Use replacement wheel rim(s) as recommended by Harsco Rail. The wheels and tires should be static balanced or balanced after installation on the vehicle for the best results. Torque vehicle wheel lug nuts to recommended specifications. See the decal attached to the vehicle wheel for the recommended wheel bolt torque specifications.

4.5.2 Tire Replacement



- Use replacement tires with the same rolling radius, tread width, ply rating, and load rating as recommended by the vehicle manufacturer. Failure to comply could result in bodily injury and/or property damage.

4

Replacement tires must have the same rolling radius, tread width, ply rating, and load rating as recommended by Harsco Rail. Using tires of equal diameter will help keep the speedometer reading and the guide wheel load accurate. Tires must have a minimum 5-1/2 inches of tread width. After installing new tire(s) on the vehicle, check guide wheel load. See the Adjustment Section - Guide Wheel Equipment Alignment Procedure.

Tires properly inflated: Per the Wheel Modification Application Specifications (ranges from 80-95 PSI depending on application).

If no wheel modification, inflate to Vehicle Tire maximum recommended PSI.

The wheels and tires should be static balanced or balanced after installation on the vehicle for the best results. Torque vehicle wheel lug nuts to recommended specifications. See the decal attached to the vehicle wheel for the recommended wheel bolt torque specifications.

4.6 Bolt Torque Requirements



- Check all bolts and nuts periodically, and keep them tightened to torque specified in charts in Appendix A. If bolt replacement becomes necessary, replace worn / broken bolt with equal grade bolt. Failure to comply could result in bodily injury and/or property damage.

Re-tighten all bolts and nuts periodically. Keep them tightened to the torque specified in the Bolt Torque Tables.

See Appendix A for bolt torque requirements tables and grade identification markings used by manufacturers.

4.7 Hoses and Fittings



- All hoses and fittings on this equipment must comply with SAE standard J1273 Recommended Practices For Hydraulic Hose Assemblies. Failure to comply to this standard could result in severe bodily injury.

4.7.1 Inspection, Maintenance, Replacement And Installation

The inspection, maintenance, replacement and installation of hydraulic hose assemblies and fittings on this equipment must conform with SAE Standard J1273 - Recommended Practices For Hydraulic Hose Assemblies.

Inspect all hydraulic hoses, fittings and components on the machine daily or every 10 operating hours for damage, wear leaks, etc. If any of these conditions are evident, repair or replace the component as necessary. Visually inspect for:

- Leaks in the hoses or at the fittings.
- Damaged, cut or rubbed hose cover.
- Bubbled, soft or loose hose cover.
- Exposed reinforcement.
- Kinked or twisted hoses.
- Hard, heat cracked or burned hose.
- Damaged or leaking fittings.
- Damaged or missing hose clamps.
- Any other signs of deterioration or damage.

4

If any of these conditions are evident, replace the hose or component as necessary.


When connecting hydraulic hoses and fittings, they must be tightened to the torque specified in the torque tables to prevent leaks. See Appendix "A" - Torque / Conversion Tables for hydraulic hoses and fittings torque requirements.

4.7.2 Hose Band - See Figure 4-4

Most Harsco Rail original and replacement hose assemblies have a hose band displaying the date of manufacture and the part number. See illustration for explanation of the hose band.

The hose assembly illustrated in the example was manufactured in January 2021 and is Harsco Rail part number 188662.

FIGURE 4-4
HOSE BAND

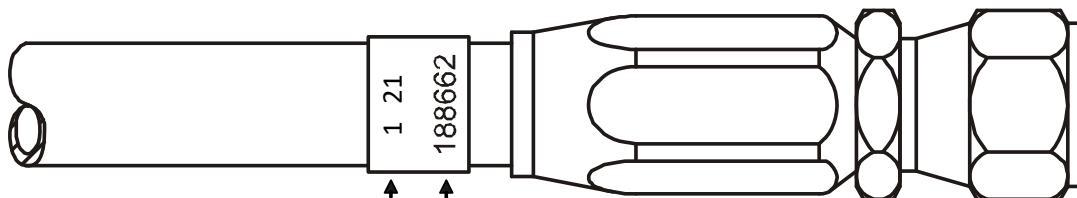

4

| MONTH | 1 | 21 | YEAR | LAST TWO DIGITS OF THE YEAR OF MANUFACTURE | 188662 HARSCO RAIL PART NUMBER |
|-----------|-----|----|------|--|--------------------------------------|
| JANUARY | = 1 | | | | |
| FEBRUARY | = 2 | | | | |
| MARCH | = 3 | | | | |
| APRIL | = 4 | | | | |
| MAY | = 5 | | | | |
| JUNE | = 6 | | | | |
| JULY | = 7 | | | | |
| AUGUST | = 8 | | | | |
| SEPTEMBER | = 9 | | | | |
| OCTOBER | = 0 | | | | |
| NOVEMBER | = N | | | | |
| DECEMBER | = D | | | | |

**SECTION 5 - TROUBLESHOOTING
TABLE OF CONTENTS**

| | |
|--|-------|
| 5.1 Troubleshooting Guide Wheel Equipment. | 5 - 2 |
|--|-------|

5.1 Troubleshooting Guide Wheel Equipment

| PROBLEM | PROBABLE CAUSE | POSSIBLE REMEDY |
|---|---|---|
| Guide wheel unit does not lower or raise. | Mechanical lock engaged. Hydraulic pump not operating. Hydraulic reservoir oil level low. Components bent, broken, worn, etc. Lack of lubrication. | Disengage mechanical. See Operation Section - Placing Vehicle On Track or Removing Vehicle From Track. Check operation of hydraulic pump. Fill reservoir to full level with recommended hydraulic oil. Replace components. Lubricate front and rear guide wheel units. See Maintenance Section - Lubrication. |
| 5 Guide wheel unit is difficult to lower or raise. | Vehicle over-loaded. Guide wheel load adjusted incorrectly. Hydraulic reservoir oil level low. Components bent, broken, worn, etc. Lack of lubrication. | Remove excess load from vehicle. Re-adjust. See Adjustment Section - Guide Wheel Equipment Alignment Procedure. Fill reservoir to full level with recommended hydraulic oil. Replace components. Lubricate front and rear guide wheel units. See Maintenance Section - Lubrication. |
| Lock mechanism not working properly. | Mud, slush, dirt, etc. in locking mechanism. Lack of lubrication. Components bent, broken, worn, etc. | Clean foreign material from locking mechanism. Lubricate front and rear guide wheel units. See Maintenance Section - Lubrication. Replace components. |

5.1 Troubleshooting Guide Wheel Equipment

| PROBLEM | PROBABLE CAUSE | POSSIBLE REMEDY |
|--|---|---|
| Vehicle pulls noticeably to the left or right when on track. | <p>Vehicle loaded heavy on one side.</p> <p>Steering lock not engaged.</p> <p>Vehicle wheels not aligned with steering lock when engaged.</p> <p>Guide wheels are not aligned with vehicle.</p> <p>Vehicle tires under inflated.</p> <p>Guide wheel equipment bent, broken, etc.</p> <p>Vehicle front tires out of alignment.</p> | <p>Move load to center of vehicle.</p> <p>Engage the steering lock.</p> <p>Re-align. See Adjustment Section - Guide Wheel Equipment Adjustment Procedure.</p> <p>Re-align. See Adjustment Section - Guide Wheel Equipment Alignment Procedure.</p> <p>Tires properly inflated: Per the Wheel Modification Application Specifications (ranges from 80-95 PSI depending on application). If no wheel modification, inflate to Vehicle Tire maximum recommended PSI.</p> <p>Repair or replace components.</p> <p>Check for pulling noticeably to the left or right when driven on the highway. Re-align front tires.</p> |
| Vehicle derails. | Guide wheel units, vehicle axle(s), etc. not aligned with vehicle frame. | Check alignment. See Adjustment Section - Guide Wheel Equipment Alignment Procedure. |
| Unusual or excessive noise when traveling on track. | <p>Guide wheel spindle bearings worn.</p> <p>Guide wheel unit flanging hard to the right or left.</p> | <p>Replace bearing/spindle assembly.</p> <p>Re-align. See Adjustment Section - Guide Wheel Equipment Alignment Procedure.</p> |

5.1 Troubleshooting Guide Wheel Equipment

| PROBLEM | PROBABLE CAUSE | POSSIBLE REMEDY |
|--|---|---|
| 5 Vibration felt in the vehicle when traveling on track. | Guide wheel unit mounting hardware loose. Guide wheel spindle bearings worn. Guide wheel worn or damaged. Vehicle rim bent. Vehicle tires out of balance. Wheel spacer lug nuts and or vehicle lug nuts loose. | Tighten all bolts to recommended torque. Replace bearing/spindle assembly. Replace guide wheel. Replace rim. See Maintenance Section - Vehicle Wheels. Balance tires. See Maintenance Section - Tire Replacement. Torque wheel spacer lug nuts and vehicle lug nuts to recommended specifications. See maintenance Section. |
| Vibration felt in the vehicle when traveling on road. | Guide wheel unit mounting hardware loose. Guide wheel units are not raised and locked in "highway" position. Vehicle wheel bent. Vehicle tires out of balance. Wheel spacer lug nuts and or vehicle lug nuts loose. | Tighten all bolts to recommended torque. STOP IMMEDIATELY. Make sure all guide wheels are locked and secured in "highway" position. Replace wheel. See Maintenance Section - Vehicle Wheels. Balance tires. See Maintenance Section - Tire Replacement. Torque wheel spacer lug nuts and vehicle lug nuts to recommended specifications. See maintenance Section. |

SECTION 6 - PARTS
TABLE OF CONTENTS


| | |
|---|--------|
| Serial Numbers | 6 - 2 |
| Instructions For Ordering Parts | 6 - 3 |
| Front Guide Wheel Unit - 3421716 | |
| With Steel Tread And Manual Lock | 6 - 5 |
| Guide Wheel, Steel Tread - 200854 | 6 - 6 |
| HR1500C1 Guide Wheel Unit - 3421539 | 6 - 7 |
| Integral Spindle Group - 198689 | 6 - 10 |
| Rear Guide Wheel Unit - 3421717 | |
| With Steel Tread And Manual Lock | 6 - 11 |
| Guide Wheel, Steel Tread - 200854 | 6 - 6 |
| HR1500C1 Guide Wheel Unit - 3421539 | 6 - 7 |
| Integral Spindle Group - 198689 | 6 - 10 |
| Front Guide Wheel Unit - 3421723 | |
| With Rubber Tread And Manual Lock | 6 - 12 |
| Guide Wheel, Rubber Tread - 3417921 | 6 - 13 |
| HR1500C1 Guide Wheel Unit - 3421539 | 6 - 7 |
| Integral Spindle Group - 198689 | 6 - 10 |
| Rear Guide Wheel Unit - 3421724 | |
| With Rubber Tread And Manual Lock | 6 - 14 |
| Guide Wheel, Rubber Tread - 3417921 | 6 - 13 |
| HR1500C1 Guide Wheel Unit - 3421539 | 6 - 7 |
| Integral Spindle Group - 198689 | 6 - 10 |
| Steering Lock Groups | 6 - 14 |
| Rail Sweep Group - 3423648 | 6 - 15 |
| Rail Sweep Assembly - Right - Front / Left Rear - 3423601 | 6 - 16 |
| Rail Sweep Assembly - Left - Front / Right Rear - 3423608 | 6 - 17 |
| Emergency Hand Pump Group - 3423866 | 6 - 18 |
| Emergency Hand Pump Group - 5008444 | 6 - 20 |
| In Cab Actuation Switch Plate Kit - 3424210 | 6 - 22 |
| Guide Wheel Load Jack - 3422565 | 6 - 23 |
| Grease Guard Group - Front - 3427479 | 6 - 24 |
| Grease Guard Group - Rear - 3424686 | 6 - 25 |
| Decal Group - 3421918 | 6 - 26 |
| Hydraulic Pump - 3422107 | 6 - 27 |

| | |
|--|--------|
| Hydraulic Power Pack Group - 3423774 | 6 - 28 |
| Hydraulic Power Pack Group, with Remote - 3425559 | 6 - 32 |
| Hydraulic Power Pack Group, Front or Rear Only - 3427543 | 6 - 36 |
| Motor Control Assembly - 3422216 | 6 - 40 |
| Hydraulic Power Pack Group - 3427161 | 6 - 42 |
| Hydraulic Manifold Assembly - 3427159 | 6 - 46 |

Serial Numbers - (See Figures 1 and 2)


When this manual is received, complete the following record from the serial number tag on the rear guide wheel unit. Always mention these factory serial numbers when calling or writing about the unit. The serial number tag is located on the upper structure of the unit.

FIGURE 1
FRONT UNIT SERIAL NUMBER PLATE

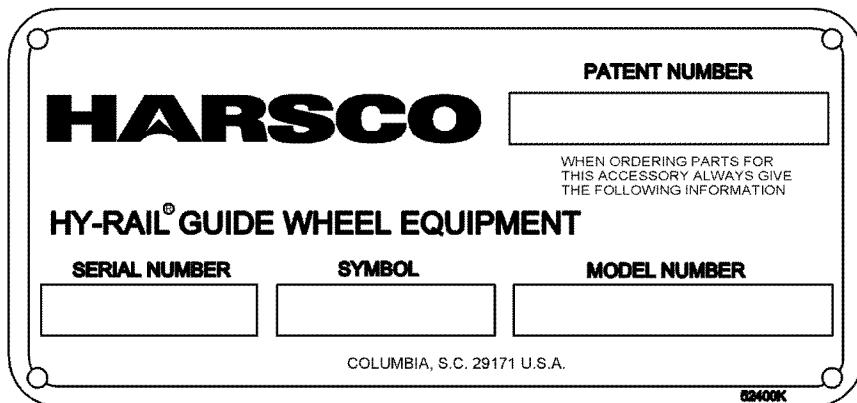

6


FIGURE 2
REAR UNIT SERIAL NUMBER PLATE

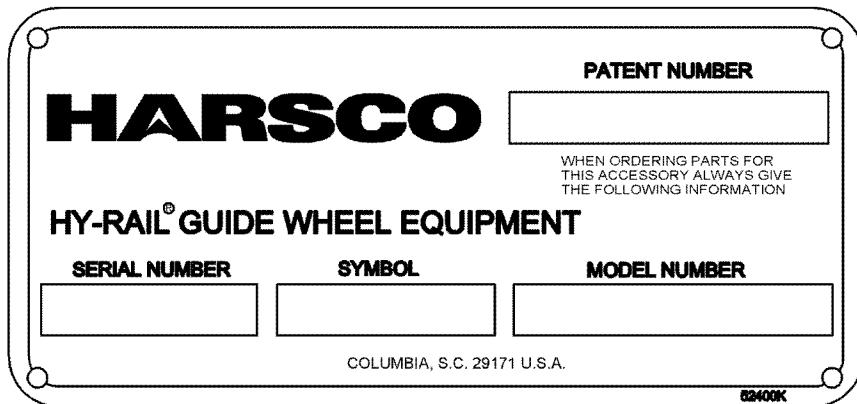

Instructions For Ordering Parts

1. Each application consists of required groups, optional groups required and accessory group options. These are the group numbers that were supplied with, or that were available for the unit.
2. Locate the appropriate group numbers in the Parts Section to find the individual parts required.
3. Front - rear and left - right are determined from the operator's position.
4. Assemblies: Items listed in CAPITALS are assemblies which include all parts listed immediately following and indented to the right. When assemblies can be used, always order them to save work of fitting separate parts.
5. For convenience in ordering, parts are listed by item number, part number, description, and quantity in each assembly or group. If in doubt as to any part wanted, send full description, sketch, or send the old part with the order.
6. To insure prompt and correct shipment of parts on orders, always give:
 - a. Quantity of each part wanted.
 - b. Part number of each part as shown in this book. Include any prefix and suffix letters.
 - c. Description of each part as shown in this book.
 - d. Factory serial numbers recorded above.
 - e. Purchase order number (if required).
 - f. Preferred method of shipment.
7. All parts are shipped F.O.B. factory, transportation charges to be paid by customer. Terms to be determined by the Credit Department.





Notes:

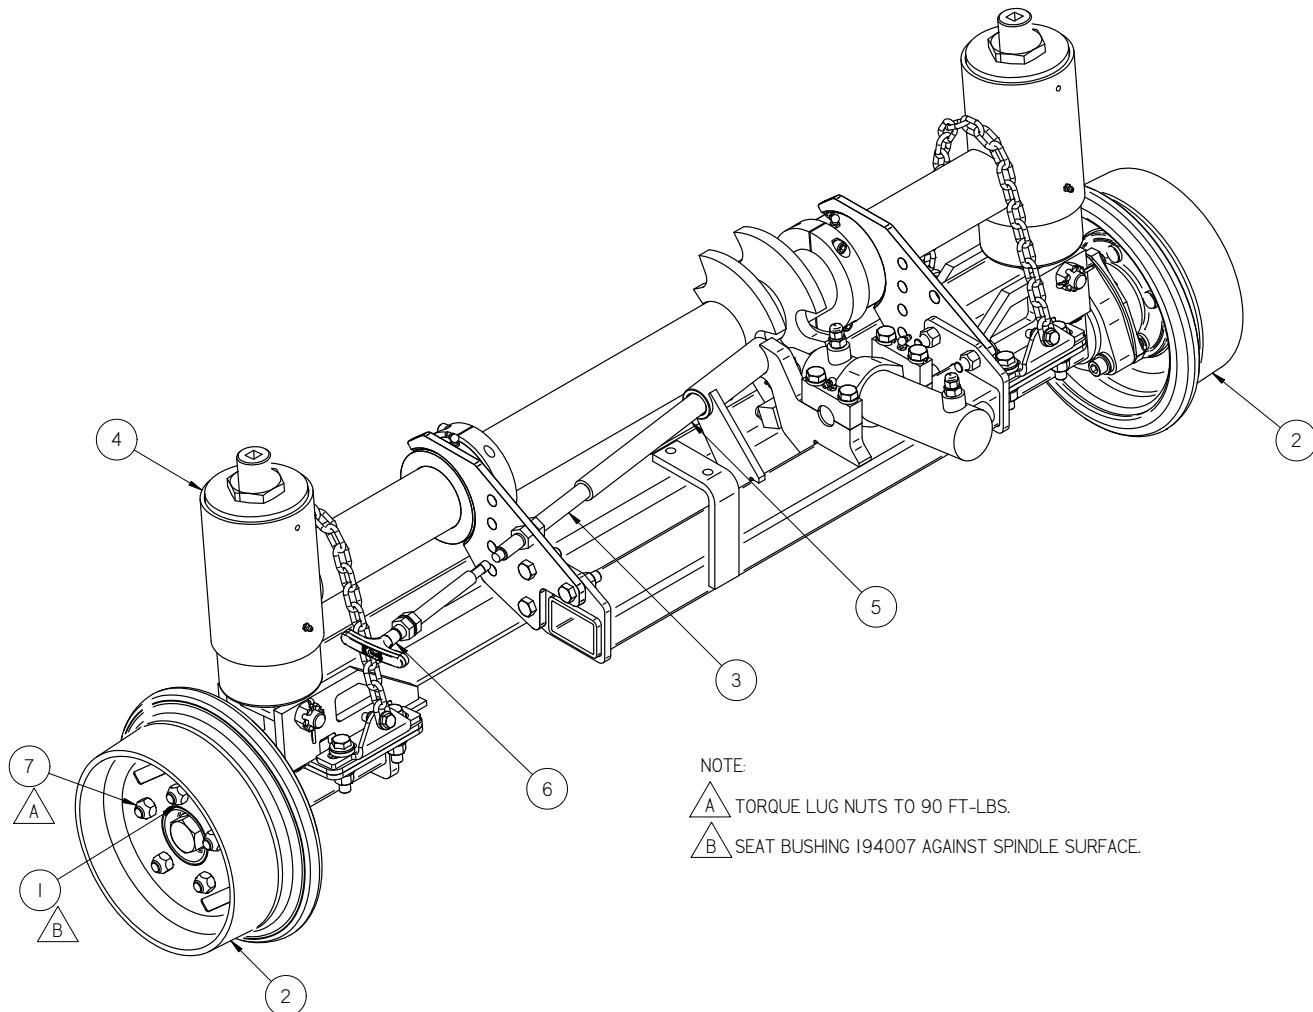3421716 Front Guide Wheel Unit
With Steel Tread And Manual Lock

6

| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|---|-----|
| 1 | 194007 | Insulating Bushing | 2 |
| 2 | 200854 | Wheel Assembly | 2 |
| 3 | 203253 | Seal | 1 |
| 4 | 3421539 | HR1500 C1 Pilot Unit | 1 |
| 5 | 3421706 | Pin | 1 |
| 6 | 3421707 | Control Cable 36" | 1 |
| | 5008461 | Control Cable Handle (Replacement T-Handle) | 1 |
| 7 | F010448 | Wheel Nut, Hex 1/2-20 | 10 |


200854 - Guide Wheel, Steel Tread

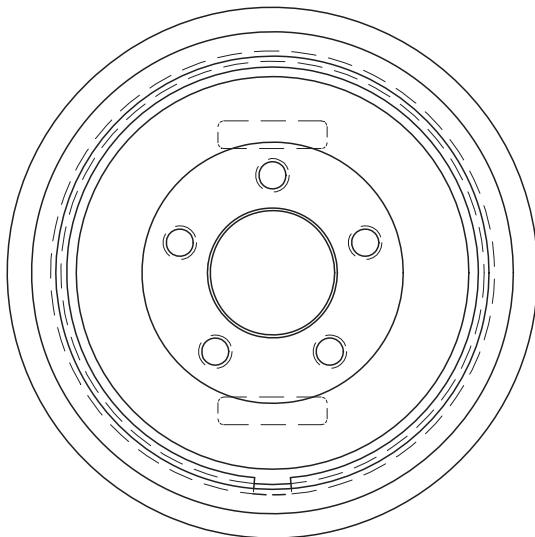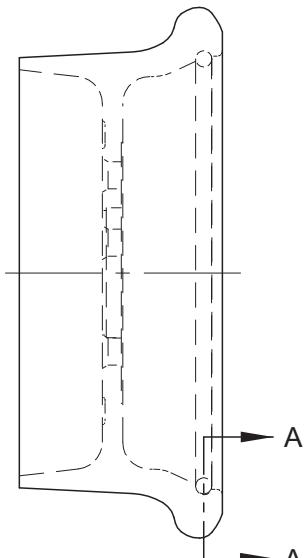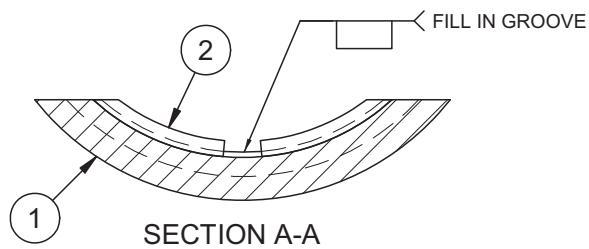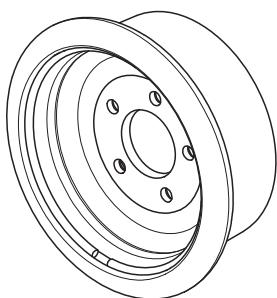



6

| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|-------------|-----|
| 1 | 193859 | Wheel | 1 |
| 2 | 200853 | Ring | 1 |


3421539 - HR1500C1 Guide Wheel Unit

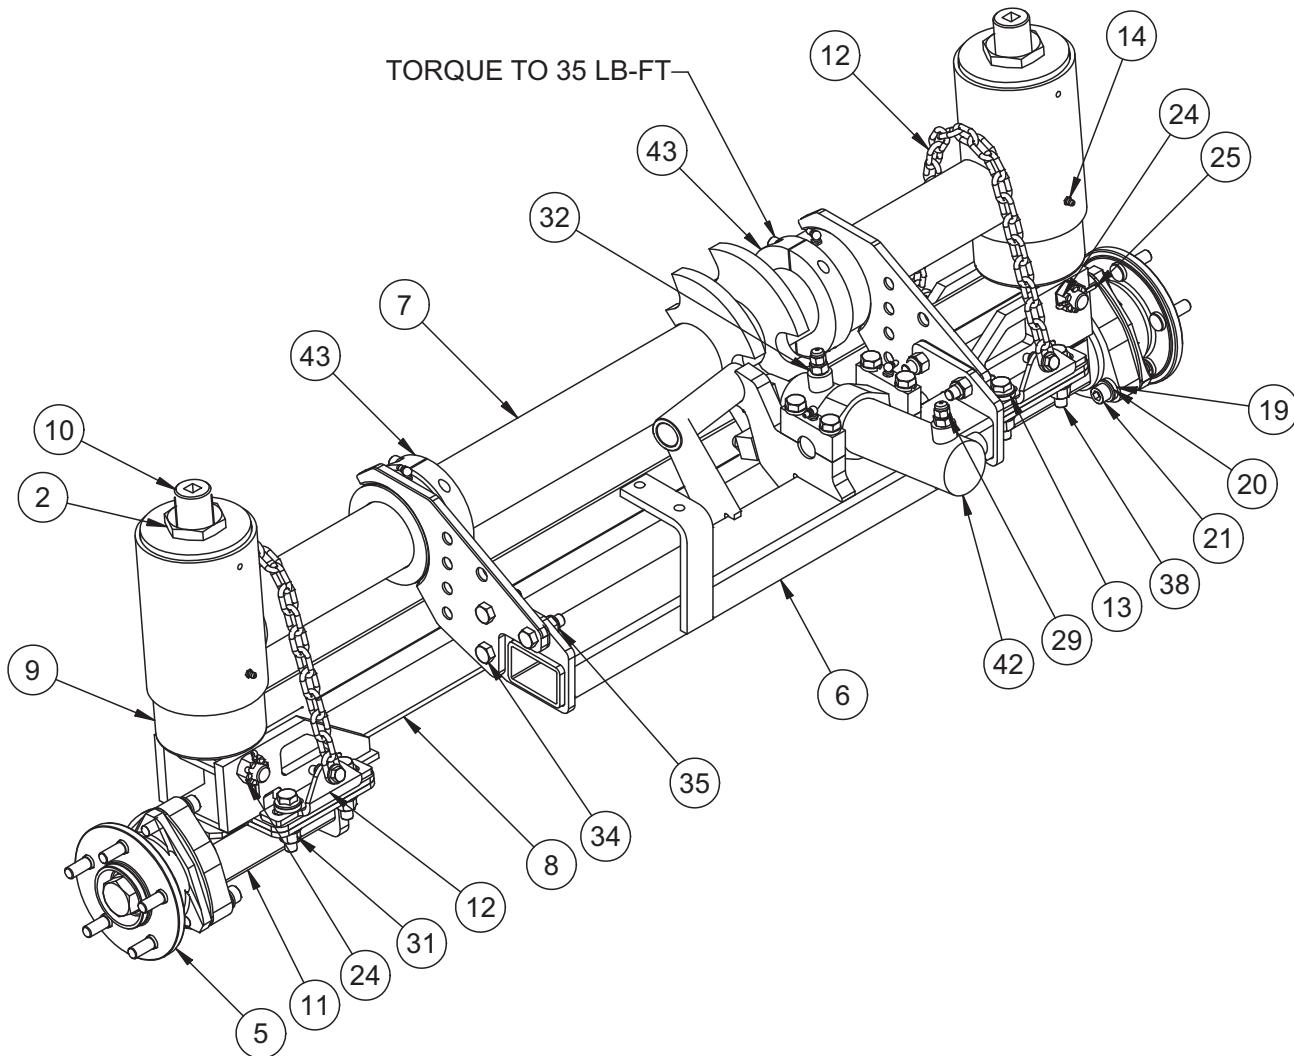

3421539 - HR1500C1 Guide Wheel Unit

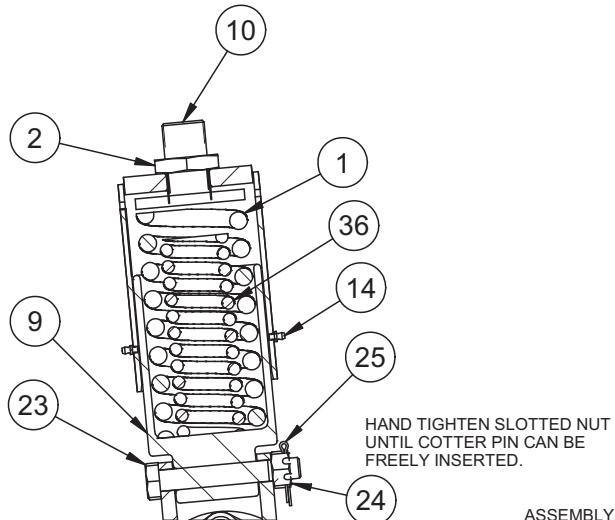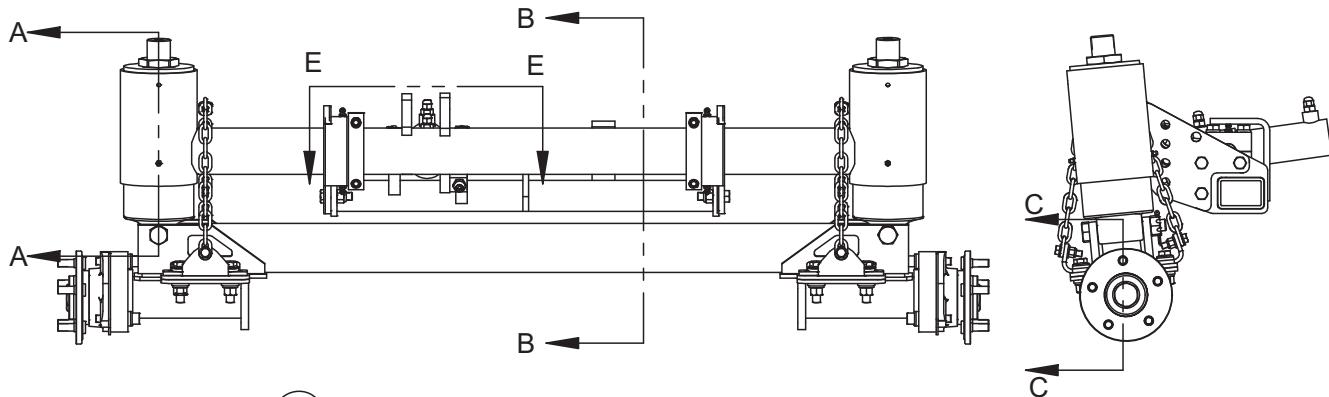


ASSEMBLY TORQUE 100 LB-FT

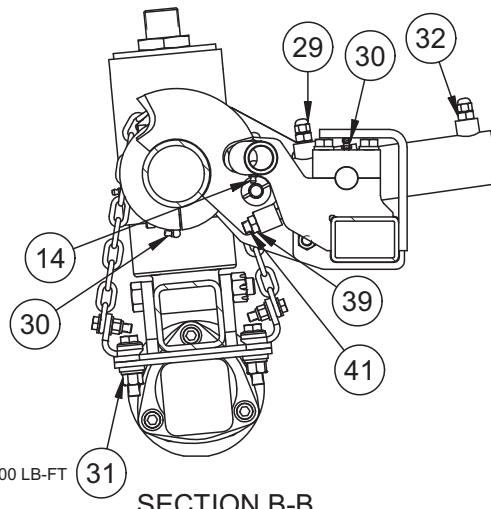


SECTION A-A

6

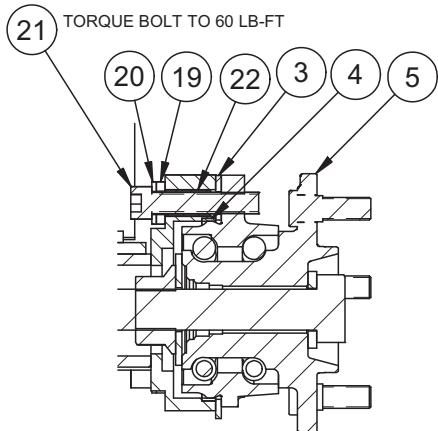

SECTION C-C

SECTION VIEW OF SPINDLE AND HUB



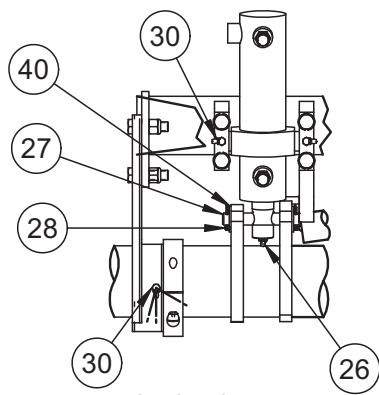


SECTION E-E

3421539 - HR1500C1 Guide Wheel Unit

| ITEM | PART NO | DESCRIPTION | QTY |
|------|------------|--|-----|
| 1 | 204104 | COIL SPRING | 2 |
| 2 | 108560 | NUT | 2 |
| 3 | 200415 | PLATE | 2 |
| 4 | 200417 | BUSHING | 2 |
| 5 | 198689 | INTEGRAL SPINDLE GROUP | 2 |
| 6 | 3420896 | UPPER STRUCTURE | 1 |
| 7 | 3421211 | CROSS TUBE ASSEMBLY | 1 |
| 8 | 3421468 | AXLE ASSEMBLY | 1 |
| 9 | 5060657 | LOWER SPRING CELL MACHINING | 2 |
| 10 | 198836 | ADJUSTING STUD | 2 |
| 11 | 3411970 | STUB AXLE ASSEMBLY | 2 |
| 12 | 5091061 | AXLE CHAIN STRAP, HR1500C1 | 2 |
| 13 | F024047 | WASHER, FLAT, 1/2", HARDENED | 16 |
| 14 | F008014 | HYDRAULIC FITTING | 5 |
| 15 | NOT USED | | |
| 16 | NOT USED | | |
| 17 | NOT USED | | |
| 18 | NOT USED | | |
| 19 | 3415867 | WASHER, 12MM INSULATED | 6 |
| 20 | 3415900 | WASHER, 12MM HARDENED | 6 |
| 21 | 5055010 | SKT HD CS M12-1.75 X 60 CLASS 12.9 | 6 |
| 22 | 3415895 | BUSHING, STUB AXLE INSULATING | 6 |
| 23 | 200330 | HHCS .75-10 X 5.0 LG W/CP HOLE | 2 |
| 24 | F002485 | NUT, SLOTTED HEX, 3/4-10, GD5, ZP | 2 |
| 25 | F003038 | 5/32 X 1 3/4 COTTER PIN | 2 |
| 26 | F004252 | ZERK STR X 02NPT | 1 |
| 27 | 203966 | PIN | 1 |
| 28 | F001104 | 1/8 X 1 COTTER PIN | 2 |
| 29 | F014689 | 4 JIC CAP | 2 |
| 30 | F010722 | ZERK EL90 X .25-28 | 6 |
| 31 | 201754 | DISK-LOCK NUT - 1/2 | 8 |
| 32 | F022230 | STR 4X6SAE | 2 |
| 33 | NOT USED | | |
| 34 | F023674 | HD CAP SCR1/2-13X1-3/4GR8 | 6 |
| 35 | 252275-813 | NUT, TOP LK, 1/2-13, GRC | 6 |
| 36 | 3423424 | COIL SPRING | 2 |
| 37 | NOT USED | | |
| 38 | F021280 | HHD CAP SCR1/2-20X2-1/4GR8 | 8 |
| 39 | 150964-9 | NUT, JAM, 1/2-13, GD5, ZP | 1 |
| 40 | F009425 | WASHER, FLAT, 5/8", SAE, ZP | 2 |
| 41 | 5032681 | 1/2 -13 X 2 SKT HD CS | 1 |
| 42 | 193904 | CYLINDER, HYD, 2.00X1.12X6.00 | 1 |
| | 201310 | SEAL KIT (Columbus) | 1 |
| | 5045988 | SEAL KIT (Aurelius) | 1 |
| 43 | G8378Y03 | AXLE COLLAR (2 PC) | 2 |

198689 - Integral Spindle Group

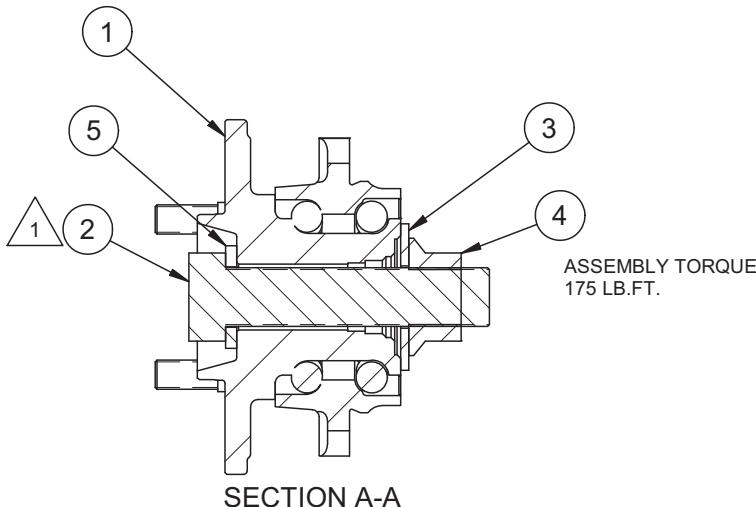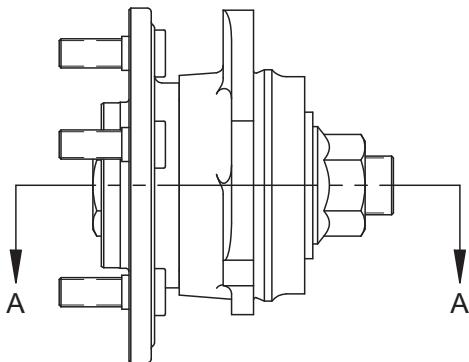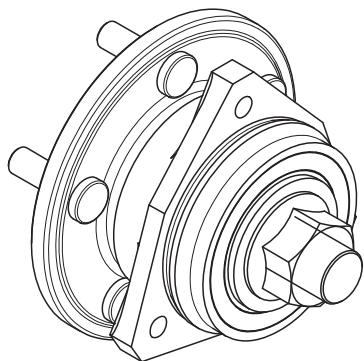


1 APPLY NO-OX-ID (200898) TO THREADS
WHEN ASSEMBLING.


ASSEMBLY TORQUE
175 LB.FT.

SECTION A-A

| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|------------------------------------|-----|
| 6 | | | |
| 1 | 186139 | INTEGRAL SPINDLE | 1 |
| 2 | 187193 | HEX HEAD CAP SCREW | 1 |
| 3 | 187244 | 1.00 WASHER, HARDENED | 1 |
| 4 | 3419581 | HEX FLG LOCK NUT 1.00-14 UNF | 1 |
| 5 | F008727 | WASHER | 1 |

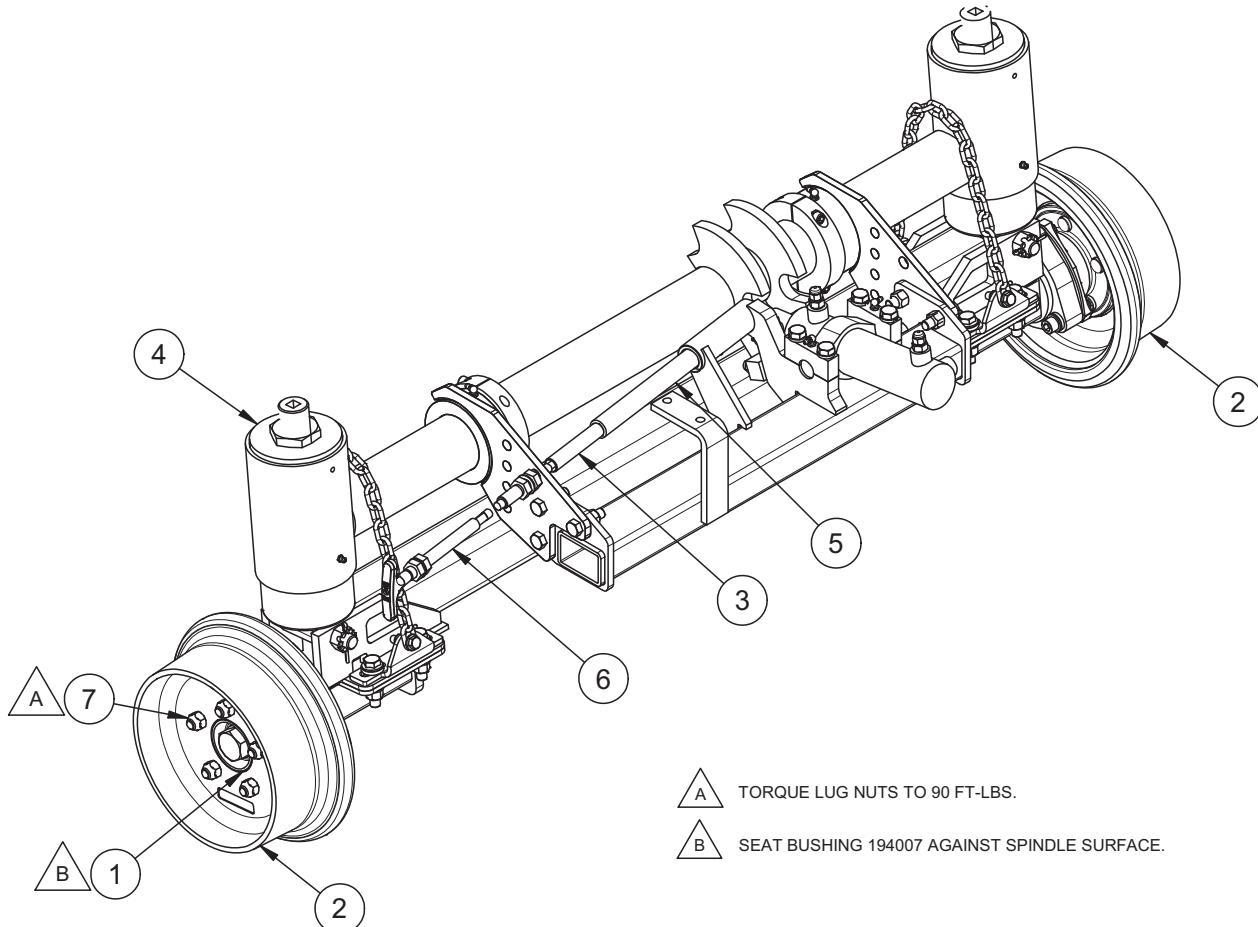3421717 Rear Guide Wheel Unit
With Steel Tread And Manual Lock



| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|---|-----|
| 1 | 194007 | Bushing | 2 |
| 2 | 200854 | Wheel Assembly | 2 |
| 3 | 203253 | Seal | 1 |
| 4 | 3421539 | HR1500 Series C1 Pilot Unit | 1 |
| 5 | 3421706 | Pin | 1 |
| 6 | 3421708 | Control Cable 36" | 1 |
| | 5008461 | Control Cable Handle (Replacement T-Handle) | 1 |
| 7 | F010448 | Wheel Nut, Hex 1/2-20 | 10 |

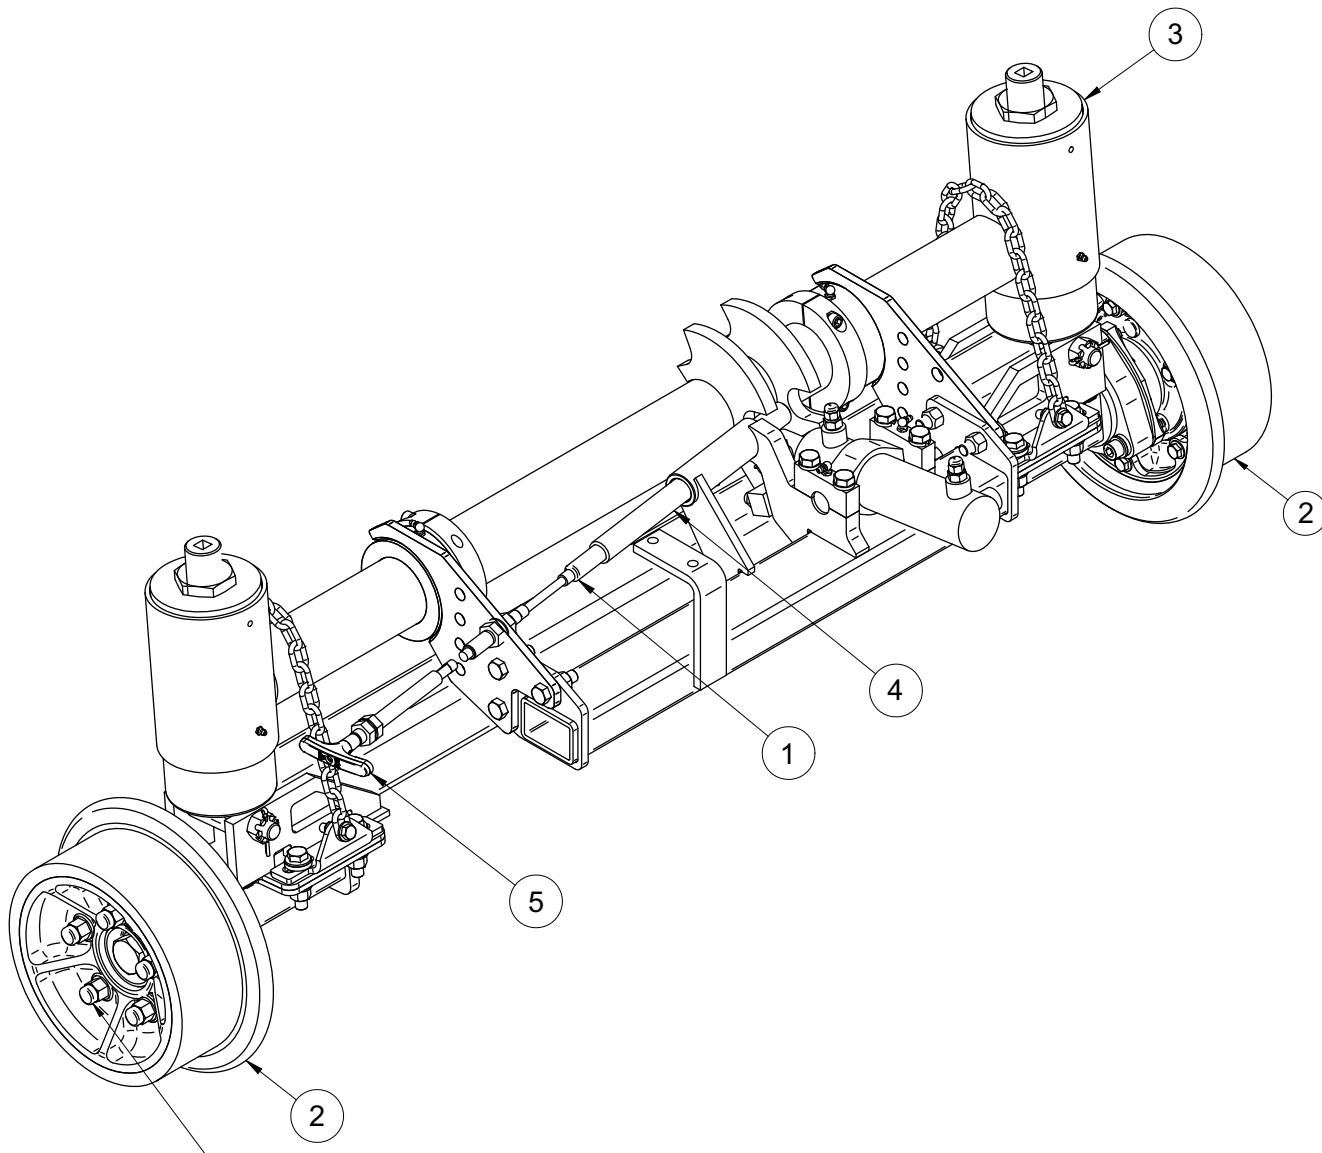**3421723 Front Guide Wheel Unit
With Rubber Tread And Manual Lock**


TORQUE LUG NUTS TO 90 FT LBS.

| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|---|-----|
| 1 | 203253 | Seal | 1 |
| 2 | 3417921 | Rubber Tread | 2 |
| 3 | 3421539 | HR1500 Series C1 Pilot Unit | 1 |
| 4 | 3421706 | Pin | 1 |
| 5 | 3421707 | Control Cable, 36" | 1 |
| | 5008461 | Control Cable Handle (Replacement T-Handle) | 1 |

3417921 Guide Wheel, Rubber Tread

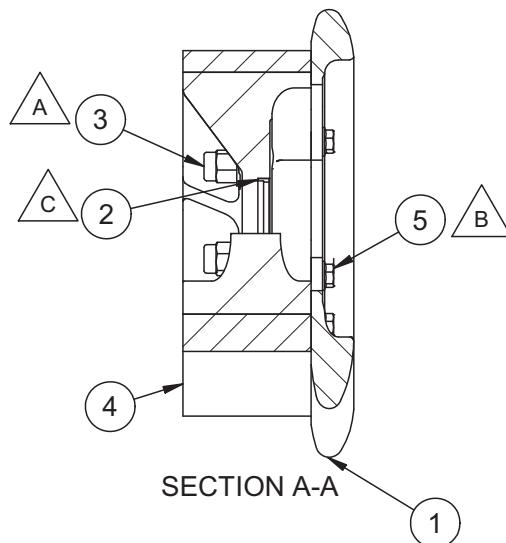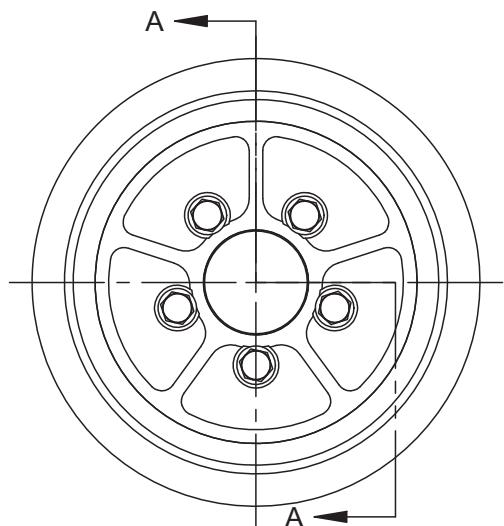


- A TORQUE TO 90 FT - LBS
- B TORQUE TO 40 FT - LBS
- C SEAT BUSHING 194007 AGAINST SPINDLE MOUNTING SURFACE.

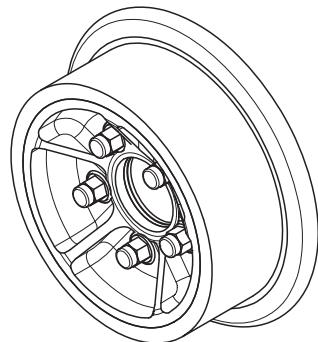

6

| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|--|-----|
| 1 | 136133 | Flange | 1 |
| 2 | 194007 | Insulating Bushing | 1 |
| 3 | 196492 | Lug Nut..... | 5 |
| 4 | 3411039 | Rubber Tread | 1 |
| 5 | F023255 | HHD Cap Scr .375-16 X 1.00 GR 5 ZP | 6 |

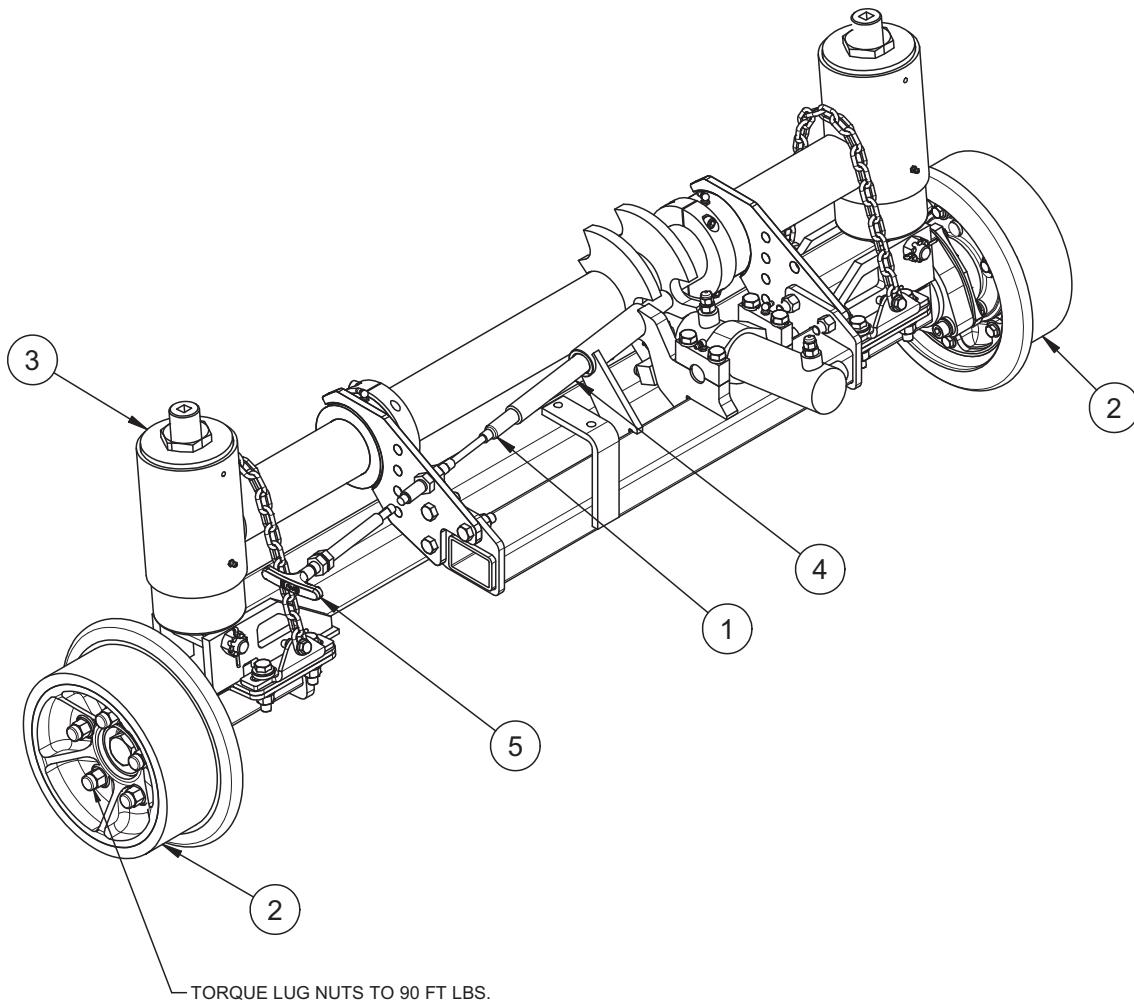
**3421724 Rear Guide Wheel Unit
With Rubber Tread And Manual Lock**

| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|---|-----|
| 1 | 203253 | Seal | 1 |
| 2 | 3417921 | Rubber Tread | 2 |
| 3 | 3421539 | HR1500 Series C1 Pilot Unit | 1 |
| 4 | 3421706 | Pin | 1 |
| 5 | 3421708 | Control Cable, 90" | 1 |
| | 5008461 | Control Cable Handle (Replacement T-Handle) | 1 |

Steering Lock Groups


Individual steering lock components are not available as repair parts. Steering lock groups are sold as complete replacement groups only. See Harsco Rail Supplemental Manual, 5130122 - SUP OPR & PRT MAN HR1500 SERIES C1 - Vehicle Application charts to find the correct steering lock group applicable to your make, model and year of vehicle.

3423648 Rail Sweep Group

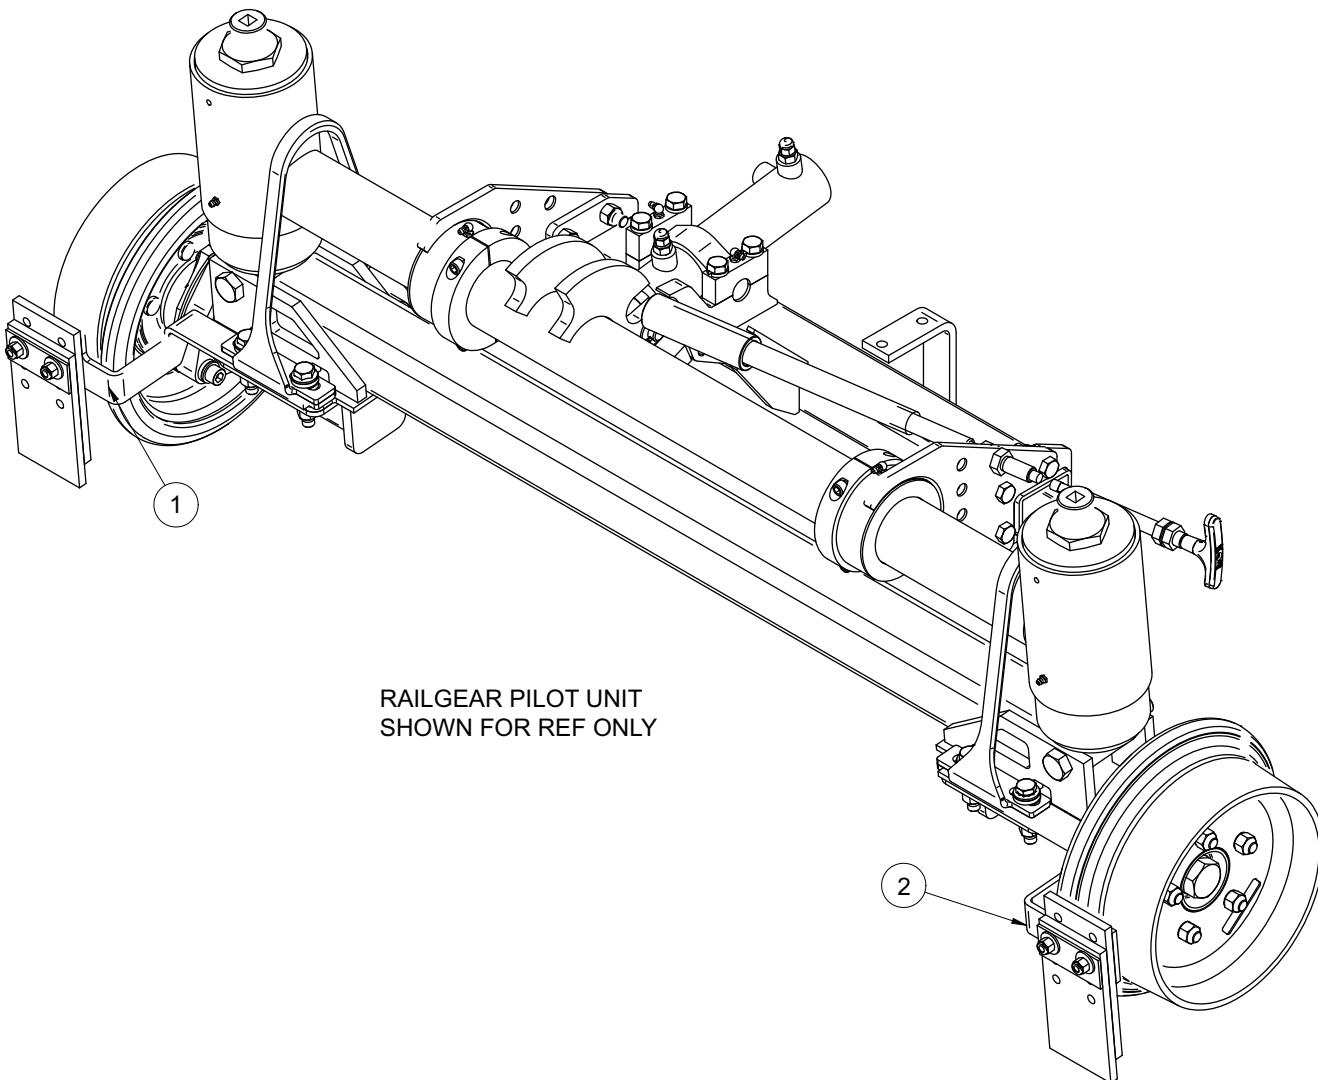

| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|--|-----|
| | 3423648 | RAIL SWEEP GROUP | 1 |
| 1 | 3423601 | Rail Sweep Assembly, Right - Front / Left - Rear | 1 |
| 2 | 3423608 | Rail Sweep Assembly, Left - Front / Right - Rear | 1 |


3423601 Rail Sweep Assembly, Right - Front / Left - Rear

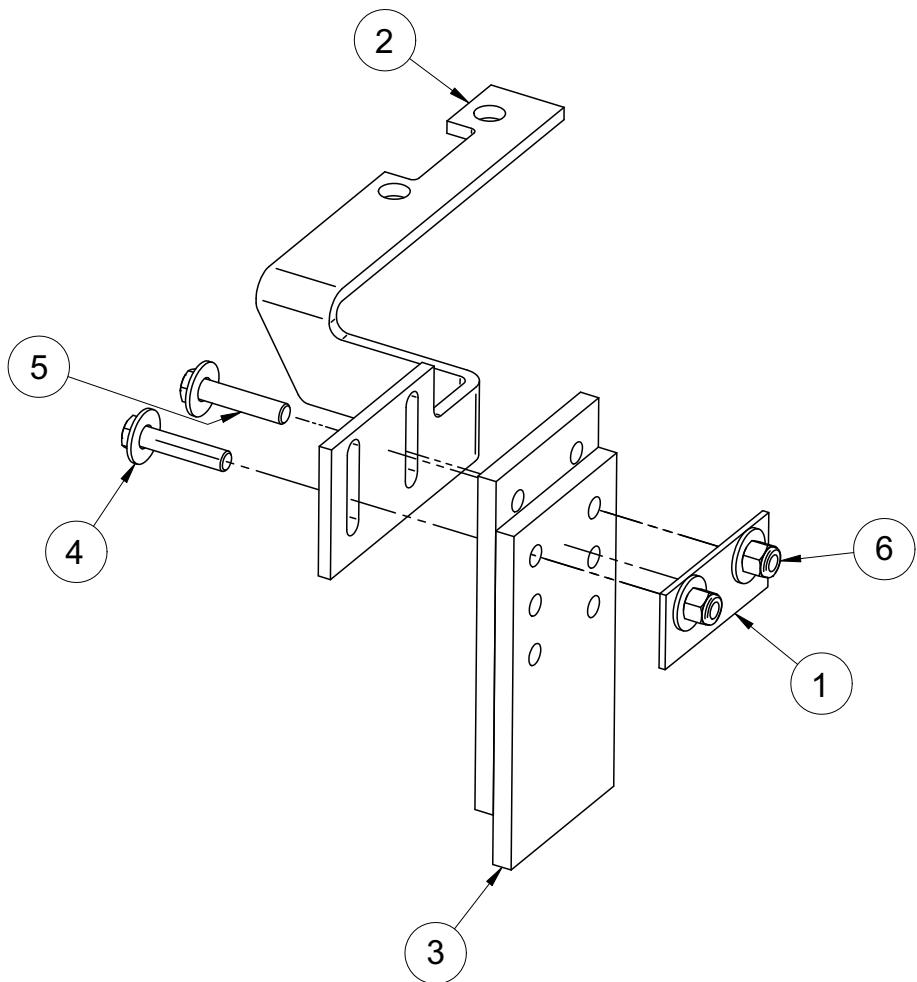

6


| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|---|-----|
| | 3423601 | RAIL SWEEP ASSEMBLY, RIGHT - FRONT / LEFT - REAR. | 1 |
| 1 | 118581 | Rail Sweep Plate | 1 |
| 2 | 3421077 | Rail Sweep Bracket, Right - Front / Left - Rear | 1 |
| 3 | 3423618 | Rail Sweep | 2 |
| 4 | F001115 | Washer, Flat, 3/8" USS ZP | 4 |
| 5 | F001885 | Hex Hd Cp Scr 3/8-16 x 1-3/4" GR 5 | 2 |
| 6 | F011998 | 3/8-16 Elastic Stop Nut | 2 |

3423608 Rail Sweep Assembly, Left - Front / Right - Rear

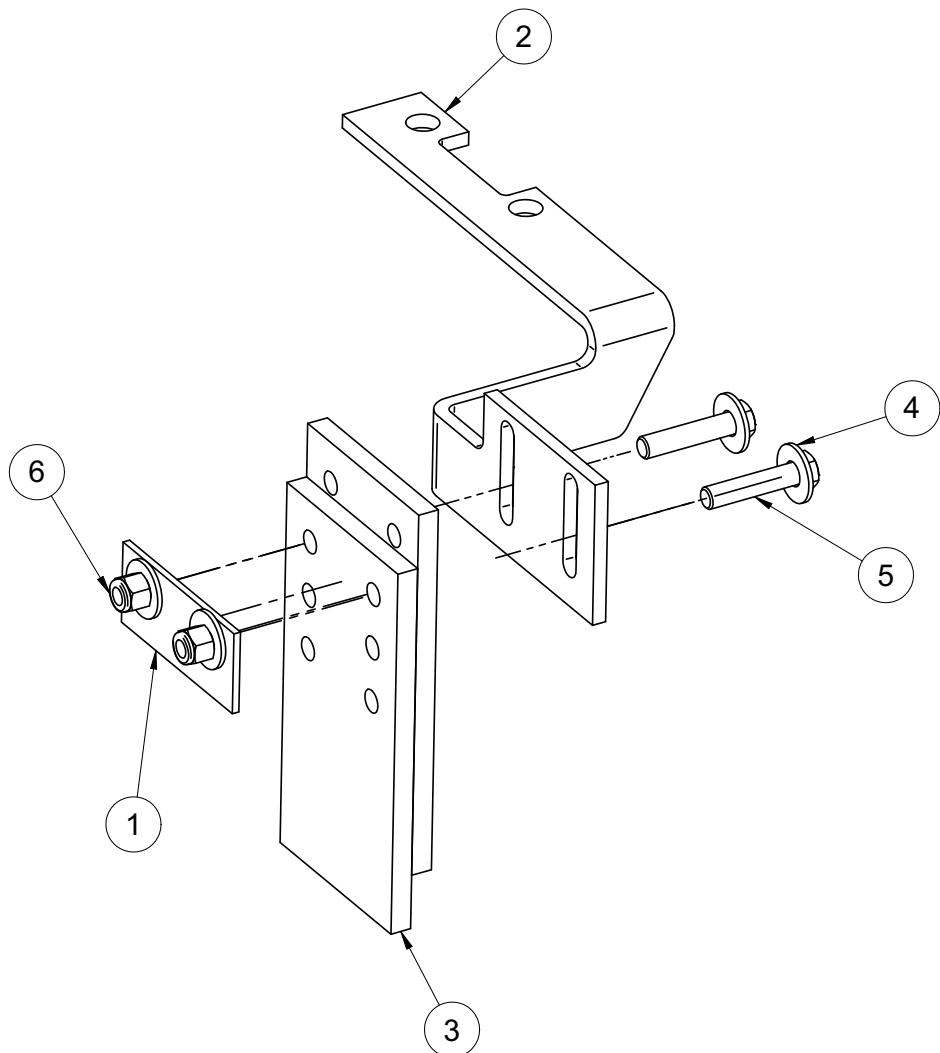

| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|---|-----|
| | 3423608 | RAIL SWEEP ASSEMBLY, LEFT - FRONT / RIGHT - REAR. | 1 |
| 1 | 118581 | Rail Sweep Plate | 1 |
| 2 | 3421078 | Rail Sweep Bracket, Left - Front / Right - Rear | 1 |
| 3 | 3423618 | Rail Sweep | 2 |
| 4 | F001115 | Washer, Flat, 3/8" USS ZP | 4 |
| 5 | F001885 | Hex Hd Cp Scr 3/8-16 x 1-3/4" GR 5 | 2 |
| 6 | F011998 | 3/8-16 Elastic Stop Nut | 2 |


3423866 Emergency Hand Pump Group

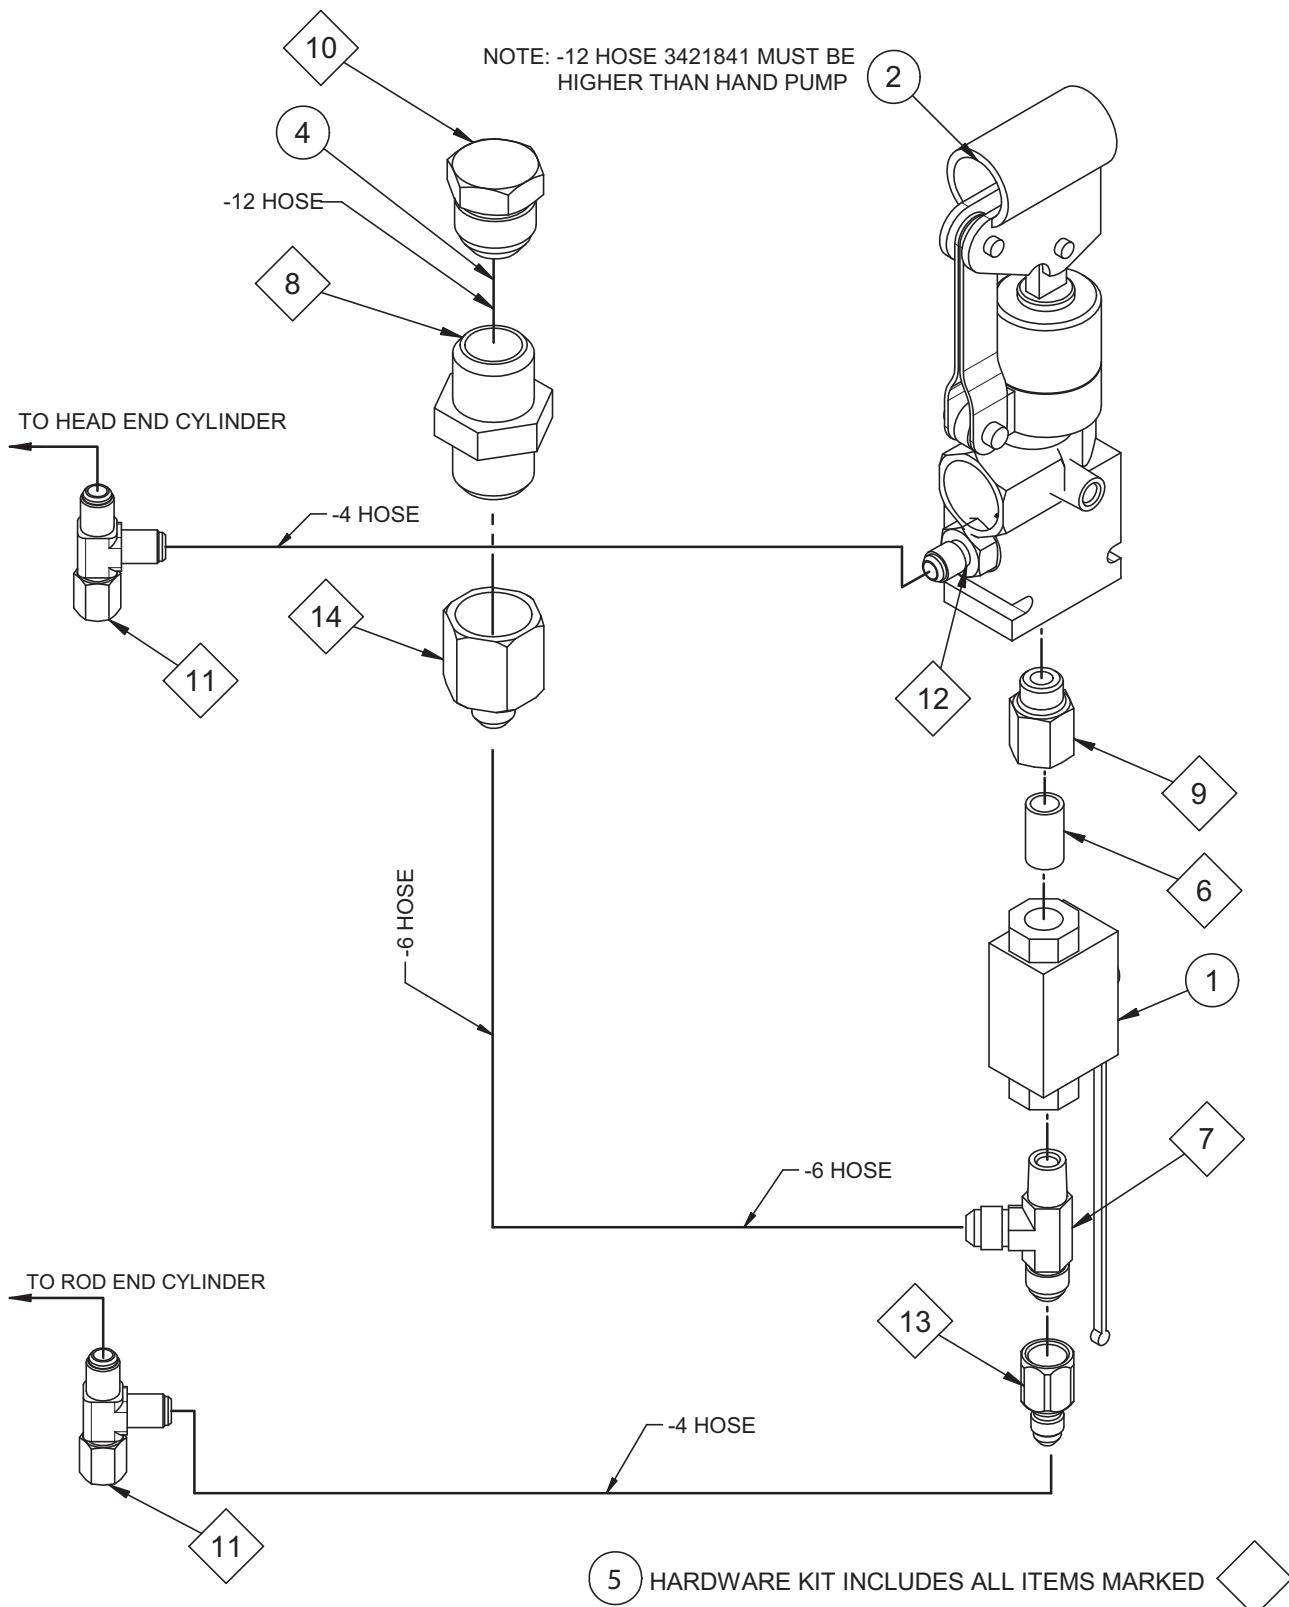

3423866 Emergency Hand Pump Group

| ITEM | PART NO | DESCRIPTION | QTY |
|------|----------------|------------------------------------|-----|
| | 3423866 | EMERGENCY HAND PUMP GROUP | 1 |
| 1 | 0-3330040-0-04 | Ball Valve | 1 |
| 2 | 202404 | Hand Pump | 1 |
| 3 | 202405 | Handle (15") (not shown) | 1 |
| 4 | 3421841 | Hose #12 JIC Str-Str x 15 Lg | 1 |
| 5 | 5075489 | Fittings Kit for 3423866 | 1 |
| 6 | F008584 | 1/4 x 7/8 Close Nipple | 1 |
| 7 | F011239 | Tee, 6 x 4 NPT x 6 | 1 |
| 8 | F012243 | Str, 12 x 12 | 1 |
| 9 | F015501 | Str, 4 FPT x 6 SAE | 1 |
| 10 | F018553 | Plug, -12 HH | 1 |
| 11 | F021905 | Tee, 4 FS x 4 x 4 | 2 |
| 12 | F022230 | Str, 4 x 6 SAE | 1 |
| 13 | F023087 | Reducer -6 Sw JIC x -4 JIC | 1 |
| 14 | F040257 | Adapter | 1 |


5008444 - Emergency Hand Pump Group

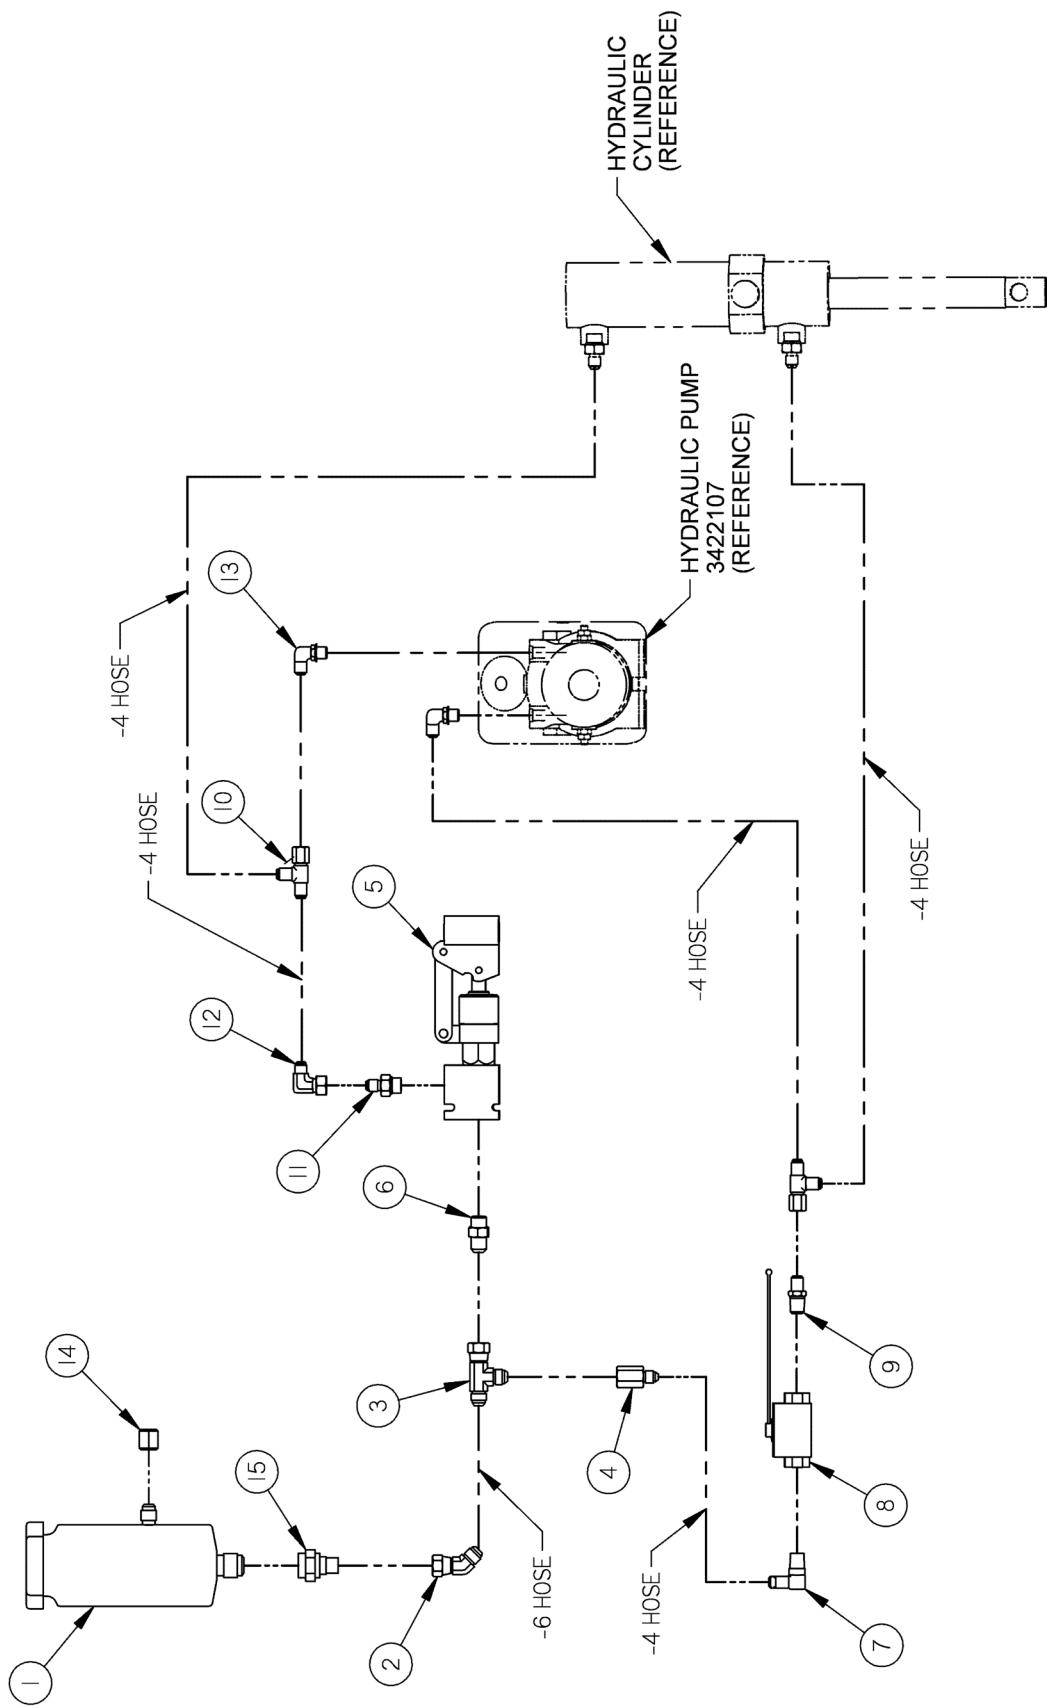

5008444 - Emergency Hand Pump Group

| ITEM | PART NO | DESCRIPTION | QTY |
|------|----------------|---------------------------------|-----|
| | 5008444 | EMERGENCY HAND PUMP GROUP | 1 |
| 1 | 5008386 | Reservoir Tank | 1 |
| 2 | F014242 | 45° Elbow, 6 x 6 FS | 1 |
| 3 | F013627 | Tee, 6 x 6 FS x 6 | 1 |
| 4 | F023087 | Adapter | 1 |
| 5 | 202404 | Hand Pump | 1 |
| 6 | F013326 | Adapter, 6 x 6 SAE | 1 |
| 7 | F011937 | 90° Elbow, 4 x 4 NPT | 1 |
| 8 | 0-3330040-0-04 | Ball Valve | 1 |
| 9 | F012318 | Adapter, 4 x 4 NPT | 1 |
| 10 | F021905 | Tee, 4 FS x 4 x 4 | 2 |
| 11 | F022230 | Adapter, 4 x 6 SAE | 1 |
| 12 | F015085 | 90° Elbow, 4 x 4 FS | 1 |
| 13 | F014734 | 90° Elbow, 4 x 4 SAE | 2 |
| 14 | F011529 | Cap, 6 F | 1 |
| 15 | F023059 | Reducer | 1 |


3424210 - In- Cab Actuation Switch Plate Kit

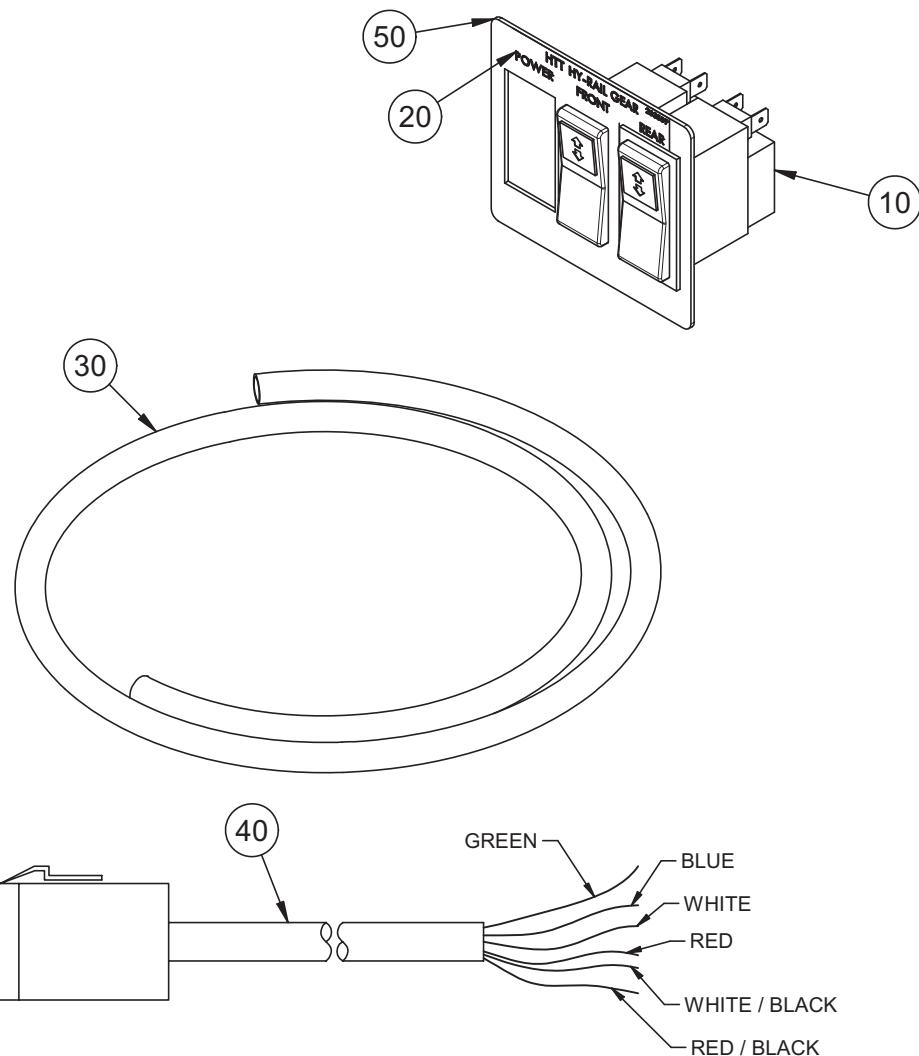

6


| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|------------------------------|-------|
| | 3424210 | IN CAB ACTUATION GROUP | 1 |
| 10 | 200968 | Switch..... | 2 |
| 20 | 203559 | Decal | 1 |
| 30 | F024884 | Eight Conductor Cable..... | 15 ft |
| 40 | 3424136 | Connector, 6 Pin..... | 1 |
| 50 | 203556 | Switch Plate | 1 |

3422565 Guide Wheel Load Jack

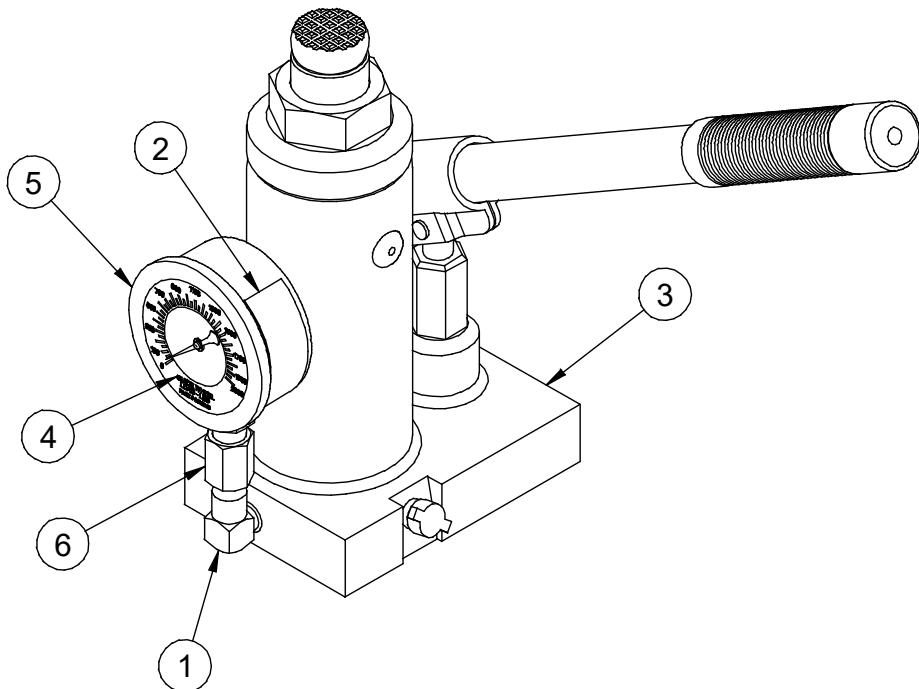

| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|---|-----|
| 1 | 146353 | 90° Elbow, 2 NPT x 2 FPT | 1 |
| 2 | 156051 | Decal, Warning, Misuse.... | 1 |
| 3 | 3422007 | Hydraulic Jack | 1 |
| 4 | 3422545 | Decal, Guide Wheel Load, Pressure Gauge Face | 1 |
| 5 | 3422563 | Pressure Gauge, 2000 PSI | 1 |
| 6 | F023088 | Adapter, STR 2 NPT x 4 FPT | 1 |
| | 3427481 | Replacement Gauge | 1 |
| | | When Ordering Replacement Gauge, Request Drawing No. 3422565 for Calibration Instructions. | |


3427479 Grease Guard Group - Front

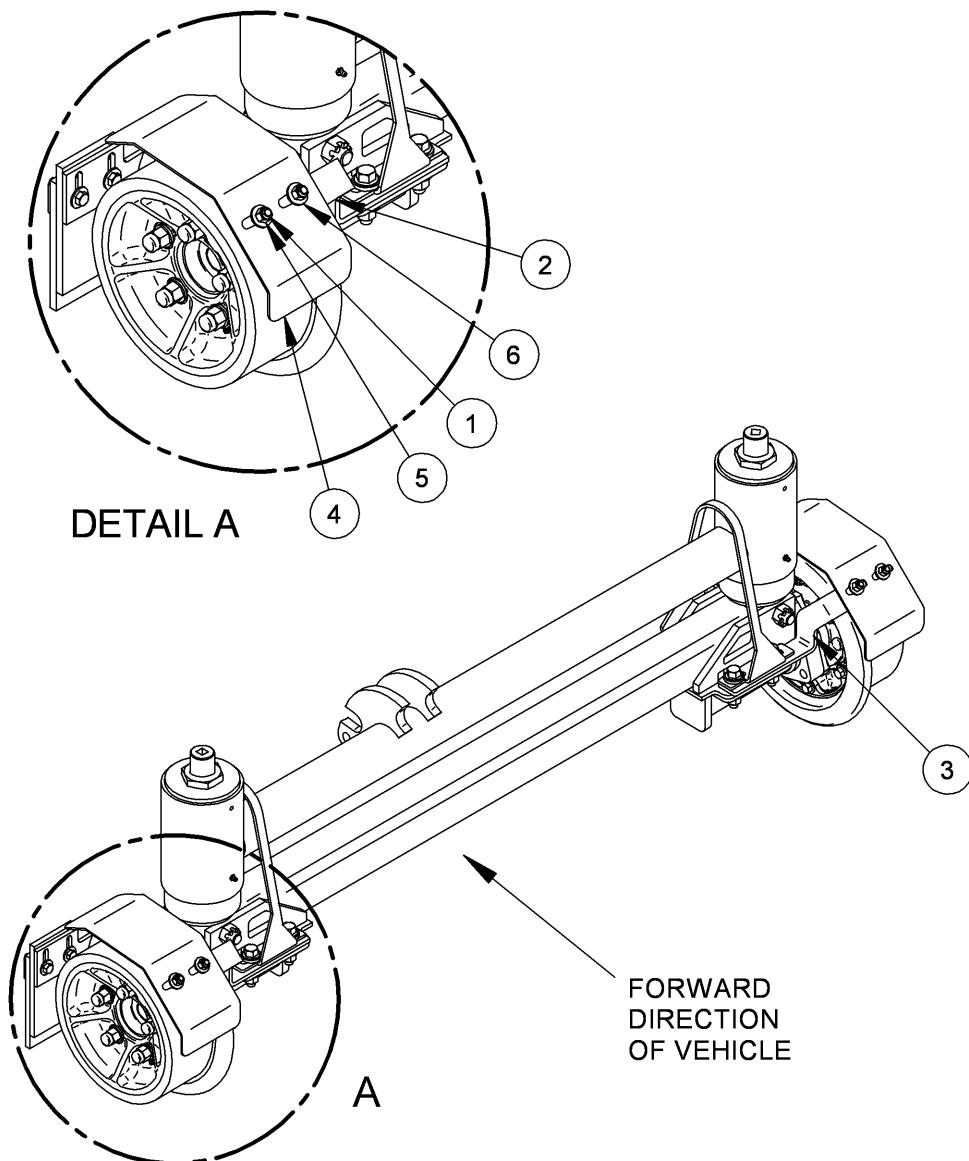

Note: Rail pilot unit and sweeps are shown for reference only and are not part of the group.

| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|------------------------------------|-----|
| | 3427479 | GREASE GUARD GROUP - REAR | 1 |
| 1 | 202531 | Carriage Bolt 3/8-16 x 1" | 4 |
| 2 | 3424687 | Grease Guard Bracket - Left | 1 |
| 3 | 3424689 | Grease Guard Bracket - Right | 1 |
| 4 | 3427449 | Grease Guard - Front | 2 |
| 5 | F015922 | Elastic Stop Nut, 3/8"-16 | 4 |
| 6 | F023111 | Washer | 4 |

3424686 Grease Guard Group - Rear

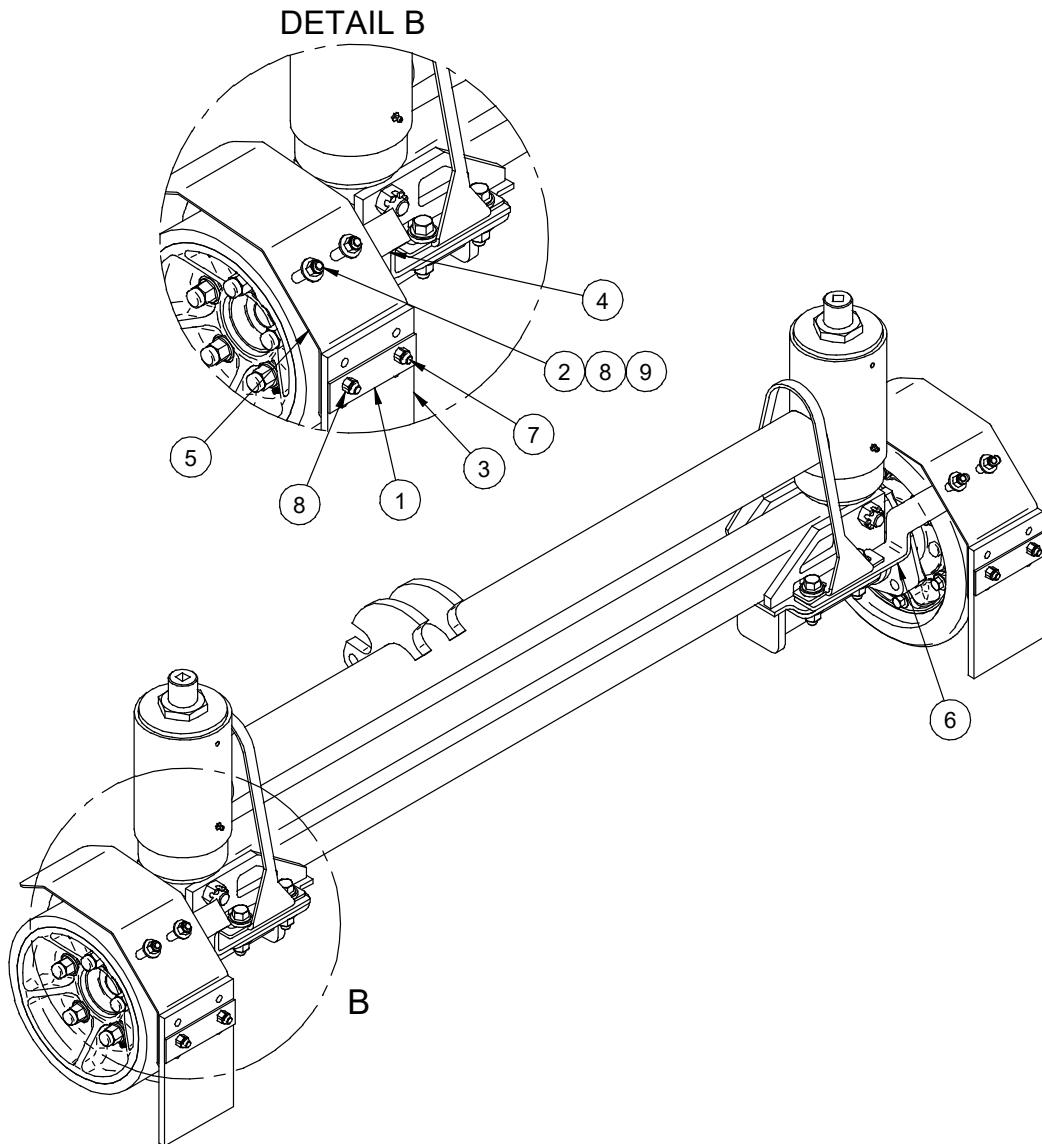

Note: Rail pilot unit and sweeps are shown for reference only and are not part of the group.

| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|--|-----|
| | 3424686 | GREASE GUARD GROUP - REAR..... | 1 |
| 1 | 108510 | Rail Sweep Plate | 2 |
| 2 | 202531 | Carriage Bolt, 3/8-16 x 1"..... | 4 |
| 3 | 203215 | Rail Sweep..... | 2 |
| 4 | 3424687 | Grease Guard Bracket - Left..... | 1 |
| 5 | 3424688 | Grease Guard - Rear | 2 |
| 6 | 3424689 | Grease Guard Bracket - Right | 1 |
| 7 | F001125 | Cap Screw, 3/8-16 x 1-1/4 GR5 Hex Hd | 4 |
| 8 | F015922 | Elastic Stop Nut, 3/8"-16 | 8 |
| 9 | F023111 | Washer..... | 4 |


3421918 - Decal Group

| PART NO | DESCRIPTION | QTY |
|---------|--|-----|
| 3421918 | DECAL GROUP | 1 |
| 3410918 | Operation Decal, Front. | 1 |
| 3410919 | Operation Decal, Rear | 1 |
| F018082 | Decal, Steering Lock | 1 |
| 140220 | Decal - Read Manual | 3 |
| 155007 | Decal, Vehicle Completion. | 1 |
| 191761 | Decal, Harsco. | 2 |
| 5112913 | Gauge, Flange Thickness, Hyrail. | 1 |

DECAL APPLICATION INSTRUCTIONS


1. Attach Operating Instruction Decals 3410918 and 3410919 to back side of driver's visor.
2. Attach Safety Instructions (Lock Front Wheels...) F018082 to steering wheel or dash. Do not place decal over seam of airbag in center of steering wheel.
3. Attach Warning Decal 140220 at visible location near front and rear pilot units and to vehicle dash in clear view of operator.
4. Attach Certification Decal 155007 to vehicle dash in location that is clearly visible to vehicle operator.
5. Attach Harsco Decals 191761 to the front and rear unit.

**3422107 Hydraulic Pump
(Reference for Repair Parts)**

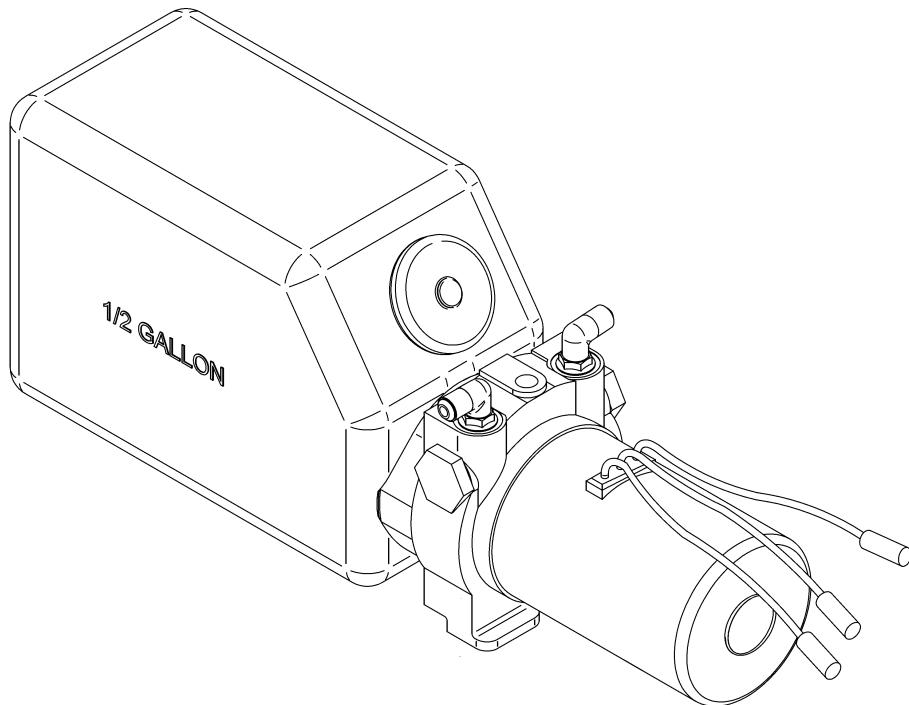



| PART NO | DESCRIPTION | QTY |
|---------|--|-----|
| 5015967 | Reservoir | 1 |
| 3427482 | Reservoir Cap | 1 |
| 5015968 | Motor, 12 Volt | 1 |
| 5015969 | Pump Kit..... | 1 |
| 5015970 | Port Adapter Kit | 1 |
| 5015971 | Relief Valve..... | 2 |
| 5015972 | Reservoir Seal (between reservoir and pump)..... | 1 |
| 5015973 | O-Ring (between motor and pump) | 1 |
| 5132879 | Connector, 1 Pin Male, DTHD | 3 |

3423774 - Hydraulic Power Pack


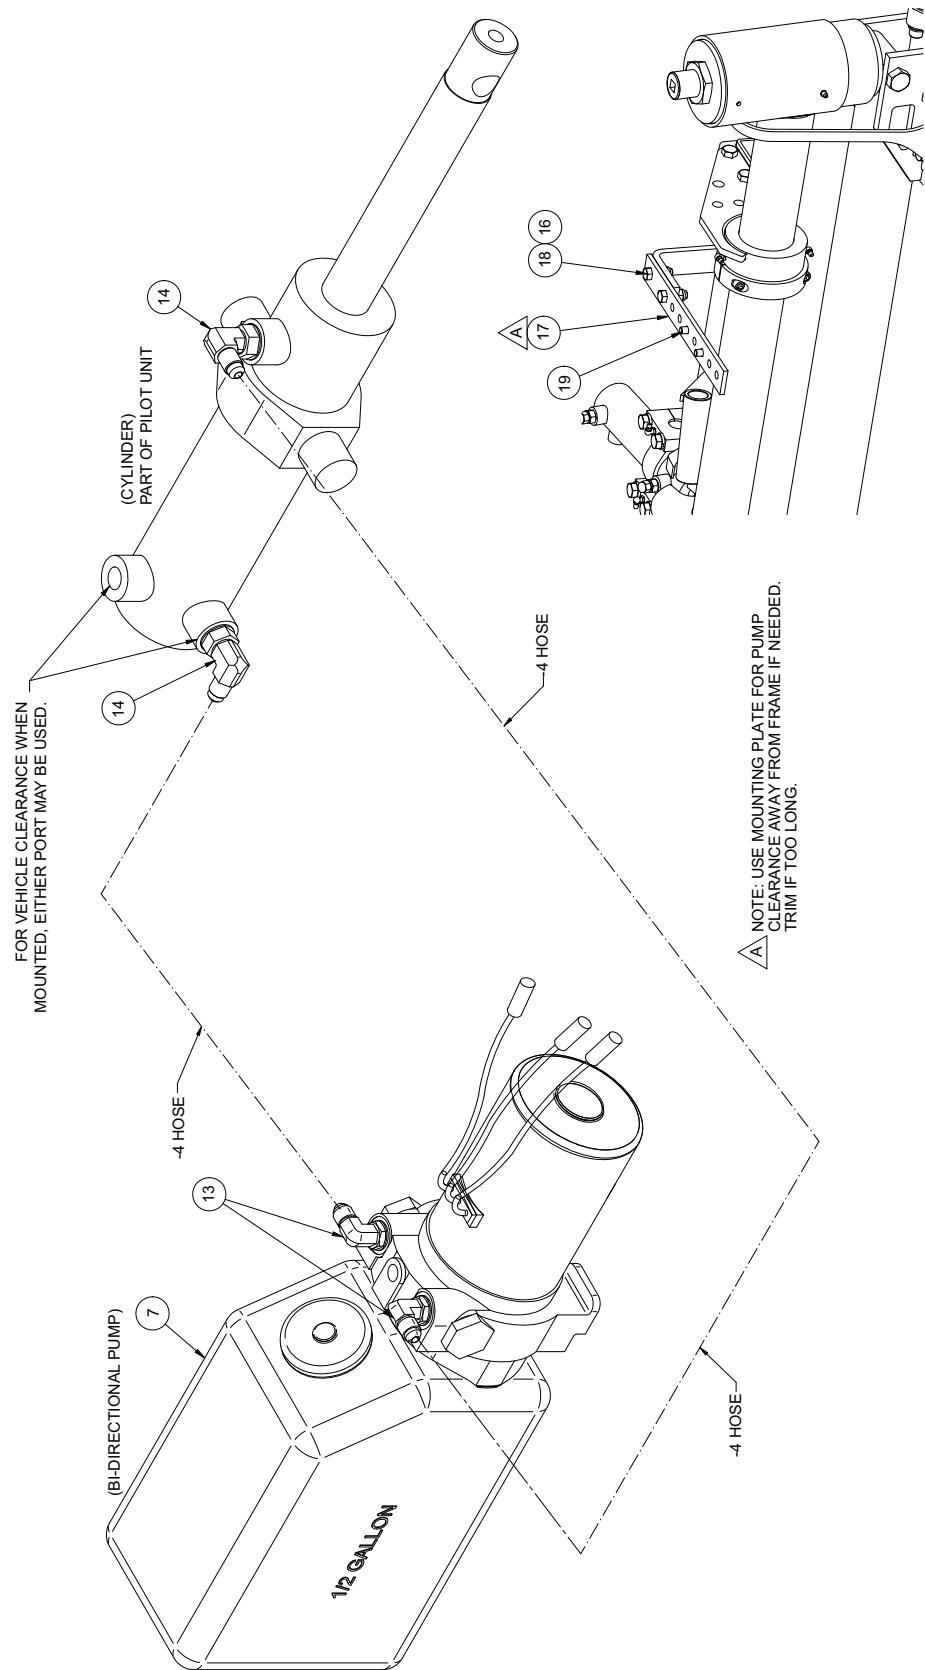


3423774 - Hydraulic Power Pack


REAR

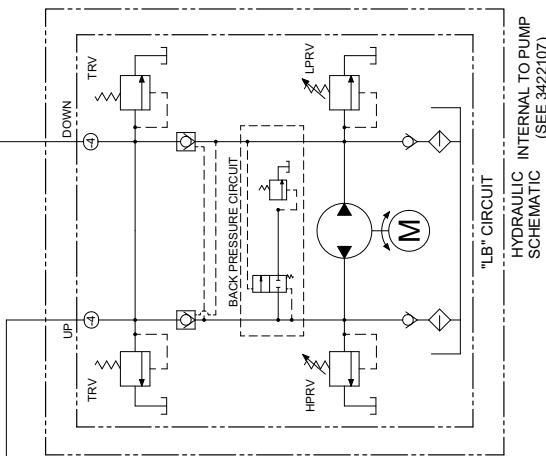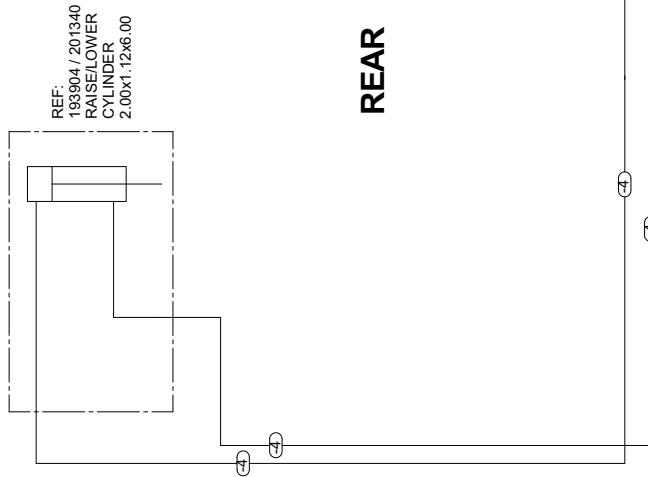

FRONT

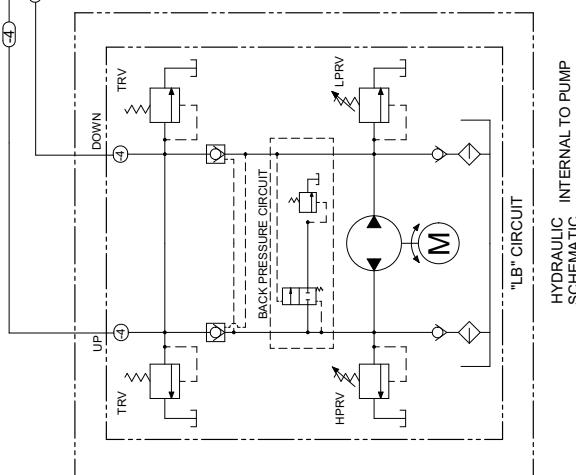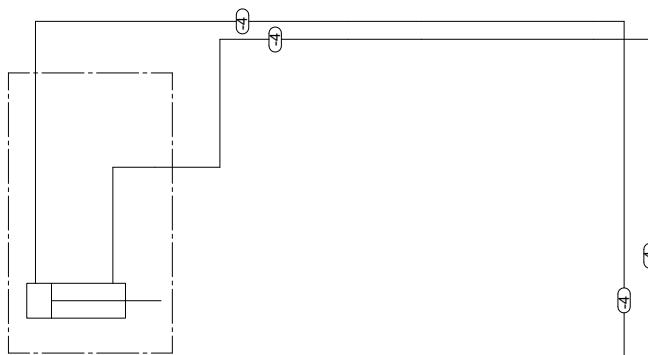


3423774 - Hydraulic Power Pack

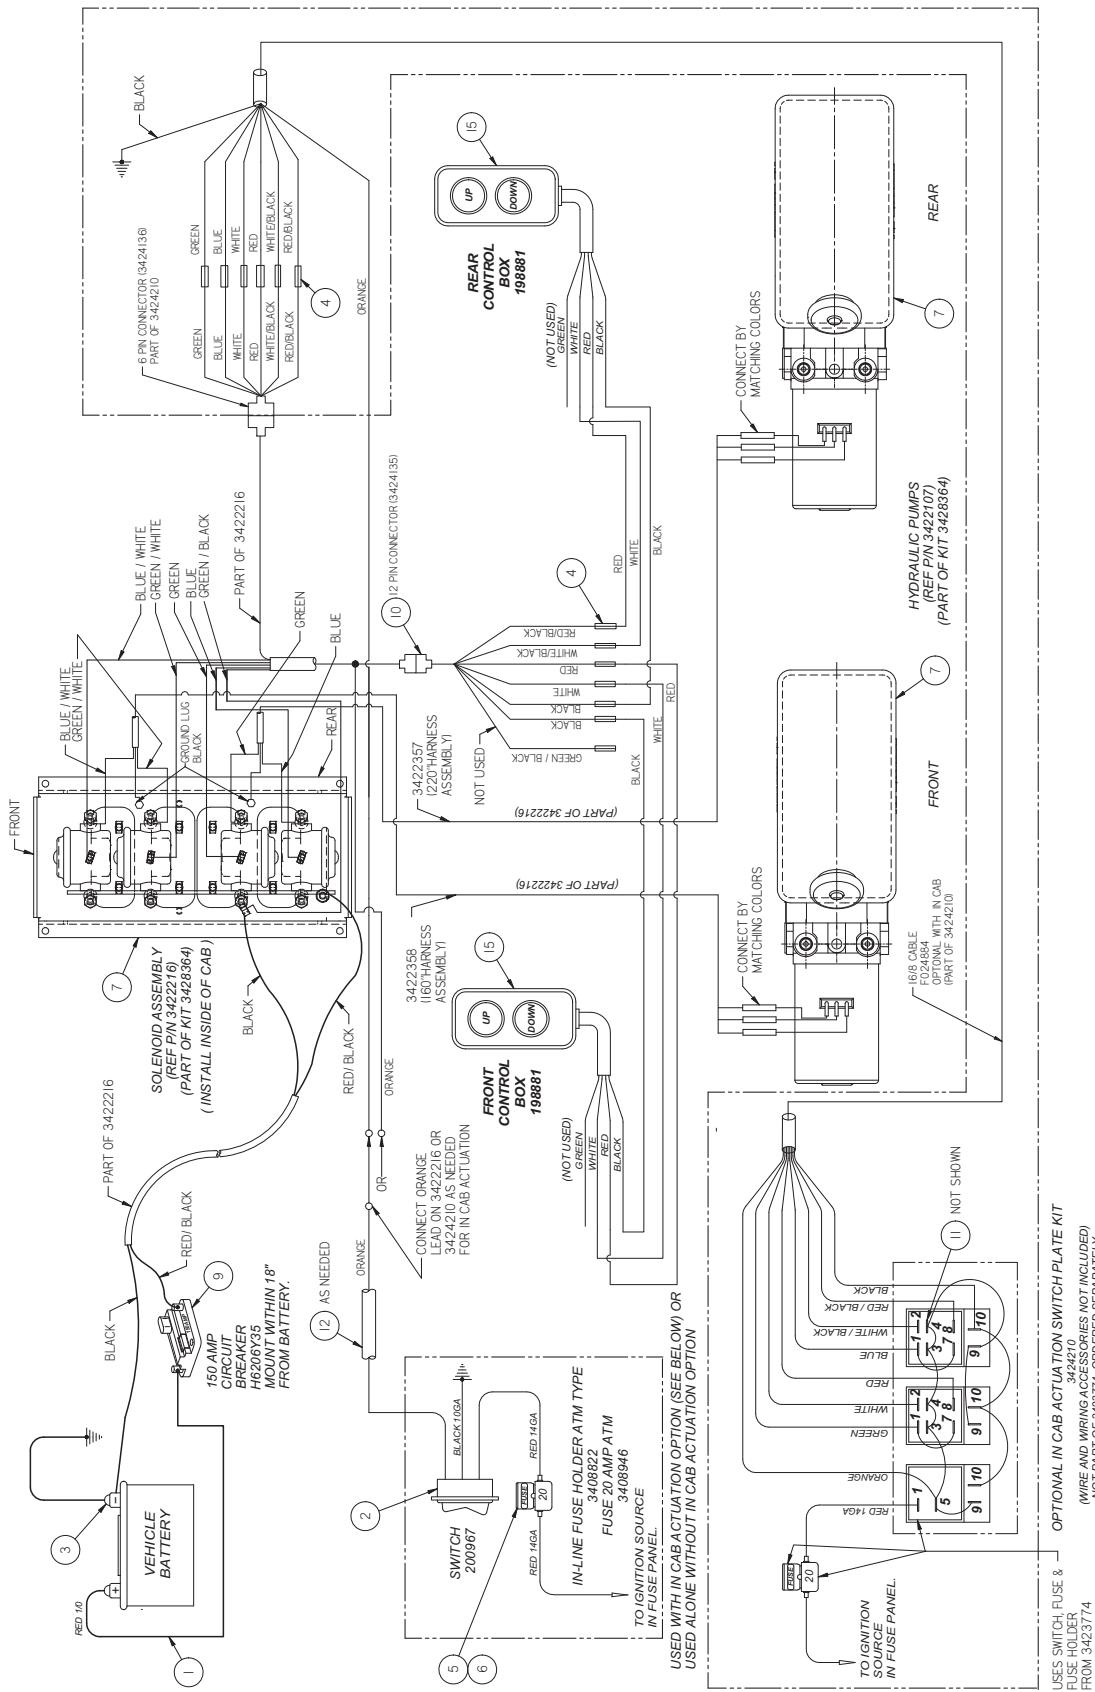

3423774 - Hydraulic Power Pack



| ITEM | PART NO | DESCRIPTION | QTY |
|------|-----------|---|-------|
| 1 | 200965 | 1/0 CABLE | 5 ft |
| 2 | 200967 | SWITCH | 1 |
| 3 | F040164 | TERMINAL | 4 |
| 4 | 201260 | BUTT CONNECTOR | 14 |
| 5 | 3408822 | FUSE HOLDER, IN-LINE MINI TYPE | 1 |
| 6 | 3408946 | FUSE 20 AMP - ATM BLADE TYPE | 1 |
| 7 | 3428364 | HR1500C1 PUMP/SOLENOID GROUP | 1 |
| 8 | NOT USED | | |
| 9 | H6206Y35 | CIRCUIT BREAKER 150 AMP | 1 |
| 10 | 3424135 | 12 PIN CONNECTOR | 1 |
| 11 | 201270 | PUSH ON CONNECTOR | 22 |
| 12 | 701099063 | AUTO-LOOM 5/8" | 10 ft |
| 13 | F014734 | ELB90 4X4SAE | 4 |
| 14 | F022262 | ELB90 4X6SAE | 4 |
| 15 | 198881 | SWITCH BOX | 2 |
| 16 | F015718 | NUT, NYLON, 7/16-14, GR 5, ZP | 4 |
| 17 | 5077890 | MOUNTING PLATE - UNIVERSAL | 2 |
| 18 | F003912 | HEX HD CAP SCR 7/16-14X1 1/4 GR 5 | 4 |
| 19 | F004683 | HEX HD CAP SCR 3/8-16X5/8 GR5 | 4 |

3425559 - Hydraulic Power Pack Group with Remote


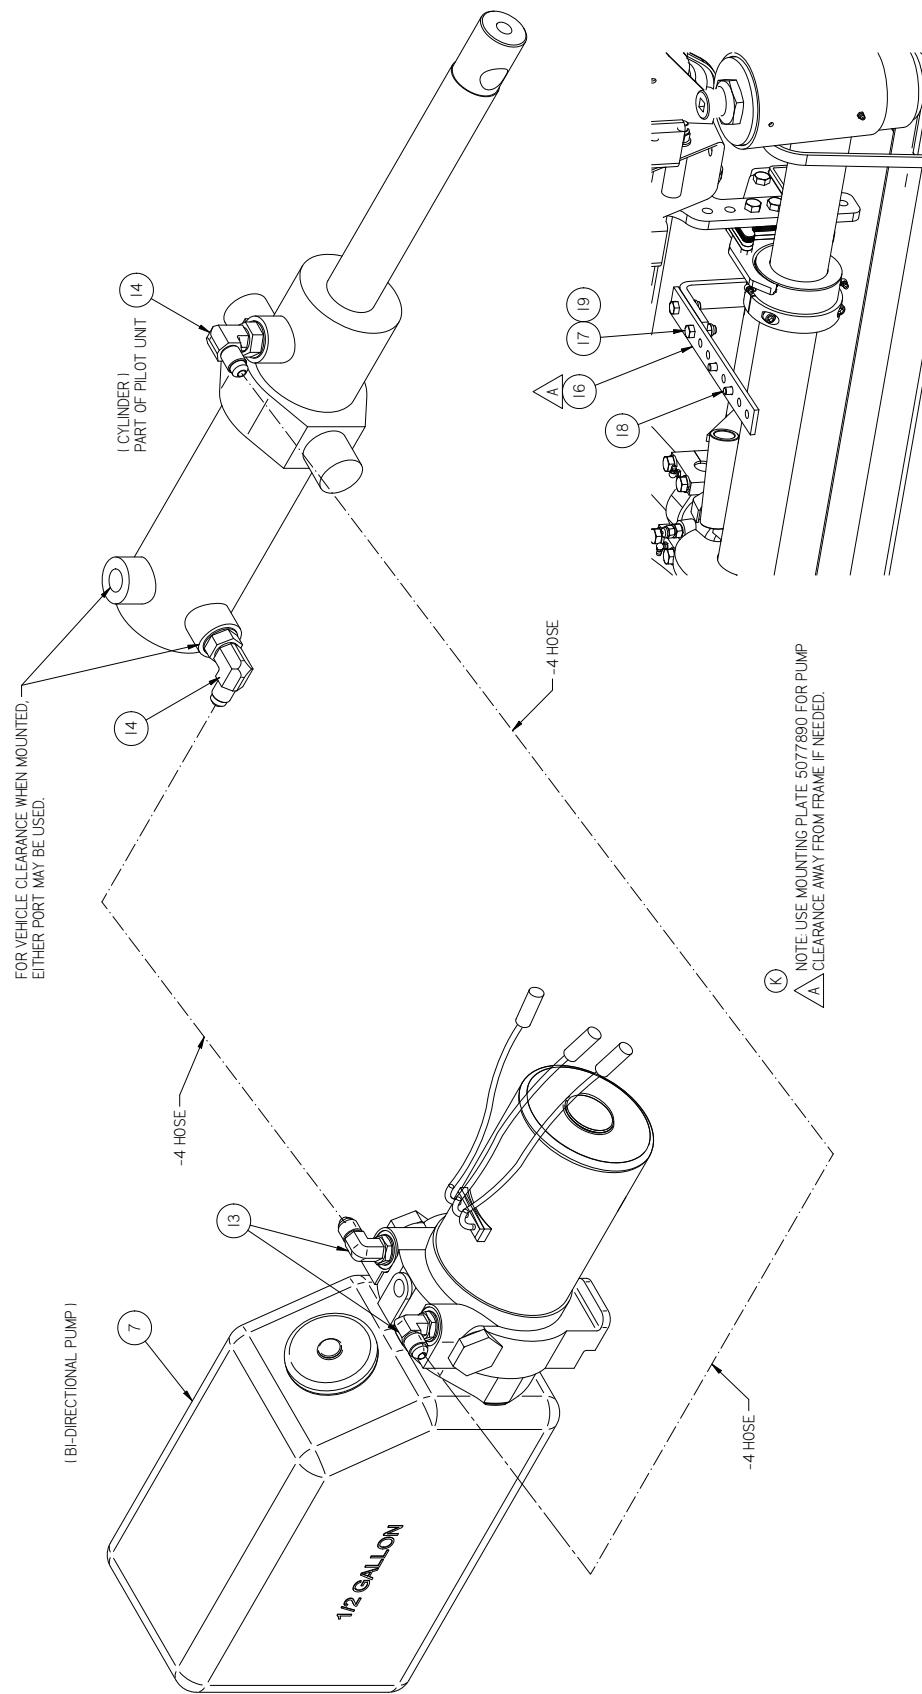


3425559 - Hydraulic Power Pack Group with Remote


REAR

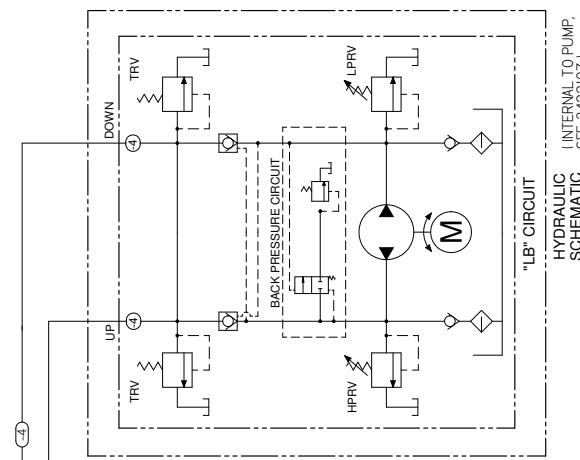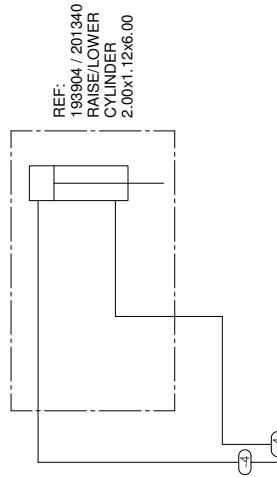

FRONT

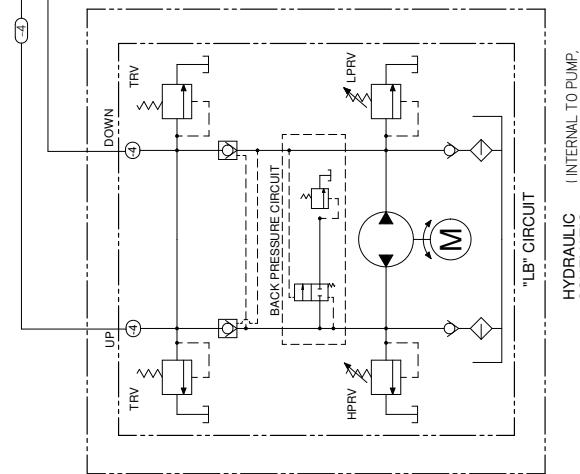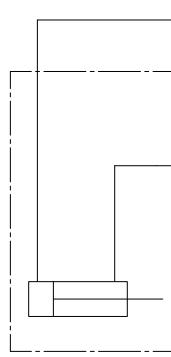


3425559 - Hydraulic Power Pack Group with Remote

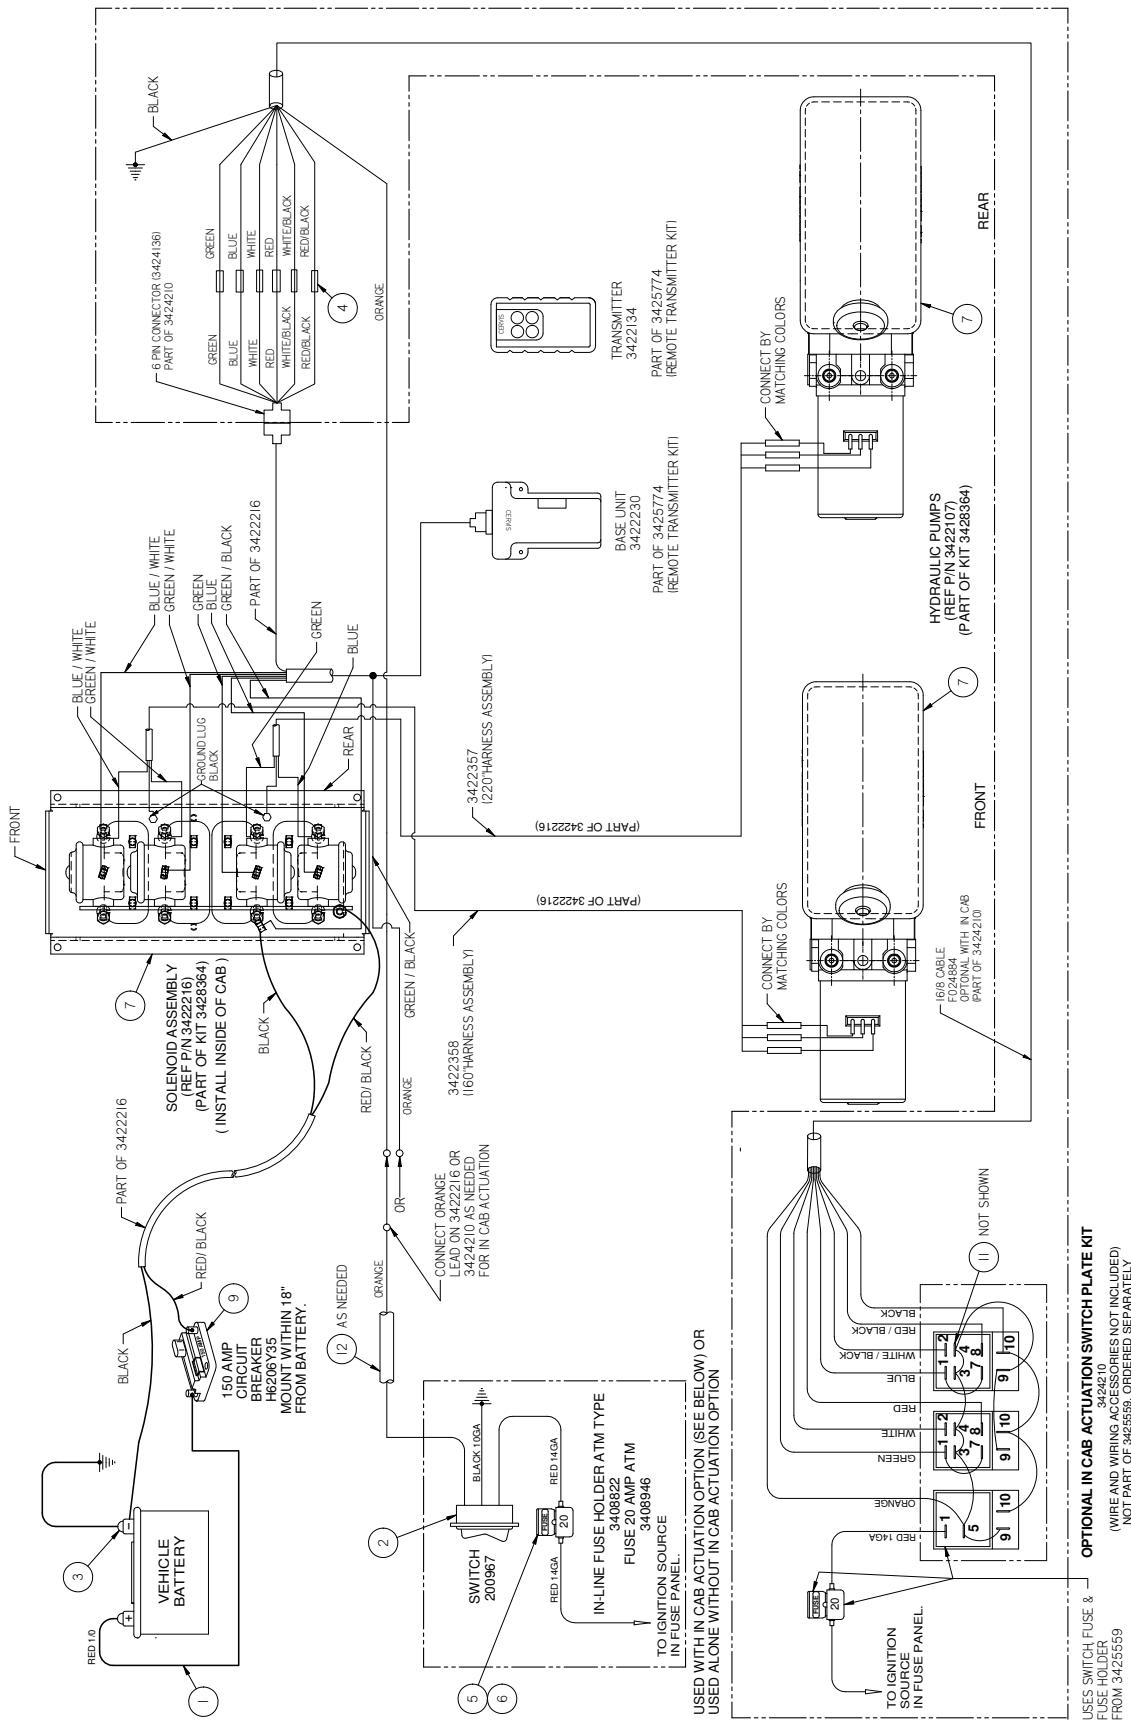


3425559 - Hydraulic Power Pack Group with Remote

| ITEM | PART NO | DESCRIPTION | QTY |
|------|-----------|---|-------|
| 1 | 200965 | 1/0 CABLE | 5 ft |
| 2 | 200967 | SWITCH | 1 |
| 3 | F040164 | TERMINAL | 4 |
| 4 | 201260 | BUTT CONNECTOR | 14 |
| 5 | 3408822 | FUSE HOLDER, IN-LINE MINI TYPE | 1 |
| 6 | 3408946 | FUSE 20 AMP - ATM BLADE TYPE | 1 |
| 7 | 3428364 | HR1500C1 PUMP/SOLENOID GROUP | 1 |
| 8 | NOT USED | | |
| 9 | H6206Y35 | CIRCUIT BREAKER 150 AMP | 1 |
| 10 | NOT USED | | |
| 11 | 201270 | PUSH ON CONNECTOR | 6 |
| 12 | 701099063 | AUTO-LOOM 5/8" | 10 ft |
| 13 | F014734 | ELB90 4X4SAE | 4 |
| 14 | F022262 | ELB90 4X6SAE | 4 |
| 15 | 3425774 | REMOTE / TRANSMITTER KIT | 1 |
| 16 | 5077890 | MOUNTING PLATE - UNIVERSAL | 2 |
| 17 | F003912 | HEX HD CAP SCR 7/16-14X1 1/4 GR 5 | 4 |
| 18 | F004683 | HEX HD CAP SCR 3/8-16X5/8 GR5 | 4 |
| 19 | F015718 | NUT, NYLON, 7/16-14, GR 5, ZP | 4 |


3427543 - Hydraulic Power Pack, Front or Rear Only

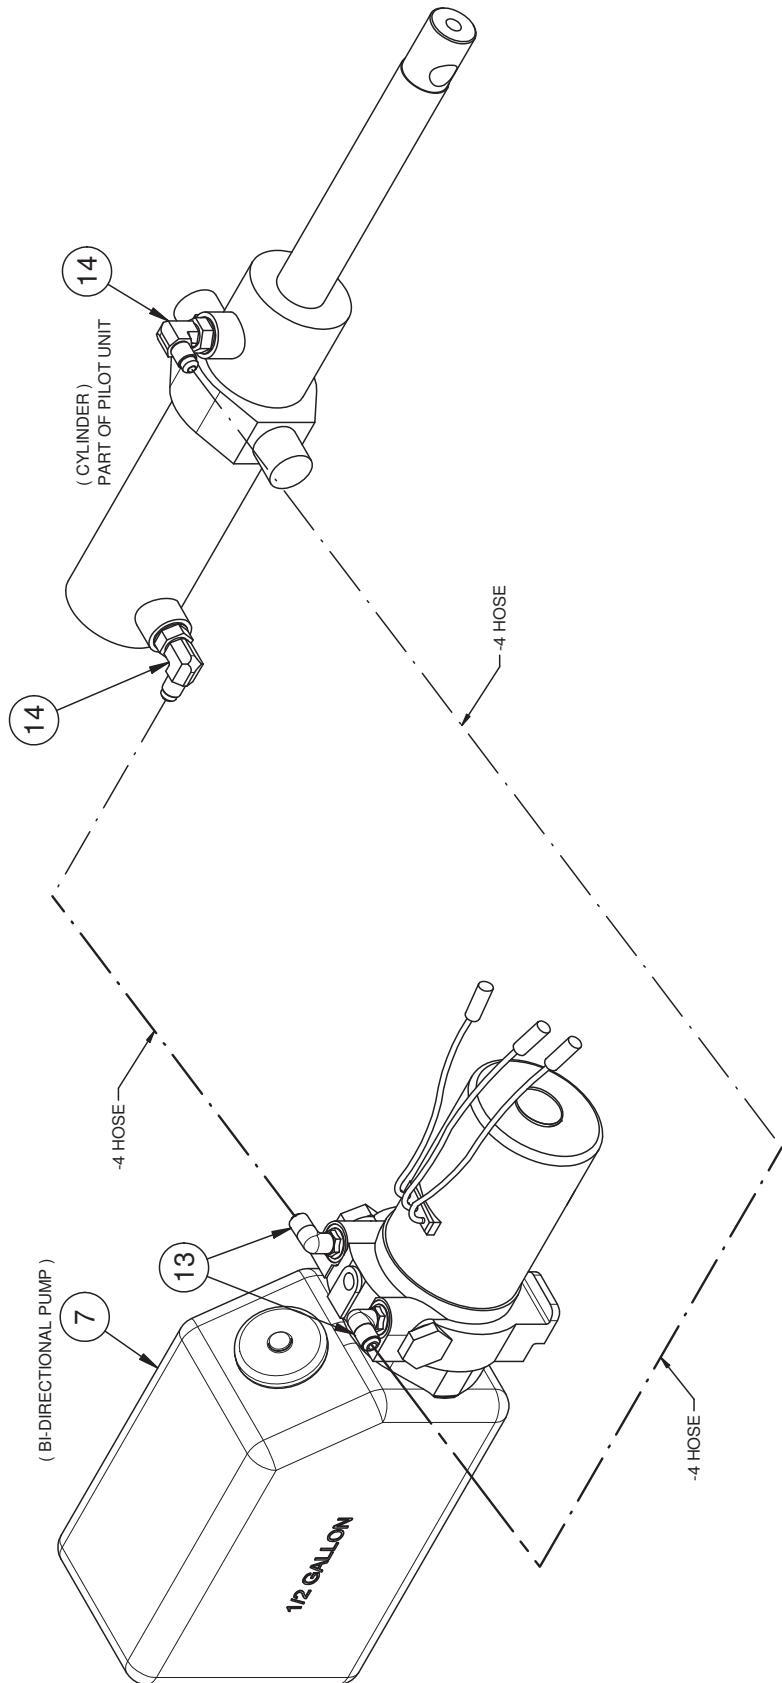

3427543 - Hydraulic Power Pack, Front or Rear Only

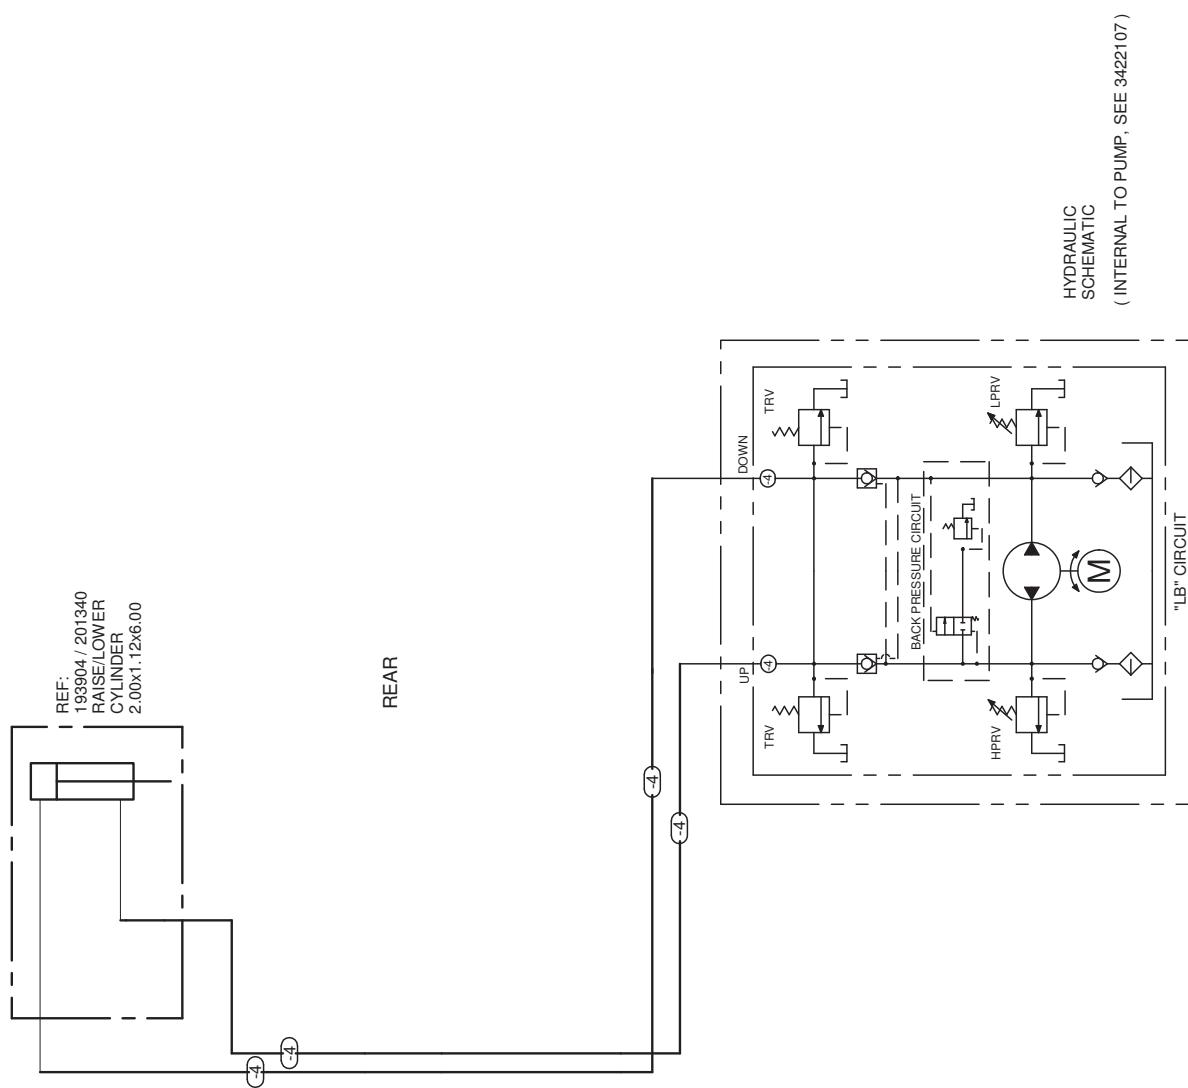


3427543 - Hydraulic Power Pack, Front or Rear Only

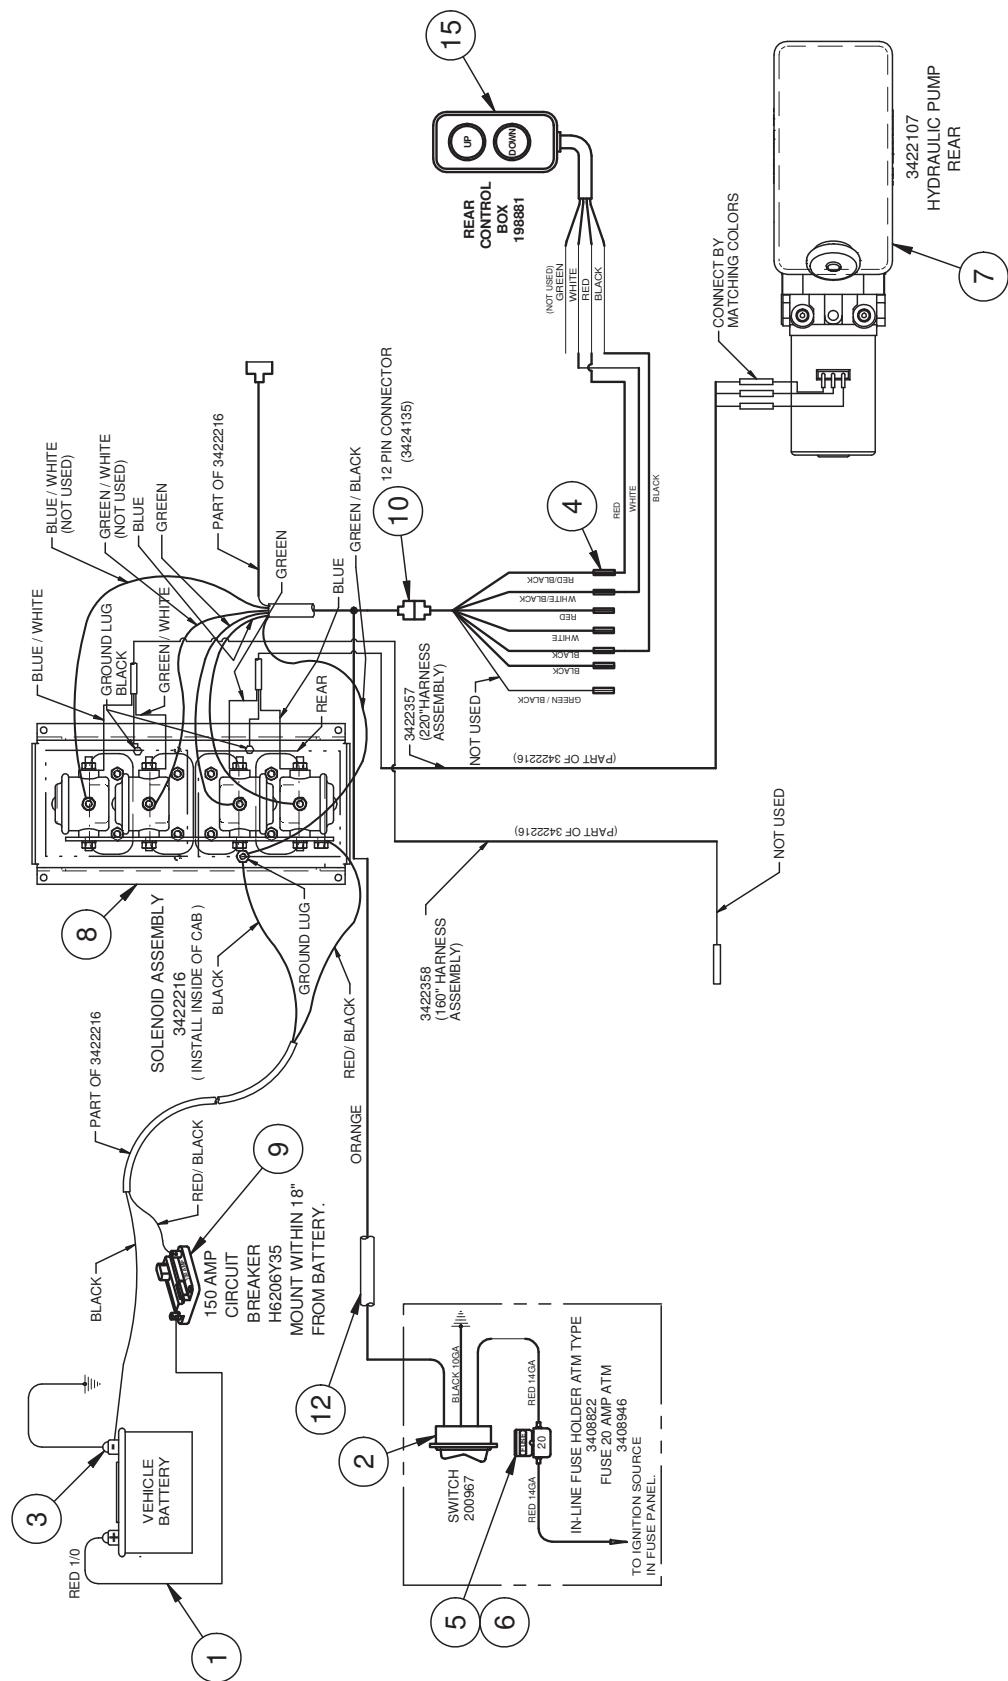

3427543 - Hydraulic Power Pack, Front or Rear Only

| ITEM | PART NO | DESCRIPTION | QTY |
|------|-----------|--------------------------------------|-------|
| 1 | 200965 | 1/0 CABLE | 3 ft |
| 2 | 200967 | SWITCH | 1 |
| 3 | F040164 | TERMINAL | 4 |
| 4 | 201260 | BUTT CONNECTOR | 14 |
| 5 | 3408822 | FUSE HOLDER, IN-LINE MINI TYPE | 1 |
| 6 | 3408946 | FUSE 20 AMP - ATM BLADE TYPE | 1 |
| 7 | 3422107 | HYDRAULIC PUMP, BI-DIRECTIONAL | 1 |
| 8 | 3422216 | MOTOR CONTROL ASSEMBLY | 1 |
| 9 | H6206Y35 | CIRCUIT BREAKER 150 AMP | 1 |
| 10 | 3424135 | 12 PIN CONNECTOR | 1 |
| 11 | 201270 | PUSH ON CONNECTOR | 6 |
| 12 | 701099063 | AUTO-LOOM 5/8" | 10 ft |
| 13 | F014734 | ELB90 4X4SAE | 2 |
| 14 | F022262 | ELB90 4X6SAE | 2 |
| 15 | 198881 | SWITCH BOX | 1 |


3422216 - Motor Control Assembly

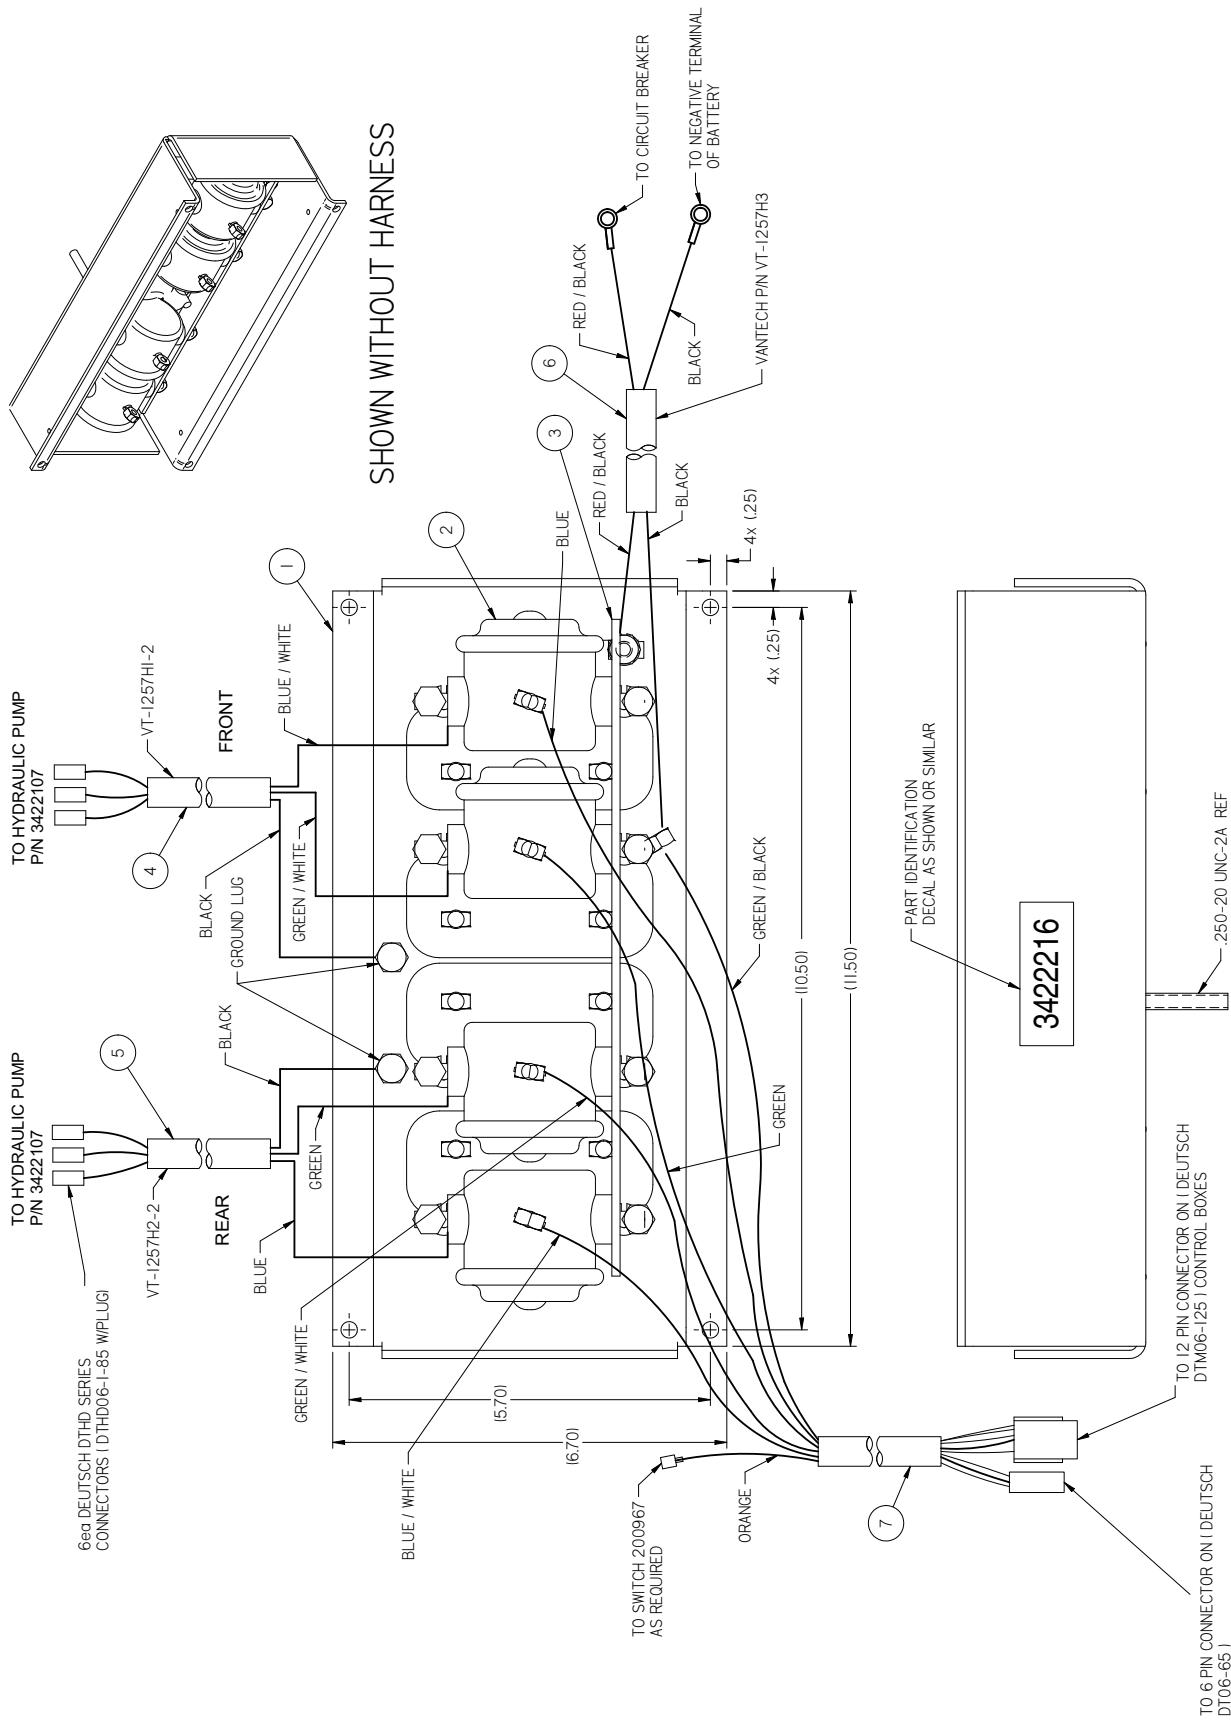


3422216 - Motor Control Assembly

| ITEM | PART NO | DESCRIPTION | QTY |
|------|---------|----------------------------------|-----|
| 1 | 3422211 | MOTOR CONTROL ASSEMBLY | 1 |
| 2 | 3422215 | SOLENOID..... | 4 |
| 3 | 5017900 | STRIP (BUS BAR) | 1 |
| 4 | 3422357 | 220" WIRE HARNESS ASSEMBLY | 1 |
| 5 | 3422358 | 160" WIRE HARNESS ASSEMBLY | 1 |
| 6 | 3422359 | 180" PARALLEL BATTERYCABLE | 1 |
| 7 | 5028914 | CONTROL HARNESS | 1 |


3427161 - Hydraulic Power Pack Group

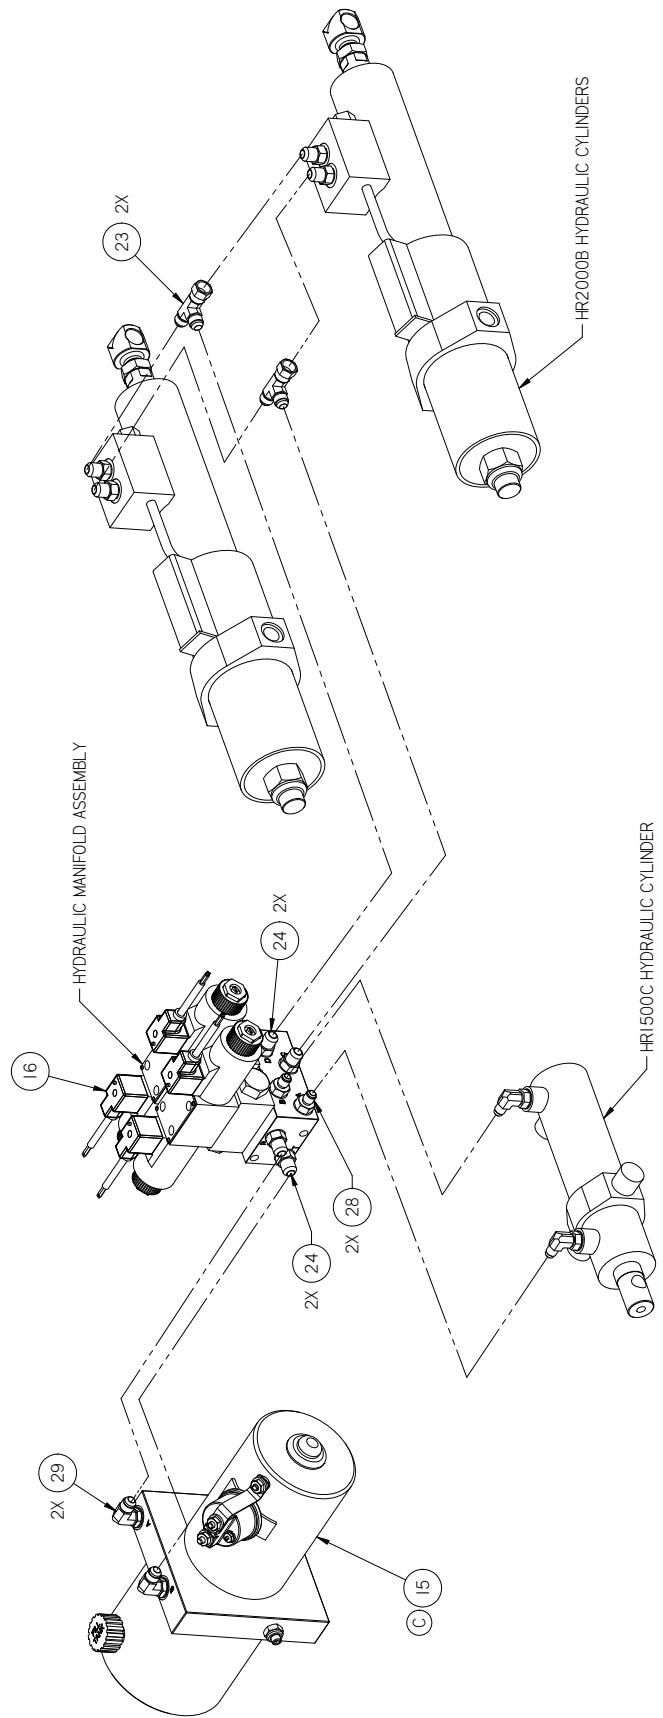

3427161 - Hydraulic Power Pack Group

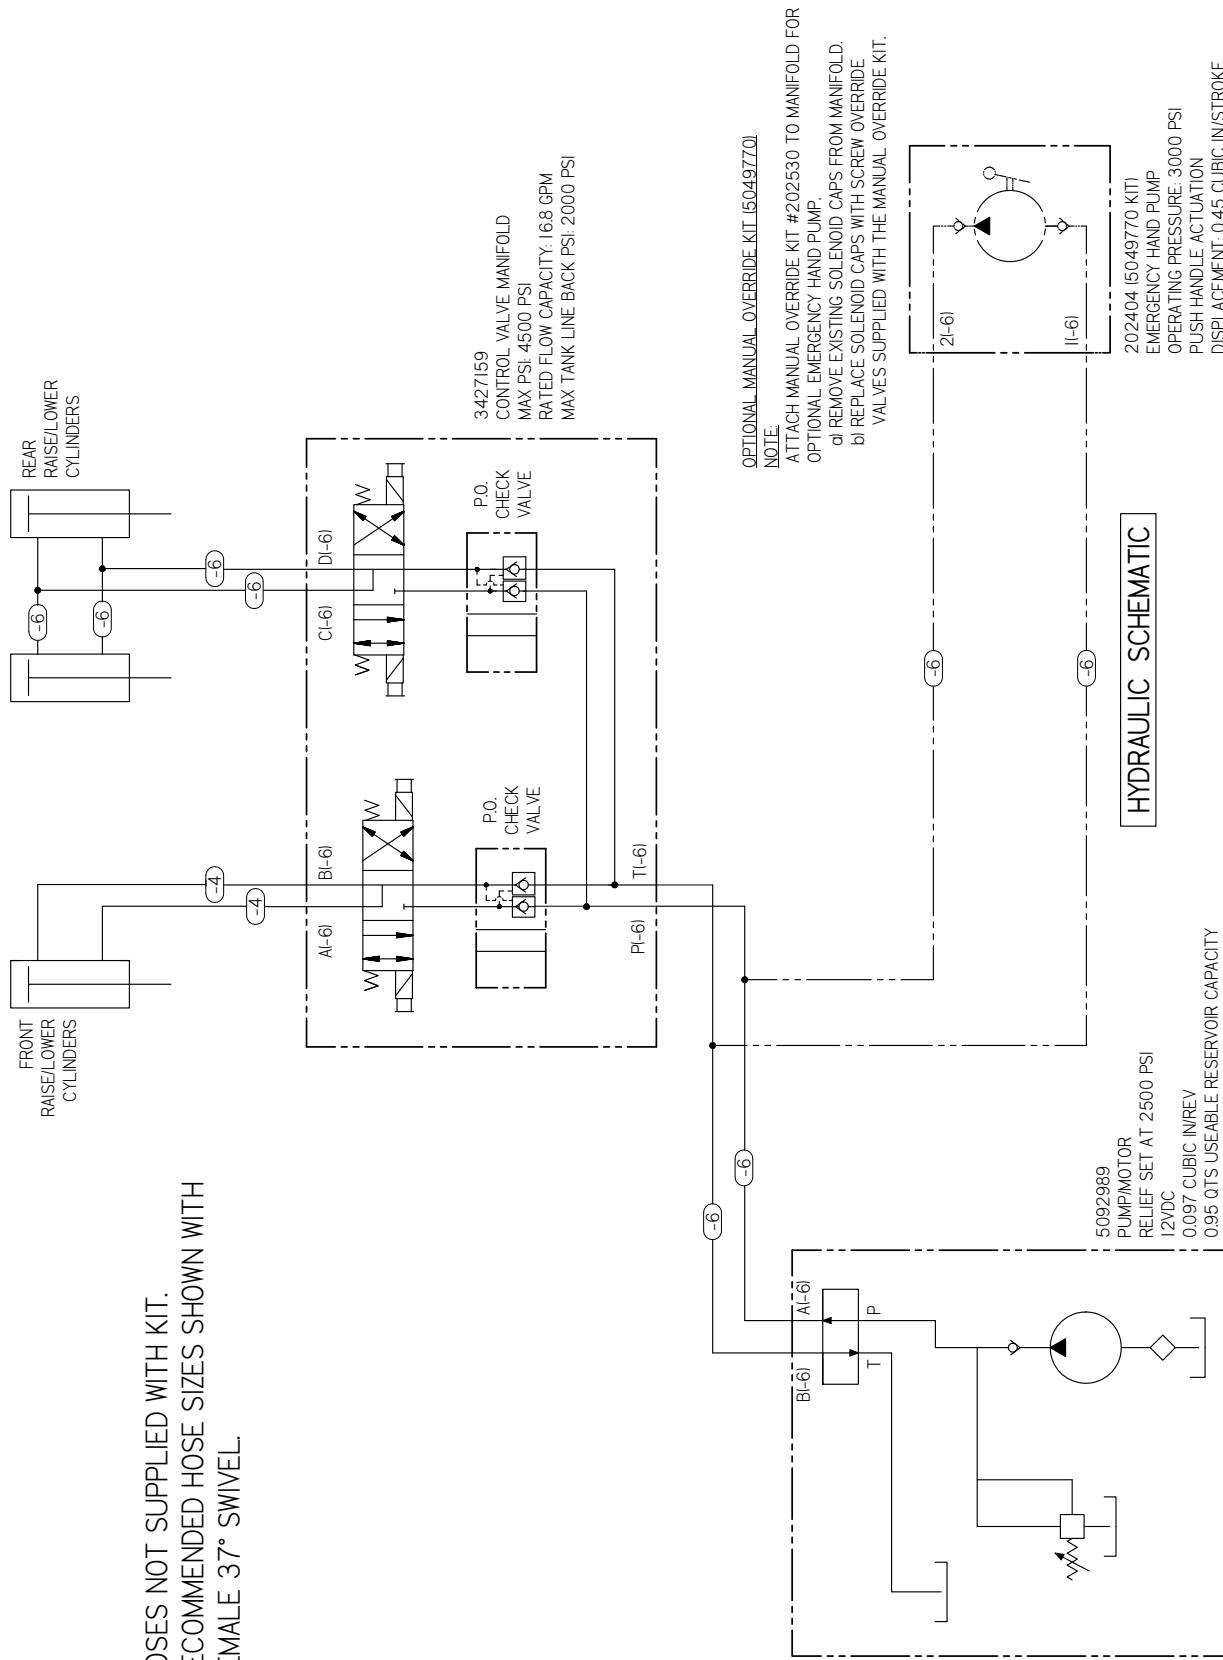



3427161 - Hydraulic Power Pack Group

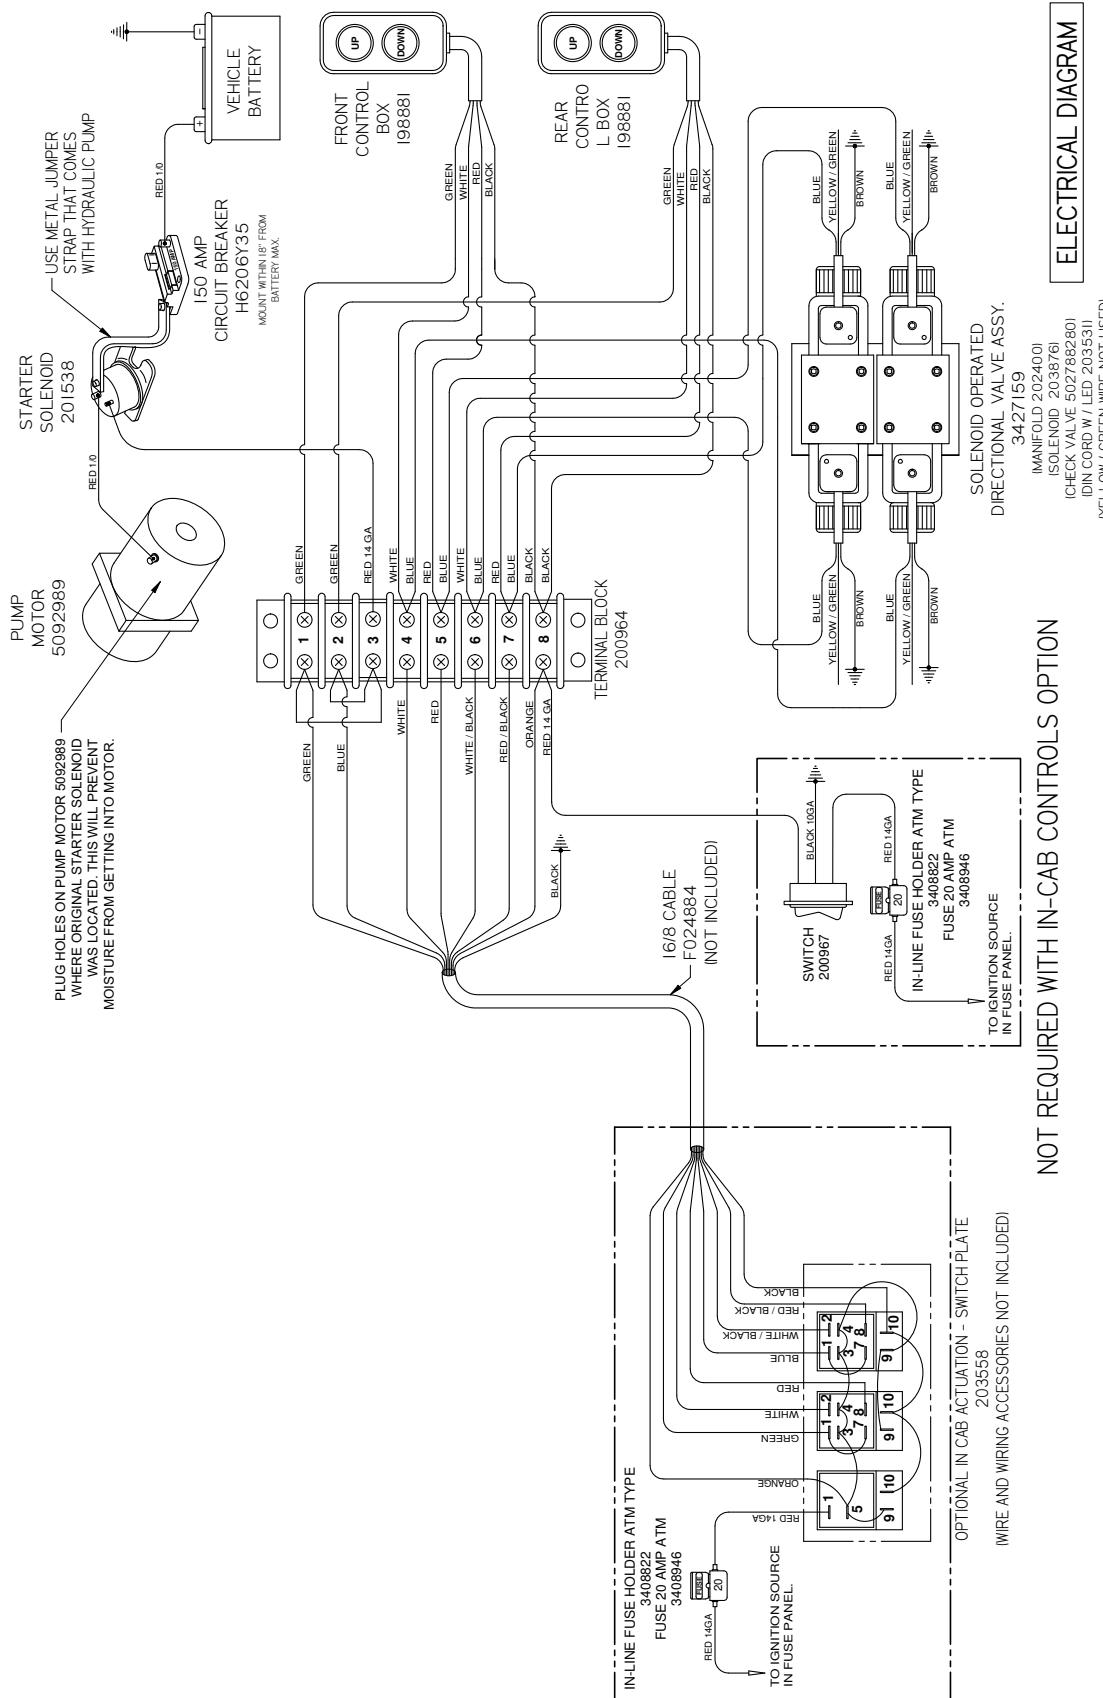




3427161 - Hydraulic Power Pack Group

| ITEM | PART NO | DESCRIPTION | QTY |
|------|-----------|---|-------|
| 1 | 168108 | DECAL | 1 |
| 2 | 198881 | SWITCH BOX | 2 |
| 3 | 200901 | HHCS M4 X .7 X 30 | 4 |
| 4 | 200964 | TERMINAL BLOCK | 1 |
| 5 | 200965 | 1/0 CABLE | 10 |
| 6 | 200967 | SWITCH | 1 |
| 7 | F040164 | TERMINAL | 4 |
| 8 | 201260 | BUTT CONNECTOR | 2 |
| 9 | 201265 | TERMINAL, RING #10 HEAT SHRINK | 6 |
| 10 | 201268 | SPADE CONNECTOR | 20 |
| 11 | 201269 | SPADE CONNECTOR | 9 |
| 12 | 201270 | PUSH ON CONNECTOR | 4 |
| 13 | 3408822 | FUSE HOLDER, IN-LINE MINI TYPE | 1 |
| 14 | 3408946 | FUSE 20 AMP - ATM BLADE TYPE | 1 |
| 15 | 5092989 | HYDRAULIC UNIT | 1 |
| 16 | 3427159 | HR15C20B HYD MANIFOLD ASM | 1 |
| 17 | 701099063 | AUTO-LOOM 5/8" | 10 ft |
| 18 | F001025 | WASHER, LOCK, 3/8", MEDIUM, ZP | 4 |
| 19 | F001125 | HEX HD CS 3/8-16X1 1/4 GR5 Hex Hd | 2 |
| 20 | F004683 | HEX HD CAP SCR 3/8-16X5/8 GR5 | 2 |
| 21 | F009542 | NUT, HEX, #10-24, GDA, ZP | 2 |
| 22 | F009681 | FLAT WASHER. DIA 3/8. SAE. ZP | 4 |
| 23 | F013627 | TEE 6X6FSX6 | 2 |
| 24 | F013326 | STR 6X6SAE | 4 |
| 25 | F016230 | RND HD SKT CS 10-24X1-1/4 | 2 |
| 26 | F016656 | TY RAP | 10 |
| 27 | 3406642 | WIRING, 14 AWG, RED | 5 |
| 28 | F022230 | STR 4X6SAE | 2 |
| 29 | F013327 | ELB90 6X6SAE | 2 |
| 30 | H6206Y35 | CIRCUIT BREAKER 150 AMP | 1 |




3427159 - Hydraulic Manifold Assembly

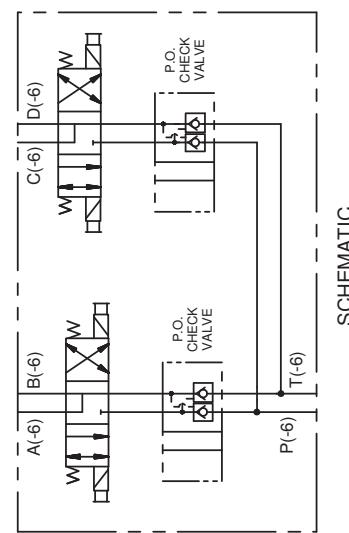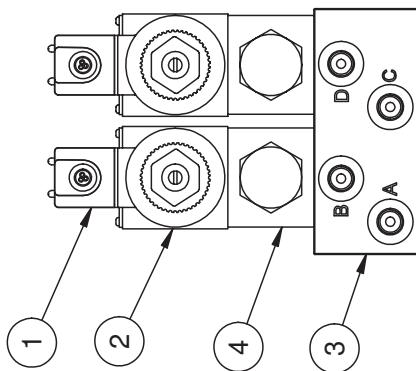

SCHEMATIC

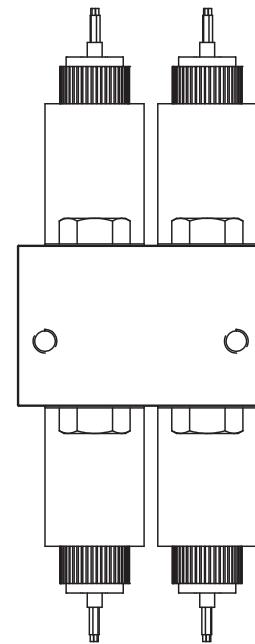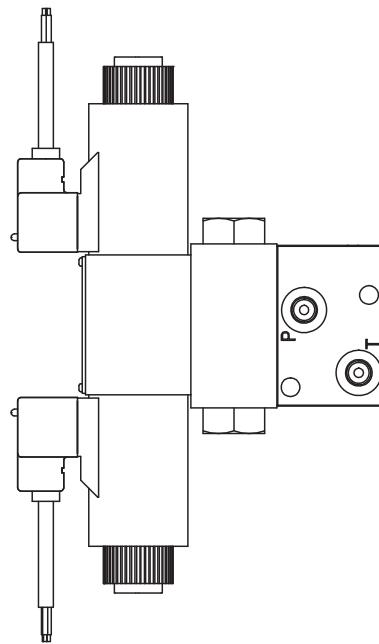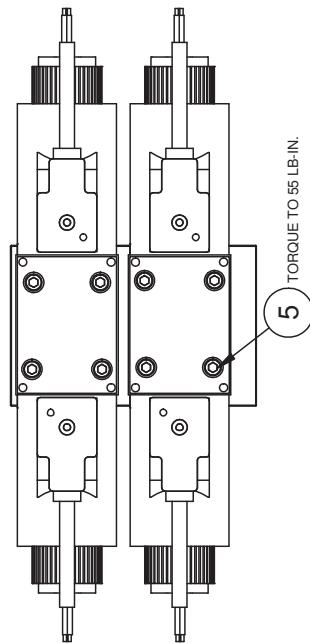

6

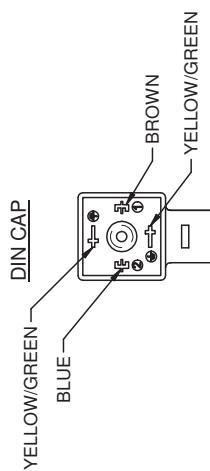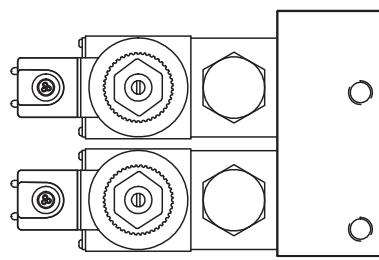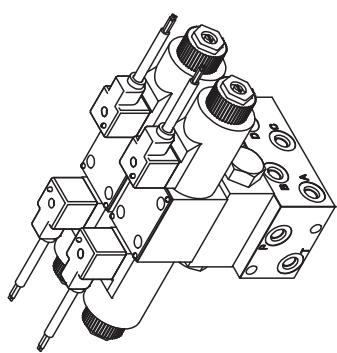

3427159 - Hydraulic Manifold Assembly

| ITEM | PART NO | DESCRIPTION | QTY |
|------|----------------|-------------------------------------|-----|
| 1 | 203531 | DIN CORD W / LED | 4 |
| 2 | 203876 | MOTOR SPOOL VALVE | 2 |
| 3 | 3427160 | HYDRAULIC MANIFOLD | 1 |
| 4 | 0-3336024-0-02 | SANDWICH CHECK VALVE | 2 |
| 5 | F023899 | SKT HD CS #10(.190)-24 X 3.50 | 8 |

Notes:


TABLE OF CONTENTS

| | |
|---|--------|
| SAE Standard Type Fasteners | A - 2 |
| SAE Serrated Type Flange Fasteners | A - 3 |
| Metric Type Fasteners | A - 4 |
| Hydraulic Hoses and Fittings Torque Requirements Table | A - 6 |
| Fractions to Decimal Inch to Millimeters Conversion Table | A - 7 |
| Millimeters to Decimal Inch Conversion Table | A - 7 |
| Inch to Decimal Feet Conversion Table | A - 8 |
| Minutes Degree to Decimal Degree Conversion Table | A - 8 |
| Feet to Meters Conversion Table | A - 9 |
| Meters to Feet Conversion Table | A - 9 |
| Pounds to Kilograms Conversion Table | A - 10 |
| Pounds Per Square Inch to Bar Conversion Table | A - 10 |
| Pounds Per Square Inch to Kilopascals Conversion Table | A - 10 |
| Fahrenheit to Celsius (Centigrade) Conversion Table | A - 11 |
| Miles Per Hour to Kilometers Per Hour Conversion Table | A - 12 |
| U.S. Gallons to Liters Conversion Table | A - 12 |
| Dash Size Conversion Table | A - 12 |

Torque**BOLT TORQUE REQUIREMENTS TABLE
SAE STANDARD TYPE FASTENERS**

The torque values listed below are for standard-type fasteners only. The torque values listed are based on wet and (lubricated) dry conditions. The torque values for 1/4 and 5/16 inch size fasteners are listed in lb-in and N-m torque equivalents. The torque values for all other size fasteners are listed lb-ft and N-m torque equivalents. Use lower grade torque values if bolt and nut have different SAE grades. Manufacturer's SAE grade markings may vary.


STANDARD MARKINGS AND TORQUE SPECIFICATIONS
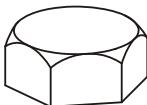
| SAE Grade | 1 or 2 | | | | 5 | | | | 8 | | | |
|--------------------------------------|---|------|-------|------|---|------|-------|------|---|------|-------|------|
| Fastener Standard SAE Grade Markings |  | | | |  | | | |  | | | |
| Fastener Body Size Inch-Thread | Torque | | | | Torque | | | | Torque | | | |
| | Wet | | Dry | | Wet | | Dry | | Wet | | Dry | |
| | lb-in | N-m | lb-in | N-m | lb-in | N-m | lb-in | N-m | lb-in | N-m | lb-in | N-m |
| 1/4 - 20 | 49 | 5.5 | 65 | 7.3 | 75 | 8.5 | 100 | 11.3 | 107 | 12.0 | 142 | 16.0 |
| 1/4 - 28 | 56 | 6.5 | 74 | 8.3 | 86 | 9.7 | 114 | 12.8 | 122 | 13.8 | 162 | 18.3 |
| 5/16 - 18 | 103 | 11.6 | 137 | 15.5 | 157 | 17.7 | 208 | 23.5 | 220 | 24.8 | 293 | 33.1 |
| 5/16 - 24 | 113 | 12.7 | 150 | 16.9 | 173 | 19.5 | 230 | 25.9 | 244 | 27.5 | 325 | 36.7 |
| Fastener Body Size Inch-Thread | Torque | | | | Torque | | | | Torque | | | |
| | Wet | | Dry | | Wet | | Dry | | Wet | | Dry | |
| | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m |
| 3/8 - 16 | 15 | 20 | 20 | 27 | 23 | 31 | 31 | 42 | 32 | 43 | 43 | 58 |
| 3/8 - 24 | 17 | 23 | 23 | 31 | 26 | 35 | 35 | 47 | 37 | 50 | 49 | 66 |
| 7/16 - 14 | 24 | 32 | 32 | 43 | 37 | 50 | 49 | 66 | 52 | 70 | 69 | 93 |
| 7/16 - 20 | 27 | 36 | 36 | 49 | 42 | 57 | 56 | 76 | 58 | 78 | 77 | 104 |
| 1/2 - 13 | 39 | 53 | 52 | 70 | 57 | 77 | 76 | 103 | 80 | 108 | 106 | 144 |
| 1/2 - 20 | 41 | 55 | 55 | 74 | 64 | 87 | 85 | 115 | 90 | 122 | 120 | 163 |
| 9/16 - 12 | 53 | 72 | 71 | 96 | 82 | 111 | 109 | 148 | 115 | 156 | 153 | 207 |
| 9/16 - 18 | 59 | 80 | 78 | 106 | 91 | 123 | 121 | 164 | 129 | 175 | 172 | 233 |
| 5/8 - 11 | 73 | 99 | 97 | 131 | 113 | 155 | 150 | 203 | 160 | 217 | 213 | 289 |
| 5/8 - 18 | 83 | 112 | 110 | 149 | 128 | 173 | 170 | 230 | 180 | 244 | 239 | 324 |
| 3/4 - 10 | 129 | 175 | 172 | 233 | 200 | 271 | 266 | 361 | 282 | 382 | 375 | 508 |
| 3/4 - 16 | 144 | 195 | 192 | 260 | 223 | 302 | 297 | 403 | 315 | 427 | 419 | 568 |
| 7/8 - 9 | 124 | 168 | 165 | 224 | 323 | 438 | 430 | 583 | 454 | 615 | 604 | 819 |
| 7/8 - 14 | 138 | 187 | 184 | 249 | 355 | 481 | 472 | 640 | 501 | 679 | 666 | 903 |
| 1 - 8 | 188 | 255 | 250 | 339 | 483 | 655 | 642 | 870 | 681 | 923 | 906 | 1228 |
| 1 - 14 | 210 | 285 | 279 | 378 | 541 | 733 | 720 | 976 | 764 | 1036 | 1016 | 1377 |
| 1-1/8 - 7 | 266 | 361 | 354 | 480 | 596 | 808 | 793 | 1075 | 966 | 1310 | 1285 | 1742 |
| 1-1/8 - 12 | 297 | 403 | 395 | 535 | 668 | 906 | 888 | 1204 | 1083 | 1468 | 1440 | 1952 |
| 1-1/4 - 7 | 375 | 508 | 499 | 676 | 841 | 1140 | 1119 | 1517 | 1363 | 1848 | 1813 | 2458 |
| 1-1/4 - 12 | 415 | 563 | 552 | 748 | 930 | 1261 | 1237 | 1677 | 1509 | 2046 | 2007 | 2721 |
| 1-3/8 - 6 | 492 | 667 | 654 | 887 | 1102 | 1494 | 1466 | 1988 | 1787 | 2423 | 2377 | 3223 |
| 1-3/8 - 12 | 560 | 759 | 745 | 1010 | 1255 | 1701 | 1670 | 2264 | 2034 | 2758 | 2705 | 3667 |
| 1-1/2 - 6 | 653 | 885 | 868 | 1177 | 1463 | 1983 | 1946 | 2638 | 2371 | 3215 | 3153 | 4275 |
| 1-1/2 - 12 | 734 | 995 | 976 | 1323 | 1645 | 2230 | 2188 | 2966 | 2668 | 3617 | 3548 | 4810 |

Torque**BOLT TORQUE REQUIREMENTS TABLE
SAE SERRATED TYPE FLANGE FASTENERS**

The torque values listed below are for serrated-type flange fasteners only. The torque values listed are based on wet (lubricated) and dry conditions. The torque values for all sizes of fasteners are listed in lb-ft and N-m torque equivalents. Use lower grade torque values if bolt and nut have different SAE grades. Manufacturer's SAE grade markings may vary.

STANDARD MARKINGS AND TORQUE SPECIFICATIONS
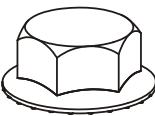
| SAE Grade | 1 or 2 | | | | 5 | | | | |
|--------------------------------------|---|------|-------|------|---|------|-------|------|--|
| Fastener Standard SAE Grade Markings |  | | | |  | | | | |
| Fastener Body Size Inch-Thread | Torque | | | | Torque | | | | |
| | Wet | | Dry | | Wet | | Dry | | |
| | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | |
| 1/4 - 20 | 8 | 10.8 | 11 | 14.9 | 11 | 14.9 | 15 | 20.3 | |
| 1/4 - 28 | 9 | 12.2 | 12 | 16.3 | 12 | 16.3 | 16 | 21.7 | |
| 5/16 - 18 | 13 | 17.6 | 17 | 23.0 | 20 | 27.1 | 27 | 36.6 | |
| 5/16 - 24 | 13 | 17.6 | 17 | 23.0 | 32 | 43.3 | 43 | 58.3 | |
| 3/8 - 16 | 23 | 31 | 31 | 42 | 40 | 54 | 53 | 72 | |
| 3/8 - 24 | 25 | 34 | 33 | 45 | 43 | 58 | 57 | 77 | |
| 7/16 - 14 | 38 | 51 | 51 | 69 | 55 | 74 | 73 | 99 | |
| 7/16 - 20 | 40 | 54 | 53 | 72 | 60 | 81 | 80 | 108 | |
| 1/2 - 13 | 60 | 81 | 80 | 108 | 95 | 129 | 127 | 172 | |
| 1/2 - 20 | 65 | 88 | 87 | 118 | 100 | 135 | 133 | 180 | |
| 9/16 - 12 | 78 | 106 | 104 | 141 | 140 | 190 | 187 | 253 | |
| 9/16 - 18 | 85 | 115 | 113 | 153 | 150 | 203 | 200 | 271 | |
| 5/8 - 11 | 125 | 169 | 167 | 226 | 190 | 258 | 253 | 343 | |
| 5/8 - 18 | 135 | 183 | 180 | 244 | 220 | 298 | 293 | 397 | |
| 3/4 - 10 | 225 | 305 | 300 | 407 | 350 | 474 | 467 | 633 | |
| 3/4 - 16 | 250 | 339 | 333 | 451 | 400 | 542 | 533 | 723 | |
| 7/8 - 9 | 350 | 474 | 467 | 633 | 550 | 746 | 733 | 994 | |
| 7/8 - 14 | 375 | 508 | 500 | 678 | 600 | 813 | 800 | 1085 | |
| 1 - 8 | 480 | 651 | 640 | 868 | 750 | 1017 | 1000 | 1356 | |
| 1 - 14 | 500 | 678 | 666 | 903 | 800 | 1085 | 1066 | 1445 | |

Torque**BOLT TORQUE REQUIREMENTS TABLE
METRIC TYPE FASTENERS**

Do not use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically. Fasteners should be replaced with the same or higher property class. If higher property class fasteners are used, these should only be tightened to the strength of the original. Make sure fastener's threads are clean and that thread engagement is properly started. This will help prevent them from failing when tightening.

* Lubricated means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings.
Dry means plain or zinc plated without any lubrication.




| | | | | | | | | |
|---|---------------------|-------|--------------|-------|-------------------------|-------|--------------|-------|
| Property Class and Head Markings | 4.8 | | | | 8.8 9.8 | | | |
| | | | | | | | | |
| Property Class and Head Markings | 5 | | | | 10 | | | |
| | | | | | | | | |
| Size | Class 4.8 | | | | Class 8.8 or 9.8 | | | |
| | * Lubricated | | * Dry | | * Lubricated | | * Dry | |
| | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft |
| M6 | 4.8 | 3.5 | 6 | 4.5 | 9 | 6.5 | 11 | 8.5 |
| M8 | 12 | 8.5 | 15 | 11 | 22 | 16 | 28 | 20 |
| M10 | 23 | 17 | 29 | 21 | 43 | 32 | 55 | 40 |
| M12 | 40 | 29 | 50 | 37 | 75 | 55 | 95 | 70 |
| M14 | 63 | 47 | 80 | 60 | 120 | 88 | 150 | 110 |
| M16 | 100 | 73 | 125 | 92 | 190 | 140 | 240 | 175 |
| M18 | 135 | 100 | 175 | 125 | 260 | 195 | 330 | 250 |
| M20 | 190 | 140 | 240 | 180 | 375 | 275 | 475 | 350 |
| M22 | 260 | 190 | 330 | 250 | 510 | 375 | 650 | 475 |
| M24 | 330 | 250 | 425 | 310 | 650 | 475 | 825 | 600 |
| M27 | 490 | 360 | 625 | 450 | 950 | 700 | 1200 | 875 |
| M30 | 675 | 490 | 850 | 625 | 1300 | 950 | 1650 | 1200 |
| M33 | 900 | 675 | 1150 | 850 | 1750 | 1300 | 2200 | 1650 |
| M36 | 1150 | 850 | 1450 | 1075 | 2250 | 1650 | 2850 | 2100 |

A

Torque**BOLT TORQUE REQUIREMENTS TABLE
METRIC TYPE FASTENERS**

Do not use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically. Fasteners should be replaced with the same or higher property class. If higher property class fasteners are used, these should only be tightened to the strength of the original. Make sure fastener's threads are clean and that thread engagement is properly started. This will help prevent them from failing when tightening.

* Lubricated means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings.
Dry means plain or zinc plated without any lubrication.
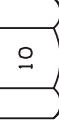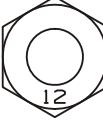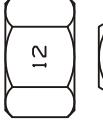
| | | | | | | | | |
|---|--|--|---|--|--|--|--------------|-------|
| Property Class and Head Markings | 10.9 | | | | 12.9 | | | |
| |  |  |  |  |  |  | | |
| Property Class and Head Markings | 10 | | | | 12 | | | |
| |  |  |  |  |  |  | | |
| Size | Class 10.9 | | | | Class 12.9 | | | |
| | * Lubricated | | * Dry | | * Lubricated | | * Dry | |
| | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft | N-m | lb-ft |
| M6 | 13 | 9.5 | 17 | 12 | 15 | 11.5 | 19 | 14.5 |
| M8 | 32 | 24 | 40 | 30 | 37 | 28 | 47 | 35 |
| M10 | 63 | 47 | 80 | 60 | 75 | 55 | 95 | 70 |
| M12 | 110 | 80 | 140 | 105 | 130 | 95 | 165 | 120 |
| M14 | 175 | 130 | 225 | 165 | 205 | 150 | 260 | 190 |
| M16 | 275 | 200 | 350 | 255 | 320 | 240 | 400 | 300 |
| M18 | 375 | 275 | 475 | 350 | 440 | 325 | 560 | 410 |
| M20 | 530 | 400 | 675 | 500 | 625 | 460 | 800 | 580 |
| M22 | 725 | 540 | 925 | 675 | 850 | 625 | 1075 | 800 |
| M24 | 925 | 675 | 1150 | 850 | 1075 | 800 | 1350 | 1000 |
| M27 | 1350 | 1000 | 1700 | 1250 | 1600 | 1150 | 2000 | 1500 |
| M30 | 1850 | 1350 | 2300 | 1700 | 2150 | 1600 | 2700 | 2000 |
| M33 | 2500 | 1850 | 3150 | 2350 | 2900 | 2150 | 3700 | 2750 |
| M36 | 3200 | 2350 | 4050 | 3000 | 3750 | 2750 | 4750 | 3500 |

Torque**HYDRAULIC HOSES AND FITTINGS TORQUE REQUIREMENTS TABLE**

| Straight Thread O-Ring Boss Low Pressure with 37° (SAEJ514) | | | | Straight Thread O-Ring Boss High Pressure with O-Ring Seal (ORS) (J1453) | | | |
|--|----------------------|------------------------------------|---------|---|----------------------|------------------------------------|---------|
| Dash Size | Thread Size (inches) | Jam Nut or Straight Fitting Torque | | Dash Size | Thread Size (inches) | Jam Nut or Straight Fitting Torque | |
| | | lb-ft | N-m | | | lb-ft | N-m |
| -03 | 3/8-24 | 8-9 | 12-13 | -03 | 3/8-24 | 8-10 | 11-13 |
| -04 | 7/16-20 | 13-15 | 18-20 | -04 | 7/16-20 | 14-16 | 20-22 |
| -05 | 1/2-20 | 14-15 | 19-21 | -05 | 1/2-20 | 18-20 | 24-27 |
| -06 | 9/16-18 | 23-24 | 32-33 | -06 | 9/16-18 | 24-26 | 33-35 |
| -08 | 3/4-16 | 40-43 | 55-57 | -08 | 3/4-16 | 50-60 | 68-78 |
| -10 | 7/8-14 | 43-48 | 59-64 | -10 | 7/8-14 | 72-80 | 98-110 |
| -12 | 1-1/16-12 | 68-75 | 93-101 | -12 | 1-1/16-12 | 125-135 | 170-183 |
| -14 | 1-3/16-12 | 83-90 | 113-122 | -14 | 1-3/16-12 | 160-180 | 215-245 |
| -16 | 1-5/16-12 | 112-123 | 152-166 | -16 | 1-5/16-12 | 200-220 | 270-300 |
| -20 | 1-5/8-12 | 146-161 | 198-218 | -20 | 1-5/8-12 | 210-280 | 285-380 |
| -24 | 1-7/8-12 | 154-170 | 209-230 | -24 | 1-7/8-12 | 270-360 | 370-490 |
| -32 | 2-1/2-12 | 218-240 | 296-325 | | | | |

| O-Ring Seal (ORS) | | | | SAE 37° (JIC) | | | |
|-------------------|----------------------|------------|---------|---------------|----------------------|------------|---------|
| Dash Size | Thread Size (inches) | Swivel Nut | | Dash Size | Thread Size (inches) | Swivel Nut | |
| | | lb-ft | N-m | | | lb-ft | N-m |
| -04 | 9/16-18 | 10-12 | 14-16 | -04 | 7/16-20 | 11-12 | 15-16 |
| -06 | 11/16-16 | 18-20 | 24-27 | -05 | 1/2-20 | 15-16 | 20-22 |
| -08 | 13/16-16 | 32-35 | 43-47 | -06 | 9/16-18 | 18-20 | 24-28 |
| -10 | 1-14 | 46-50 | 62-68 | -08 | 3/4-16 | 38-42 | 52-58 |
| -12 | 1-3/16-12 | 65-70 | 88-95 | -10 | 7/8-14 | 57-62 | 77-85 |
| -16 | 1-7/16-12 | 92-100 | 125-136 | -12 | 1-1/16-12 | 79-87 | 108-119 |
| -20 | 1-11/16-12 | 125-140 | 170-190 | -16 | 1-5/16-12 | 108-113 | 148-154 |
| -24 | 2-12 | 150-165 | 204-224 | -20 | 1-5/8-12 | 127-133 | 173-182 |
| | | | | -24 | 1-7/8-12 | 158-167 | 216-227 |
| | | | | -32 | 2-1/2-12 | 245-258 | 334-352 |

A

| Metric | | | British Standard Pipe Parallel (BSPP) | | |
|-------------|------------------------------------|---------|--|------------------------------------|---------|
| Thread Size | Straight Adapter or Locknut Torque | | Thread Size | Straight Adapter or Locknut Torque | |
| mm | lb-ft | N-m | Inches ** | lb-ft | N-m |
| M10 x 1 | 13-15 | 18-20 | G 1/8-28 | 13-15 | 18-20 |
| M12 x 1.5 | 15-19 | 20-25 | G 1/4-19 | 19-23 | 25-30 |
| M14 x 1.5 | 19-23 | 25-30 | G 3/8-19 | 33-40 | 45-55 |
| M16 x 1.5 | 33-40 | 45-55 | G 1/2-14 | 55-70 | 75-95 |
| M18 x 1.5 | 37-44 | 50-60 | G 3/4-14 | 103-118 | 140-160 |
| M20 x 1.5 | 52-66 | 70-90 | G 1-11 | 162-184 | 220-250 |
| M22 x 1.5 | 55-70 | 75-95 | G 1-1/4-11 | 170-192 | 230-260 |
| M26 x 1.5 | 81-96 | 110-130 | G 1-1/2-11 | 258-347 | 350-470 |
| M27 x 2 | 96-111 | 130-150 | ** "G" denotes parallel threads, other than ISO 6149 (Port connection only) | | |
| M33 x 2 | 162-184 | 220-250 | | | |
| M42 x 2 | 170-192 | 230-260 | | | |
| M48 x 2 | 258-347 | 350-470 | | | |

Conversion**FRACTIONS TO DECIMAL INCH TO MILLIMETERS CONVERSION TABLE**
1 INCH = 1.00 DECIMAL = 25.4 MILLIMETERS

| FRACTION | DECIMAL | MILLIMETER | FRACTION | DECIMAL | MILLIMETER |
|------------|---------|------------|------------|---------|------------|
| 1/64 | .02 | 0.40 | 33/64 | .52 | 13.10 |
| 1/32 | .03 | 0.79 | 17/32 | .53 | 13.50 |
| 3/64 | .05 | 1.19 | 35/64 | .55 | 13.89 |
| 1/16 | .06 | 1.59 | 9/16 | .56 | 14.29 |
| 5/64 | .08 | 1.98 | 37/64 | .58 | 14.68 |
| 3/32 | .09 | 2.38 | 19/32 | .59 | 15.08 |
| 7/64 | .11 | 2.78 | 39/64 | .61 | 15.48 |
| 1/8 | .13 | 3.18 | 5/8 | .63 | 15.88 |
| 9/64 | .14 | 3.57 | 41/64 | .64 | 16.27 |
| 5/32 | .16 | 3.97 | 21/32 | .66 | 16.67 |
| 11/64 | .17 | 4.37 | 43/64 | .67 | 17.07 |
| 3/16 | .19 | 4.76 | 11/16 | .69 | 17.46 |
| 13/64 | .20 | 5.16 | 45/64 | .70 | 17.86 |
| 7/32 | .22 | 5.56 | 23/32 | .72 | 18.26 |
| 15/64 | .23 | 5.95 | 47/64 | .73 | 18.65 |
| 1/4 or 2/8 | .25 | 6.35 | 3/4 or 6/8 | .75 | 19.05 |
| 17/64 | .27 | 6.75 | 49/64 | .77 | 19.45 |
| 9/32 | .28 | 7.14 | 25/32 | .78 | 19.85 |
| 19/64 | .30 | 7.54 | 51/64 | .80 | 20.24 |
| 5/16 | .31 | 7.94 | 13/16 | .81 | 20.64 |
| 21/64 | .33 | 8.33 | 53/64 | .83 | 21.03 |
| 11/32 | .34 | 8.73 | 27/32 | .84 | 21.43 |
| 23/64 | .36 | 9.13 | 55/64 | .86 | 21.83 |
| 3/8 | .38 | 9.52 | 7/8 | .88 | 22.23 |
| 25/64 | .39 | 9.92 | 57/64 | .89 | 22.62 |
| 13/32 | .41 | 10.32 | 29/32 | .91 | 23.02 |
| 27/64 | .42 | 10.72 | 59/64 | .92 | 23.42 |
| 7/16 | .44 | 11.11 | 15/16 | .94 | 23.81 |
| 29/64 | .45 | 11.51 | 61/64 | .95 | 24.21 |
| 15/32 | .47 | 11.91 | 31/32 | .97 | 24.61 |
| 31/64 | .48 | 12.30 | 63/64 | .98 | 25.00 |
| 1/2 or 4/8 | .50 | 12.70 | 1 | 1.00 | 25.40 |

MILLIMETERS TO DECIMAL INCH CONVERSION TABLE
1 MILLIMETER = 0.04 INCH

| MILLIMETERS | INCH | MILLIMETERS | INCH | MILLIMETERS | INCH |
|-------------|------|-------------|------|-------------|-------|
| 1 | 0.04 | 10 | 0.39 | 100 | 3.94 |
| 2 | 0.08 | 20 | 0.79 | 200 | 7.87 |
| 3 | 0.12 | 30 | 1.18 | 300 | 11.81 |
| 4 | 0.16 | 40 | 1.57 | 400 | 15.75 |
| 5 | 0.20 | 50 | 1.97 | 500 | 19.69 |
| 6 | 0.24 | 60 | 2.36 | 600 | 23.62 |
| 7 | 0.28 | 70 | 2.76 | 700 | 27.56 |
| 8 | 0.31 | 80 | 3.15 | 800 | 31.50 |
| 9 | 0.35 | 90 | 3.54 | 900 | 35.43 |
| 10 | 0.39 | 100 | 3.94 | 1000 | 39.37 |

Conversion**INCH TO DECIMAL FEET CONVERSION TABLE**
1 INCH = 0.0833 DECIMAL FEET

| FRACTION | DECIMAL | INCH | DECIMAL |
|----------|---------|------|---------|
| 1/8 | 0.01 | 1 | 0.08 |
| 1/4 | 0.02 | 2 | 0.17 |
| 3/8 | 0.03 | 3 | 0.25 |
| 1/2 | 0.04 | 4 | 0.33 |
| 5/8 | 0.05 | 5 | 0.42 |
| 3/4 | 0.06 | 6 | 0.50 |
| 7/8 | 0.07 | 7 | 0.58 |
| 1 | 0.08 | 8 | 0.67 |
| | | 9 | 0.75 |
| | | 10 | 0.83 |
| | | 11 | 0.92 |
| | | 12 | 1.00 |

MINUTES DEGREE TO DECIMAL DEGREE CONVERSION TABLE
1 MINUTE DEGREE = 0.017 DECIMAL DEGREE

| MINUTE | DECIMAL | MINUTE | DECIMAL | MINUTE | DECIMAL | MINUTE | DECIMAL |
|--------|---------|--------|---------|--------|---------|--------|---------|
| 1 | 0.02 | 16 | 0.27 | 31 | 0.52 | 46 | 0.77 |
| 2 | 0.03 | 17 | 0.28 | 32 | 0.53 | 47 | 0.79 |
| 3 | 0.05 | 18 | 0.30 | 33 | 0.55 | 48 | 0.80 |
| 4 | 0.07 | 19 | 0.32 | 34 | 0.57 | 49 | 0.82 |
| 5 | 0.08 | 20 | 0.33 | 35 | 0.58 | 50 | 0.83 |
| 6 | 0.10 | 21 | 0.35 | 36 | 0.60 | 51 | 0.85 |
| 7 | 0.12 | 22 | 0.37 | 37 | 0.62 | 52 | 0.87 |
| 8 | 0.13 | 23 | 0.38 | 38 | 0.63 | 53 | 0.88 |
| 9 | 0.15 | 24 | 0.40 | 39 | 0.65 | 54 | 0.90 |
| 10 | 0.17 | 25 | 0.42 | 40 | 0.67 | 55 | 0.92 |
| 11 | 0.18 | 26 | 0.43 | 41 | 0.68 | 56 | 0.93 |
| 12 | 0.20 | 27 | 0.45 | 42 | 0.70 | 57 | 0.95 |
| 13 | 0.22 | 28 | 0.47 | 43 | 0.72 | 58 | 0.97 |
| 14 | 0.23 | 29 | 0.48 | 44 | 0.73 | 59 | 0.98 |
| 15 | 0.25 | 30 | 0.50 | 45 | 0.75 | 60 | 1.00 |

Conversion**FEET TO METERS CONVERSION TABLE**
1 FOOT = 0.3048 METER

| FOOT | METER | FEET | METER | FEET | METER | FEET | METER |
|------|-------|------|-------|------|-------|-------|--------|
| 0.1 | 0.03 | 1 | 0.31 | 10 | 3.05 | 100 | 30.48 |
| 0.2 | 0.06 | 2 | 0.61 | 20 | 6.10 | 200 | 60.96 |
| 0.3 | 0.09 | 3 | 0.91 | 30 | 9.14 | 300 | 91.44 |
| 0.4 | 0.12 | 4 | 1.22 | 40 | 12.19 | 400 | 121.92 |
| 0.5 | 0.15 | 5 | 1.52 | 50 | 15.24 | 500 | 152.40 |
| 0.6 | 0.18 | 6 | 1.83 | 60 | 18.29 | 600 | 182.88 |
| 0.7 | 0.21 | 7 | 2.13 | 70 | 21.34 | 700 | 213.36 |
| 0.8 | 0.24 | 8 | 2.44 | 80 | 24.38 | 800 | 243.84 |
| 0.9 | 0.27 | 9 | 2.74 | 90 | 27.43 | 900 | 274.32 |
| 1.0 | 0.31 | 10 | 3.05 | 100 | 30.48 | 1,000 | 304.80 |

METERS TO FEET CONVERSION TABLE
1 METER = 3.2808 FEET

| METER | FOOT | METER | FEET | METER | FEET | METER | FEET |
|-------|------|-------|-------|-------|-------|-------|---------|
| 0.1 | 0.33 | 1 | 3.28 | 10 | 32.8 | 100 | 328.1 |
| 0.2 | 0.66 | 2 | 6.56 | 20 | 65.6 | 200 | 656.2 |
| 0.3 | 0.98 | 3 | 9.84 | 30 | 98.4 | 300 | 984.2 |
| 0.4 | 1.31 | 4 | 13.12 | 40 | 131.2 | 400 | 1,312.3 |
| 0.5 | 1.64 | 5 | 16.40 | 50 | 164.0 | 500 | 1,640.4 |
| 0.6 | 1.97 | 6 | 19.68 | 60 | 196.8 | 600 | 1,968.5 |
| 0.7 | 2.29 | 7 | 22.97 | 70 | 229.7 | 700 | 2,296.6 |
| 0.8 | 2.62 | 8 | 26.25 | 80 | 262.5 | 800 | 2,624.7 |
| 0.9 | 2.95 | 9 | 29.53 | 90 | 295.3 | 900 | 2,952.7 |
| 1.0 | 3.28 | 10 | 32.80 | 100 | 328.1 | 1,000 | 3,280.9 |

Conversion**POUNDS TO KILOGRAMS CONVERSION TABLE**
1 POUND = 0.4536 KILOGRAM

| LB | KG | LB | KG | LB | KG | LB | KG | LB | KG |
|--------|----------|-------|--------|-----|-------|----|------|-----|------|
| 1,000 | 453.59 | 100 | 45.36 | 10 | 4.54 | 1 | 0.45 | 0.1 | 0.05 |
| 2,000 | 907.18 | 200 | 90.72 | 20 | 9.07 | 2 | 0.91 | 0.2 | 0.09 |
| 3,000 | 1,360.78 | 300 | 136.08 | 30 | 13.61 | 3 | 1.36 | 0.3 | 0.14 |
| 4,000 | 1,814.37 | 400 | 181.44 | 40 | 18.14 | 4 | 1.81 | 0.4 | 0.18 |
| 5,000 | 2,267.96 | 500 | 226.80 | 50 | 22.68 | 5 | 2.27 | 0.5 | 0.23 |
| 6,000 | 2,721.55 | 600 | 272.16 | 60 | 27.22 | 6 | 2.72 | 0.6 | 0.27 |
| 7,000 | 3,175.15 | 700 | 317.51 | 70 | 31.75 | 7 | 3.18 | 0.7 | 0.32 |
| 8,000 | 3,628.74 | 800 | 362.87 | 80 | 36.29 | 8 | 3.63 | 0.8 | 0.36 |
| 9,000 | 4,082.33 | 900 | 408.23 | 90 | 40.82 | 9 | 4.08 | 0.9 | 0.41 |
| 10,000 | 4,535.92 | 1,000 | 453.59 | 100 | 45.36 | 10 | 4.54 | 1.0 | 0.45 |

POUNDS PER SQUARE INCH TO BAR CONVERSION TABLE
1 PSI = 0.06895 BAR

| PSI | BAR | PSI | BAR | PSI | BAR | PSI | BAR |
|--------|--------|-------|-------|-----|------|-----|------|
| 1,000 | 68.95 | 100 | 6.90 | 10 | 0.69 | 1 | 0.07 |
| 2,000 | 137.90 | 200 | 13.79 | 20 | 1.38 | 2 | 0.14 |
| 3,000 | 206.84 | 300 | 20.68 | 30 | 2.07 | 3 | 0.21 |
| 4,000 | 275.80 | 400 | 27.58 | 40 | 2.76 | 4 | 0.28 |
| 5,000 | 344.70 | 500 | 34.47 | 50 | 3.45 | 5 | 0.35 |
| 6,000 | 413.64 | 600 | 41.36 | 60 | 4.14 | 6 | 0.41 |
| 7,000 | 482.58 | 700 | 48.26 | 70 | 4.83 | 7 | 0.48 |
| 8,000 | 551.52 | 800 | 55.15 | 80 | 5.52 | 8 | 0.55 |
| 9,000 | 620.46 | 900 | 62.05 | 90 | 6.21 | 9 | 0.62 |
| 10,000 | 689.48 | 1,000 | 68.95 | 100 | 6.90 | 10 | 0.69 |

A**POUNDS PER SQUARE INCH TO KILOPASCALS CONVERSION TABLE**
1 PSI = 6.895 kPa

| PSI | kPa | PSI | kPa |
|-----|-------|-----|--------|
| 1 | 6.90 | 10 | 68.95 |
| 2 | 13.79 | 20 | 137.90 |
| 3 | 20.68 | 30 | 206.84 |
| 4 | 27.58 | 40 | 275.80 |
| 5 | 34.47 | 50 | 344.70 |
| 6 | 41.36 | 60 | 413.64 |
| 7 | 48.26 | 70 | 482.58 |
| 8 | 55.15 | 80 | 551.52 |
| 9 | 62.05 | 90 | 620.46 |
| 10 | 68.95 | 100 | 689.48 |

Conversion**FAHRENHEIT TO CELSIUS (Centigrade) CONVERSION TABLE
(DEGREES F - 32°) ÷ 1.8 = DEGREES C**

| deg F | deg C |
|-------|-------|-------|-------|-------|-------|-------|-------|
| 1 | -17.2 | 51 | 10.6 | 101 | 38.3 | 151 | 66.1 |
| 2 | -16.7 | 52 | 11.1 | 102 | 38.9 | 152 | 66.7 |
| 3 | -16.1 | 53 | 11.7 | 103 | 39.4 | 153 | 67.2 |
| 4 | -15.6 | 54 | 12.2 | 104 | 40.0 | 154 | 67.8 |
| 5 | -15.0 | 55 | 12.8 | 105 | 40.6 | 155 | 68.3 |
| 6 | -14.4 | 56 | 13.3 | 106 | 41.1 | 156 | 68.9 |
| 7 | -13.9 | 57 | 13.9 | 107 | 41.7 | 157 | 69.4 |
| 8 | -13.3 | 58 | 14.4 | 108 | 42.2 | 158 | 70.0 |
| 9 | -12.8 | 59 | 15.0 | 109 | 42.8 | 159 | 70.6 |
| 10 | -12.2 | 60 | 15.6 | 110 | 43.3 | 160 | 71.1 |
| 11 | -11.7 | 61 | 16.1 | 111 | 43.9 | 161 | 71.7 |
| 12 | -11.1 | 62 | 16.7 | 112 | 44.4 | 162 | 72.2 |
| 13 | -10.6 | 63 | 17.2 | 113 | 45.0 | 163 | 72.8 |
| 14 | -10.0 | 64 | 17.8 | 114 | 45.6 | 164 | 73.3 |
| 15 | -9.4 | 65 | 18.3 | 115 | 46.1 | 165 | 73.9 |
| 16 | -8.9 | 66 | 18.9 | 116 | 46.7 | 166 | 74.4 |
| 17 | -8.3 | 67 | 19.4 | 117 | 47.2 | 167 | 75.0 |
| 18 | -7.8 | 68 | 20.0 | 118 | 47.8 | 168 | 75.6 |
| 19 | -7.2 | 69 | 20.6 | 119 | 48.3 | 169 | 76.1 |
| 20 | -6.7 | 70 | 21.1 | 120 | 48.9 | 170 | 76.7 |
| 21 | -6.1 | 71 | 21.7 | 121 | 49.4 | 171 | 77.2 |
| 22 | -5.6 | 72 | 22.2 | 122 | 50.0 | 172 | 77.8 |
| 23 | -5.0 | 73 | 22.8 | 123 | 50.6 | 173 | 78.3 |
| 24 | -4.4 | 74 | 23.3 | 124 | 51.1 | 174 | 78.9 |
| 25 | -3.9 | 75 | 23.9 | 125 | 51.7 | 175 | 79.4 |
| 26 | -3.3 | 76 | 24.4 | 126 | 52.2 | 176 | 80.0 |
| 27 | -2.8 | 77 | 25.0 | 127 | 52.8 | 177 | 80.6 |
| 28 | -2.2 | 78 | 25.6 | 128 | 53.3 | 178 | 81.1 |
| 29 | -1.7 | 79 | 26.1 | 129 | 53.9 | 179 | 81.7 |
| 30 | -1.1 | 80 | 26.7 | 130 | 54.4 | 180 | 82.2 |
| 31 | -0.6 | 81 | 27.2 | 131 | 55.0 | 181 | 82.8 |
| 32 | 0.0 | 82 | 27.8 | 132 | 55.6 | 182 | 83.3 |
| 33 | 0.6 | 83 | 28.3 | 133 | 56.1 | 183 | 83.9 |
| 34 | 1.1 | 84 | 28.9 | 134 | 56.7 | 184 | 84.4 |
| 35 | 1.7 | 85 | 29.4 | 135 | 57.2 | 185 | 85.0 |
| 36 | 2.2 | 86 | 30.0 | 136 | 57.8 | 186 | 85.6 |
| 37 | 2.7 | 87 | 30.6 | 137 | 58.3 | 187 | 86.1 |
| 38 | 3.3 | 88 | 31.1 | 138 | 58.9 | 188 | 86.7 |
| 39 | 3.9 | 89 | 31.7 | 139 | 59.4 | 189 | 87.2 |
| 40 | 4.4 | 90 | 32.2 | 140 | 60.0 | 190 | 87.8 |
| 41 | 5.0 | 91 | 32.8 | 141 | 60.6 | 191 | 88.3 |
| 42 | 5.6 | 92 | 33.3 | 142 | 61.1 | 192 | 88.9 |
| 43 | 6.1 | 93 | 33.9 | 143 | 61.7 | 193 | 89.4 |
| 44 | 6.7 | 94 | 34.4 | 144 | 62.2 | 194 | 90.0 |
| 45 | 7.2 | 95 | 35.0 | 145 | 62.8 | 195 | 90.6 |
| 46 | 7.8 | 96 | 35.6 | 146 | 63.3 | 196 | 91.1 |
| 47 | 8.3 | 97 | 36.1 | 147 | 63.9 | 197 | 91.7 |
| 48 | 8.9 | 98 | 36.7 | 148 | 64.4 | 198 | 92.2 |
| 49 | 9.4 | 99 | 37.2 | 149 | 65.0 | 199 | 92.8 |
| 50 | 10.0 | 100 | 37.8 | 150 | 65.5 | 200 | 93.3 |

Conversion**MILES PER HOUR TO KILOMETERS PER HOUR CONVERSION TABLE**
1 MPH = 1.609 KM/H

| MPH | KM/H | MPH | KM/H | MPH | KM/H |
|-----|--------|-----|-------|-----|------|
| 10 | 16.09 | 1 | 1.61 | 0.1 | 0.16 |
| 20 | 32.19 | 2 | 3.22 | 0.2 | 0.32 |
| 30 | 48.28 | 3 | 4.83 | .03 | 0.48 |
| 40 | 64.37 | 4 | 6.44 | 0.4 | 0.64 |
| 50 | 80.47 | 5 | 8.05 | 0.5 | 0.80 |
| 60 | 96.56 | 6 | 9.66 | 0.6 | 0.97 |
| 70 | 112.65 | 7 | 11.27 | 0.7 | 1.13 |
| 80 | 128.75 | 8 | 12.87 | 0.8 | 1.29 |
| 90 | 144.84 | 9 | 14.48 | 0.9 | 1.45 |
| 100 | 160.93 | 10 | 16.09 | 1.0 | 1.61 |

U.S. GALLONS TO LITERS CONVERSION TABLE
1 U.S. GALLON = 3.785 LITERS

| GAL | LITER | GAL | LITER | GAL | LITER | GAL | LITER |
|-------|----------|-----|--------|-----|-------|-----|-------|
| 100 | 378.54 | 10 | 37.85 | 1 | 3.79 | 0.1 | 0.38 |
| 200 | 757.08 | 20 | 75.71 | 2 | 7.57 | 0.2 | 0.76 |
| 300 | 1,135.62 | 30 | 113.56 | 3 | 11.36 | 0.3 | 1.14 |
| 400 | 1,514.16 | 40 | 151.42 | 4 | 15.14 | 0.4 | 1.51 |
| 500 | 1,892.71 | 50 | 189.27 | 5 | 18.93 | 0.5 | 1.89 |
| 600 | 2,271.25 | 60 | 227.12 | 6 | 22.71 | 0.6 | 2.27 |
| 700 | 2,649.79 | 70 | 264.98 | 7 | 26.50 | 0.7 | 2.65 |
| 800 | 3,028.33 | 80 | 302.83 | 8 | 30.28 | 0.8 | 3.03 |
| 900 | 3,406.87 | 90 | 340.69 | 9 | 34.07 | 0.9 | 3.41 |
| 1,000 | 3,785.41 | 100 | 378.54 | 10 | 37.85 | 1.0 | 3.79 |

A**DASH SIZE CONVERSION TABLE**
-3 DASH SIZE = 3/16 INCH

| DASH SIZE | INCHES | MILLIMETERS | DASH SIZE | INCH | MILLIMETERS |
|-----------|--------|-------------|-----------|-------|-------------|
| -3 | 3/16 | 5 | -12 | 3/4 | 19 |
| -4 | 1/4 | 6.3 | -16 | 1 | 1/2 |
| -5 | 5/16 | 8 | -20 | 1-1/4 | 31.5 |
| -6 | 3/8 | 10 | -24 | 1-1/2 | 38 |
| -8 | 1/2 | 12.5 | -32 | 2 | 51 |
| -10 | 5/8 | 16 | -40 | 2-1/2 | 63 |

APPENDIX RR - REVISION RECORD

| CHANGE | REV | REVISION DESCRIPTION | BY | DATE |
|----------|-----|---|-----|-----------|
| - | A | NEW RELEASE | BJG | 07 - 2012 |
| EC605122 | B | LEGACY MANUAL UPLOAD FROM NETWORK FOLDER TO TC & TO RELEASE IN R-VIEW | CBA | 01-2018 |
| EC605428 | C | REMOVE DUPLICATE SECTION 6 | SP | 02-2018 |
| EC616458 | D | UPDATED THE MANUAL WITH LATEST VERSION OF 3421716, 3421717, 3421723 AND 3421724 RAIL GEAR UNITS WITH ITS SUB-ASSEMBLIES. REMOVED SECTION 7, VEHICLE APPLICATIONS FROM THIS MANUAL AND ADDED IN MANUAL 5130122. UPDATED FRONT AND REAR COVER PAGE. | MBK | 12 - 2021 |
| EC621874 | E | ADDED STATEMENT DESCRIBING HY-RAIL APPLICATION TO VEHICLES WITH GVWR UNDER 14,000 LB AT SECTION 1.5.1. EDITED TIRE INFLATION RECOMMENDATIONS AT SECTIONS 2.2, 3.1.1, 4.2, 4.5.2, AND 5.1. UPDATED HYDRAULIC POWER PACK GROUP DRAWINGS AND PARTS LISTS TO LATEST ENGINEERING RELEASES. REMOVED APPENDIX B - SAE J1273 HOSE STANDARD. | KLN | 11 - 2025 |
| | | | | |
| | | | | |

APPENDIX RR - NOTES

RR

LIMITED WARRANTY

Harsco Rail, LLC, warrants products of its manufacture to be free of defects in material and workmanship, under normal use and service for a period of six (6) months from date of delivery to the original user. The obligation of Harsco Rail, LLC, under this warranty is limited to repairing or replacing at its factories, or other location designated by it, any part or parts thereof which are returned within 30 days of the date when failure occurs or defect is noted, with transportation charges prepaid, and which upon examination appears to the satisfaction of Harsco Rail, LLC, to have been defective. Such free repair or replacement does not include transportation charges, or the cost of installing the new part or any other expense incident thereto. Harsco Rail will not be liable for other loss, damage, or expense directly or indirectly arising from the use of its product, nor will Harsco Rail, LLC, be liable for special, incidental, or consequential damages.

Ordinary wear and tear, and damage from abuse, misuse, neglect or alteration are not covered by this warranty. Harsco Rail, LLC assumes no liability for expense incurred or repairs made outside its factories except by written consent. This warranty is null and void if instructions and operating procedures are not followed.

Equipment and parts not manufactured by Harsco Rail, LLC, but which are furnished in connection with Harsco Rail, LLC, products, are covered directly by the warranty of the manufacturer supplying them. However, Harsco Rail, LLC, will assist in obtaining adjustment on such equipment or parts when necessary.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED AND OF ANY OTHER OBLIGATION OR LIABILITY OF HARSCO RAIL, LLC. THE REMEDY SET FORTH ABOVE IS BUYER'S EXCLUSIVE REMEDY FOR A BREACH OF THE WARRANTY. UNDER NO CIRCUMSTANCES WILL HARSCO RAIL, LLC, BE RESPONSIBLE FOR INCIDENTAL, CONSEQUENTIAL, SPECIAL OR OTHER INDIRECT DAMAGES.

INDEMNITY

Buyer agrees to indemnify and hold Harsco Rail, LLC, harmless for all loss, cost including but not limited to legal and other cost of proceedings, and damages suffered by Buyer or claimed by third parties by or related to Buyer's use of Harsco Rail, LLC's products.

PRODUCT IMPROVEMENT LIABILITY DISCLAIMER

Harsco Rail, LLC, reserves the right to make any changes in or improvements to its products without incurring any liability or obligation whatsoever and without being required to make any corresponding changes or improvements to products previously manufactured or sold.

HAZARDOUS MATERIAL DISCLAIMER

The parts/assemblies that are used in this Product are classified as "articles" according to 29 CFR 1910.1200 (C). They are formed to a specific shape or design during manufacture, have end use function dependent upon their shape or design, and do not release any hazardous chemical under normal conditions of use. Accordingly, we are not required to supply Safety Data Sheets (SDS) or to label shipping containers for "articles". However, lubricants, liquids, gaseous chemicals and solids used in operation or maintenance of the product may require that user's take occupational protective measures. SDS sheets for such materials will be supplied, upon request, to your Purchasing Manager/Safety Director to be used in your employee safety training education and environmental health training.

HARSCO RAIL, LLC
2401 Edmund Road, Box 20
Cayce-West Columbia, SC 29171-0020 U.S.A.



| | | | | |
|----------|------|----------|---------|-----------|
| BULLETIN | 1587 | EC621874 | ISSUED | 07 - 2012 |
| REVISION | E | | REVISED | 11 - 2025 |